


SHARP SERVICE MANUAL

No.S7861CDC482//

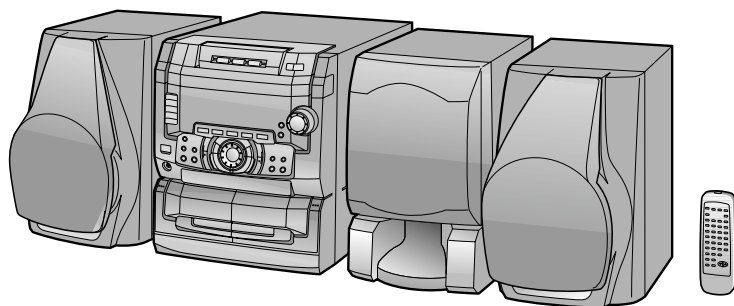

CD-C482

CD-C482 mini component system consisting of
CD-C482 mini component system,
CP-C482 and CP-SW482 speaker system.



Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic" and the double-D symbol are trademarks
of Dolby Laboratories. Confidential Unpublished Works.
©1992-1997 Dolby Laboratories, Inc. All rights reserved.



- QSound and the QLogo are registered trademarks of QSound Labs, Inc.
- QSound is protected under US Patent Nos. 5,105,462 and 5,208,860 and foreign counterparts.

- In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified be used.

This Service Manual is for the CD-C482, which is a minormodification model of the CD-C492, This manual, therefore, describes only the changed points from the service manual. Please refer to the CD-C492, service manual (No. S5829CDC492//) together with this manual.

CD-C492

	Page
REMOVING AND REINSTALLING THE MAIN PARTS	15
ADJUSTMENT	16
WAVEFORMS OF MD CIRCUIT	20
TROUBLESHOOTING	55
FUNCTION TABLE OF IC	59
FL DISPLAY	70

CONTENTS

	Page
IMPORTANT SERVICE NOTES	2
SPECIFICATIONS	3
NAMES OF PARTS	4
OPERATION MANUAL	7
QUICK GUIDE	8
DISASSEMBLY	11
NOTES ON SCHEMATIC DIAGRAM	14
BLOCK DIAGRAM	15
SCHEMATIC DIAGRAM / WIRING SIDE OF P.W.BOARD	20
REPLACEMENT PARTS LIST/EXPLODED VIEW	
PACKING OF THE SET	

FOR A COMPLETE DESCRIPTION OF THE OPERATION OF THIS UNIT, PLEASE REFER TO THE OPERATION MANUAL.


IMPORTANT SERVICE NOTES

BEFORE RETURNING THE AUDIO PRODUCT

(Fire & Shock Hazard)

Before returning the audio product to the user, perform the following safety checks.


1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the audio product.
2. Inspect all protective devices such as insulating materials, cabinet, terminal board, adjustment and compartment covers or shields, mechanical insulators etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - * Plug the AC line cord directly into a 120 volt AC outlet.
 - * Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as conduit or electrical ground connected to earth ground.
 - * Use a VTVM or VOM with 1000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor (See diagram).
 - * Connect the resistor connection to all exposed metal parts having a return path to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.

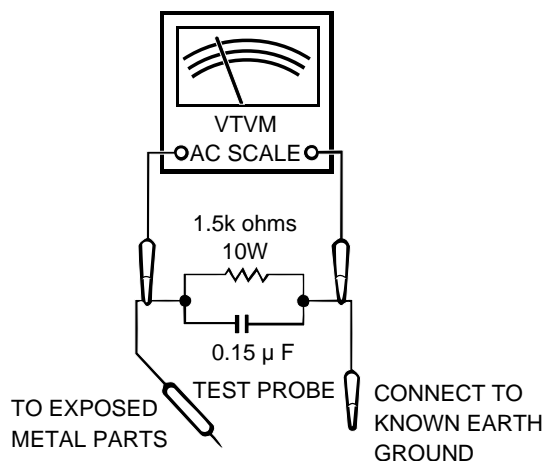


All check must be repeated with the AC line cord plug connection reversed.

Any reading of 0.3 volt RMS (this corresponds to 0.2 milliamp. AC.) or more is excessive and indicates a potential shock hazard which must be corrected before returning the audio product to the owner.


ACCESSORIES

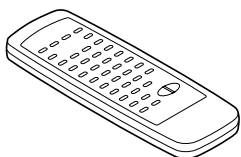


Remote control × 1
(RRMCG0141AWSA)

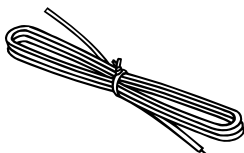


FM antenna × 1
(92LFANT1746A)

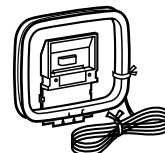


AM loop antenna × 1
(QANTL0006AWZZ)



Front speaker wire × 2
(92L3191SW49210)



(92L3191SW49210)



Sub woofer wire × 1
(92L3191SW49210)

SPECIFICATIONS

CD-C482

● General

Power source: AC 120 V, 60 Hz
Power consumption: 120 W
Dimensions: Width; 10-5/8" (270 mm)
 Height; 12-1/2" (316 mm)
 Depth; 13-1/2" (343 mm)
Weight: 22.3 lbs. (10.1 kg)

● Amplifier section

Output power: Front speakers; 50 W minimum RMS per channel into 8 ohms, from 60 Hz to 20 kHz with no more than 10 % total harmonic distortion.
 Sub woofer; 50 W (80 Hz, 10 % T.H.D.)
Output terminals: Front speakers; 8 ohms
 Sub woofer; 8 ohms
 Monitor; 1 Vp-p/75 ohms
 PRE OUT; 500 mV/47 kohms
 Front Left Speaker
 Front Right Speaker
 Surround Left Speaker
 Surround Right Speaker
 Center Speaker
 Sub Woofer
 Headphones; 16 - 50 ohms (recommended; 32 ohms)
Input terminals: DVD 1 (Digital); Optical
 DVD 2 (Digital); Coaxial
 VCR 1/AUX 1; 500 mV/47 kohms
 VCR 2/AUX 2; 500 mV/47 kohms
 DVD 1/VCR 1; 1 Vp-p/75 ohms
 DVD 2/VCR 2; 1 Vp-p/75 ohms

● Tuner section

Frequency range: FM; 87.5 - 108 MHz
 AM; 530 - 1,720 kHz

● Cassette deck section

Frequency response: 50 - 14,000 Hz (Normal tape)
Signal/noise ratio: 55 dB (TAPE 1, playback)
 50 dB (TAPE 2, recording/playback)
Wow and flutter: 0.15 % (WRMS)

● Compact disc player section

Type: 3-disc multi-play compact disc player
Signal readout: Non-contact, 3-beam semi-conductor laser pickup
D/A converter: 1-bit D/A converter
Frequency response: 20 - 20,000 Hz
Dynamic range: 100 dB (1 kHz)

CP-C482

● Front speaker section

Type: 3-way, 5-1/8" (130 mm) woofer, 2" (50 mm) tweeter and super tweeter
Maximum input power: 100 W
Impedance: 8 ohms
Dimensions: Width; 8-11/16" (220 mm)
 Height; 12-1/2" (316 mm)
 Depth; 11-3/16" (284 mm)
Weight: 7.5 lbs. (3.4 kg)/each

CP-SW482

● Sub woofer section

Type: 6-1/2" (160 mm) woofer
Maximum input power: 100 W
Impedance: 8 ohms
Dimensions: Width; 8-11/16" (220 mm)
 Height; 12-1/2" (316 mm)
 Depth; 11-5/8" (294 mm)
Weight: 8.4 lbs. (3.8 kg)





Specifications for this model are subject to change without prior notice.

NAMES OF PARTS

CD-C482


■ Front panel

1. Disc Tray
2. Disc Number Selector Buttons
3. Disc Skip Button
4. Open/Close Button: ▲
5. Function Selector Buttons
6. Extra Bass Button
7. Volume Control
8. Power Button
9. Headphone Socket
10. Surround Mode Selector Buttons
11. Equalizer Selector/Demo Mode Button
12. Clock Button
13. Sleep Button
14. Reverse Mode Button: (↺)
15. CD Pause Button: ■■
16. Jog Dial
17. (CD/TAPE) Stop Button: ■
18. Record Pause Button: ●■■
19. Menu Button
20. Item Button
21. Timer Button
22. Memory Button
23. Clear Button
24. (CD) Track Down/Review Button: ◀◀/|◀◀
(TAPE 2) Fast Wind Button: ◀◀
(TUNER) Tuning Down Button: ∨
25. (TAPE 2) Reverse Play Button: ◀
26. (CD) Play/Repeat Button: ▶▶
(TAPE 1) Play button: ▶
(TAPE 2) Forward Play Button: ▶▶
27. (CD) Track Up/Cue Button: ▶▶/▶▶▶
(TAPE) Fast Wind Button: ▶▶▶
(TUNER) Tuning Up Button: ∧
28. (TAPE) Normal Edit Button
29. (TAPE) High Edit Button
30. (TAPE 1) Cassette Compartment
31. (TAPE 2) Cassette Compartment

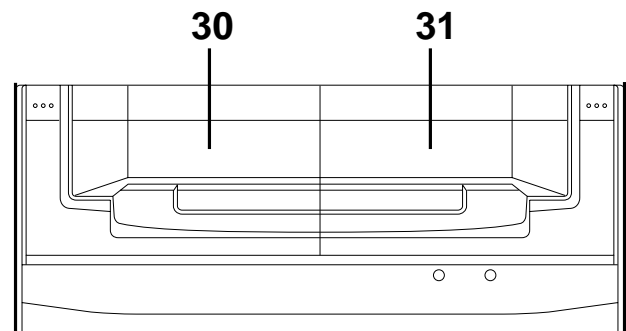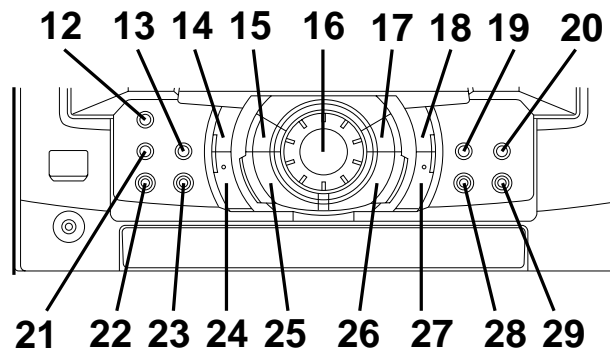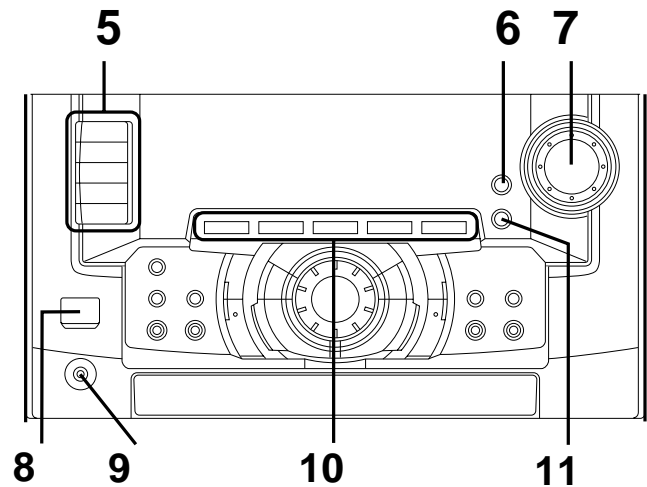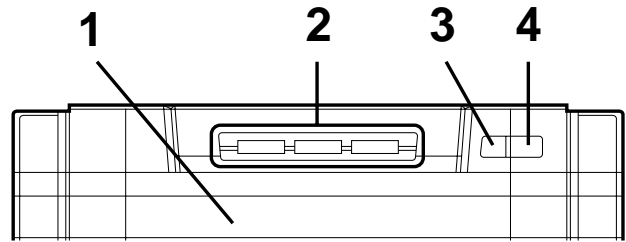


■ Rear panel

1. DVD 1 Digital Input Socket (Optical)
2. DVD 2 Digital Input Socket (Coaxial)
3. DVD 1/VCR 1 Video Input Socket
4. DVD 2/VCR 2 Video Input Socket
5. Video Output Socket
6. CD Digital Output Socket (Optical)
7. VCR 1/AUX 1 Input Socket
8. VCR 2/AUX 2 Input Socket

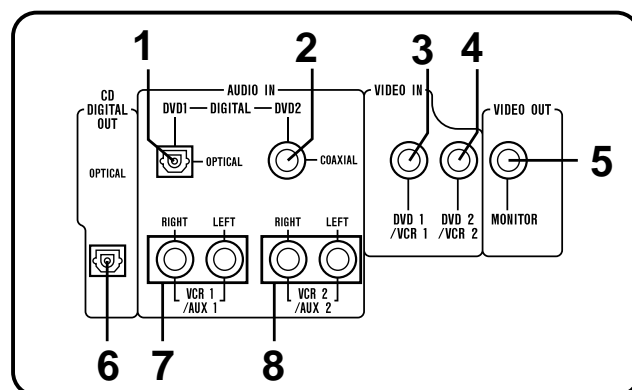


9. FM 75 ohms Aerial Terminal
10. Aerial Earth Terminal
11. AM Aerial Terminal
12. AC Power Lead
13. Front Speaker Terminals
14. Sub Woofer Terminals
15. Front Speaker Output Socket
16. Surround Speaker Output Socket
17. Center Speaker Output Socket
18. Sub Woofer Output Socket

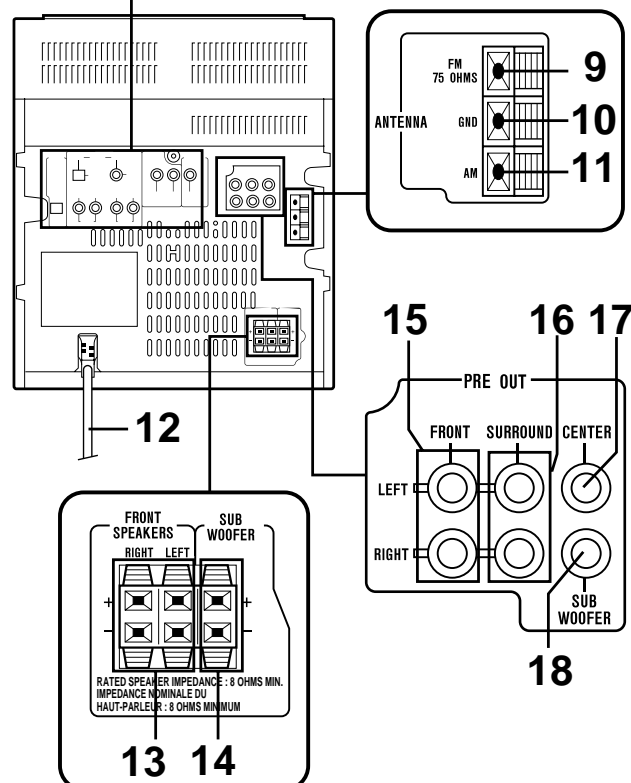

CP-C482

■ Front speakers


1. Super Tweeter
2. Tweeter
3. Woofer
4. Bass Reflex Duct
5. Speaker Terminals

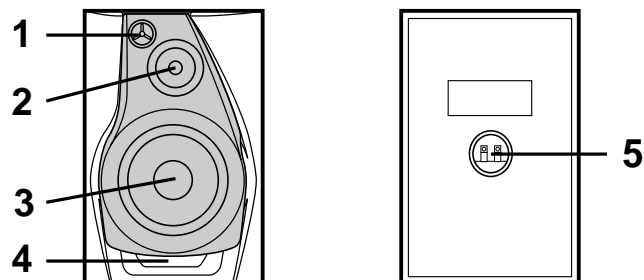

CP-SW482

■ Sub woofer

1. Woofer
2. Bass Reflex Duct
3. Speaker Terminals

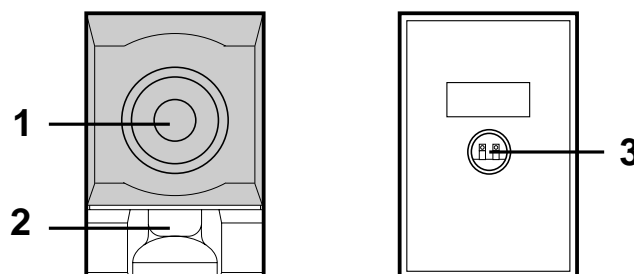

Remote control

1. Remote Control Transmitter LED
2. Surround Mode Selector Buttons
3. Sub Woofer Level Control Buttons: \wedge / \vee
4. Setup Up/Down Buttons: \wedge / \vee
5. Menu Button
6. Item Button

Tuner control section

7. Preset Up/Down Buttons: \wedge / \vee

CD control section


8. Track Up/Cue Button: $\blacktriangleright\blacktriangleright / \blacktriangleright\blacktriangleright$
9. Track Down/Review Button: $\blacktriangleleft\blacktriangleleft / \blacktriangleleft\blacktriangleleft$
10. Memory Button
11. Disc Skip Button
12. Stop Button: \blacksquare
13. Play/Repeat Button: $\blacktriangleright\curvearrowright$
14. Pause Button: II
15. Clear Button
16. Random Button

Tape control section

17. (TAPE 2) Record Pause Button: $\bullet\text{II}$
18. (TAPE 2) Reverse Play Button: \blacktriangleleft
19. Stop Button: \blacksquare
20. (TAPE 1) Play Button: \blacktriangleright
- (TAPE 2) Forward Play Button: \blacktriangleright
21. (TAPE 2) Fast Wind Buttons: $\blacktriangleleft\blacktriangleleft$



Common section

22. Extra Bass Button
23. Equalizer Mode Button
24. Function Selector Buttons
25. Power Button
26. Volume Control Buttons
27. Dimmer Button

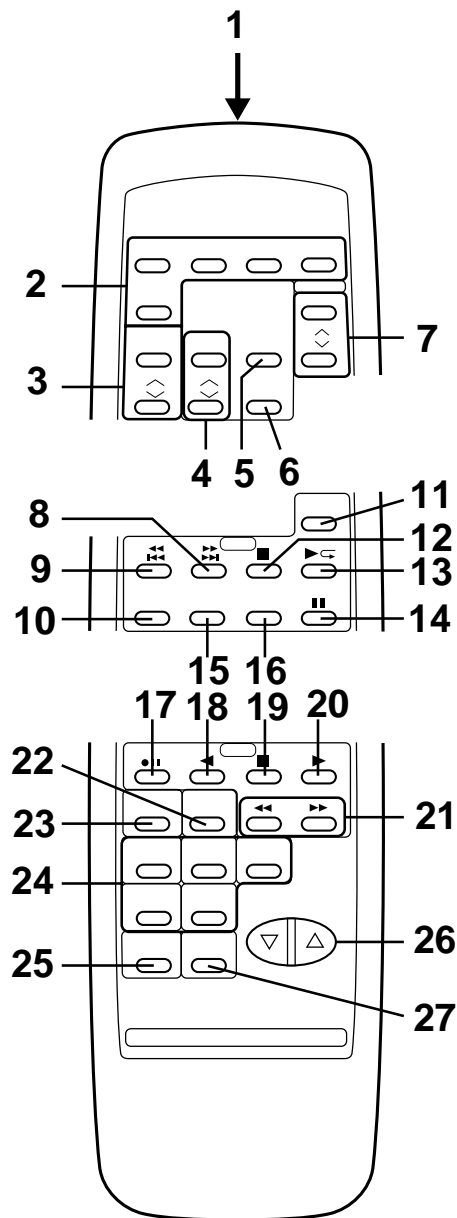

SETTING THE CLOCK

In this example, the clock is set for the 12-hour (AM 12:00) system.

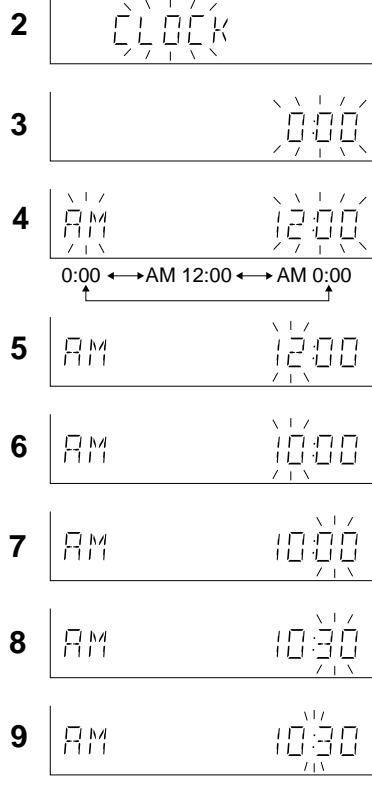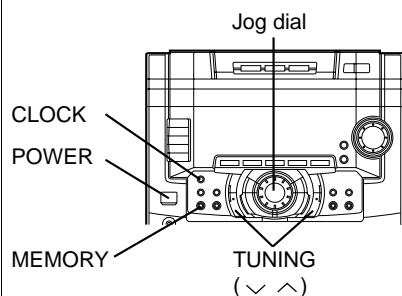

1 Press the POWER button to enter the stand-by mode.

2 Press the CLOCK button.

3 Within 5 seconds, press the MEMORY button.

4 Turn the jog dial to select the time display mode.

"0:00" → The 24-hour display will appear.
(0:00 - 23:59)

"AM 12:00" → The 12-hour display will appear.
(AM or PM 12:00 - 11:59)

"AM 0:00" → The 12-hour display will appear.
(AM or PM 0:00 - 11:59)

● Note that this can only be set when the unit is first installed or it has been reset (see page 36).

5 Press the MEMORY button.

6 Adjust the hour by turning the jog dial.

● When the jog dial is turned one click clockwise, the time will increase by 1 hour. When it is turned one click counterclockwise, the time will decrease by 1 hour.
Keep turning the jog dial to change the time continuously.

● When the 12-hour display is selected, "AM" will change automatically to "PM".

7 Press the MEMORY button.

8 Adjust the minutes by turning the jog dial.

● When the jog dial is turned one click clockwise, the time will increase by 1 minute. When it is turned one click counterclockwise, the time will decrease by 1 minute.
Keep turning the jog dial to change the time continuously.

● The hour setting will not advance even if minutes advance from "59" to "00".

9 Press the MEMORY button.

● The clock starts operating from "0" seconds.
(Seconds are not displayed.)

Note:

● In the event of a power failure or when the AC power cord is disconnected, the clock display will go out.
When the AC power supply is restored, the clock display will flash on and off to indicate the time when the power failure occurred or when the AC power cord was disconnected.
If this happens, follow the procedure below to change the clock time.

To change the clock time:

When the unit is in the stand-by mode:

- ① Press the MEMORY button.
- ② Perform steps 6 - 9 above.

When the unit is on:

- ① Press the CLOCK button.
- ② Within 5 seconds, press the MEMORY button.
- ③ Perform steps 6 - 9 above.

To see the time display:


Press the CLOCK button.

● The time display will appear for about 5 seconds.

To change the time display mode:

- ① Perform steps 1 and 2 in the section "RESETTING THE MICROCOMPUTER", on page 36.
- ② Perform steps 1 - 9 above.

RESETTING THE MICROCOMPUTER

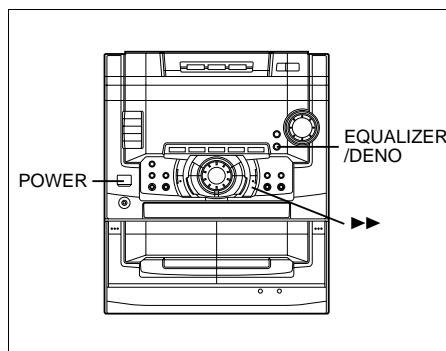

Reset the microcomputer by performing the following procedure for the cases shown below:

- To erase all of the stored memory contents, or
- If the display does not function properly, or
- The unit does not operate properly.


1 Press the POWER button to turn the power off.

2 Press the POWER button while holding down the button and the EQUALIZER/DEMO button.


Caution:

● The operation explained above will erase all data stored in memory including clock and timer settings, and tuner and CD presets.

1 Check the supplied accessories / Compruebe los accesorios suministrados




- Remote control x 1
- Controlador remoto x 1



- FM antenna x 1
- Antena de FM x 1



- AM loop antenna x 1
- Antena de cuadro de AM x 1




- Front speaker wire x 2
- Cable de altavoz frontal x 2




- Sub woofer wire x 1
- Cable de altavoz de subgraves x 1


2 How to use the remote control / Empleo del controlador remoto

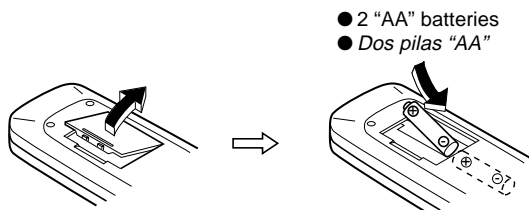


- Batteries are not included.
- Las pilas no están incluidas.

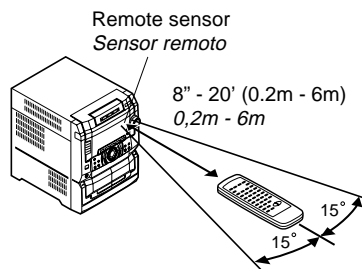

3 Placing the speaker system / Situación de los altavoces

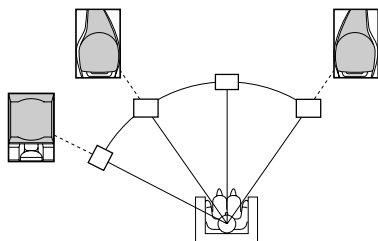


4 Connecting the system / Conexión del sistema

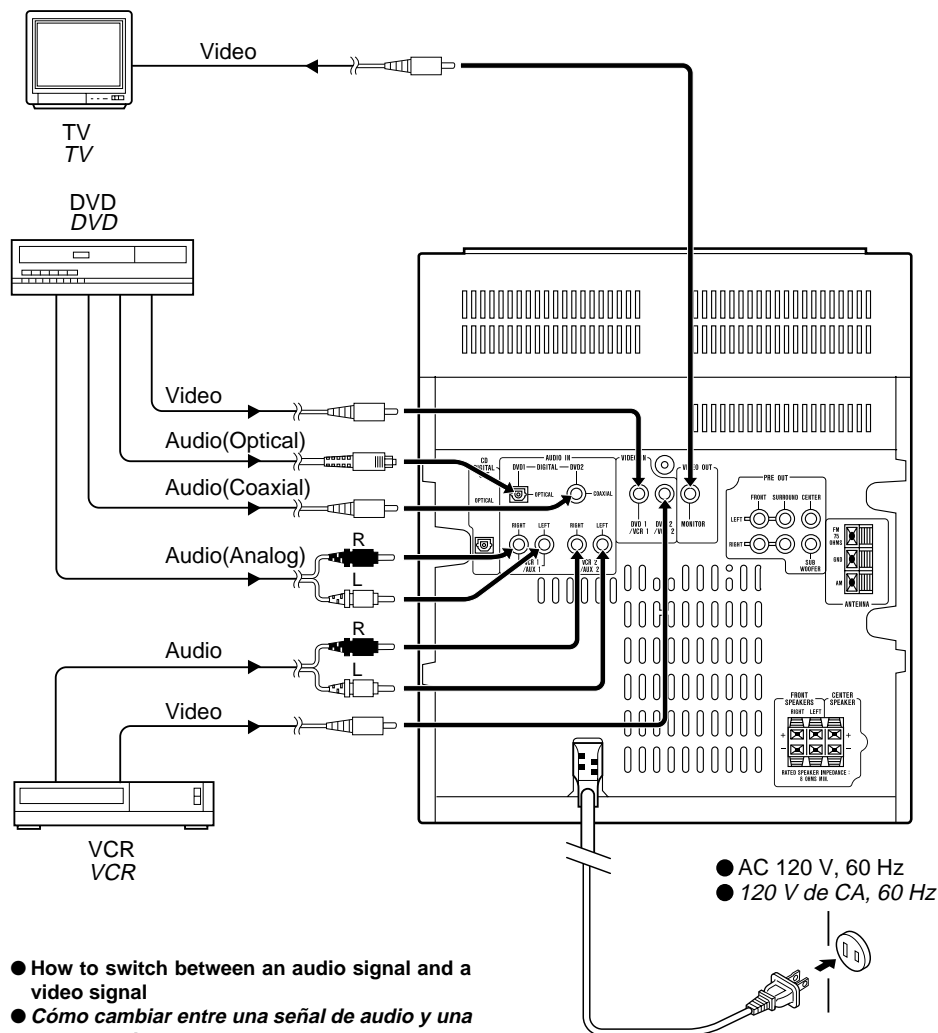


- How to switch between an audio signal and a video signal
- Cómo cambiar entre una señal de audio y una señal de vídeo

BUTTON/BOTÓN	DISPLAY/VISUALIZACIÓN	AUDIO OUTPUT/SALIDA DE AUDIO	VIDEO OUTPUT/SALIDA DE VÍDEO
DVD 1 / VCR 1	"DVD 1"	DVD 1	DVD 1/VCR 1
	"VCR 1"	VCR 1/AUX 1	DVD 1/VCR 1
DVD 2 / VCR 2	"DVD 2"	DVD 2	DVD 2/VCR 2
	"VCR 2"	VCR 2/AUX 2	DVD 2/VCR 2

5 Listening to a CD / Audición de discos CD

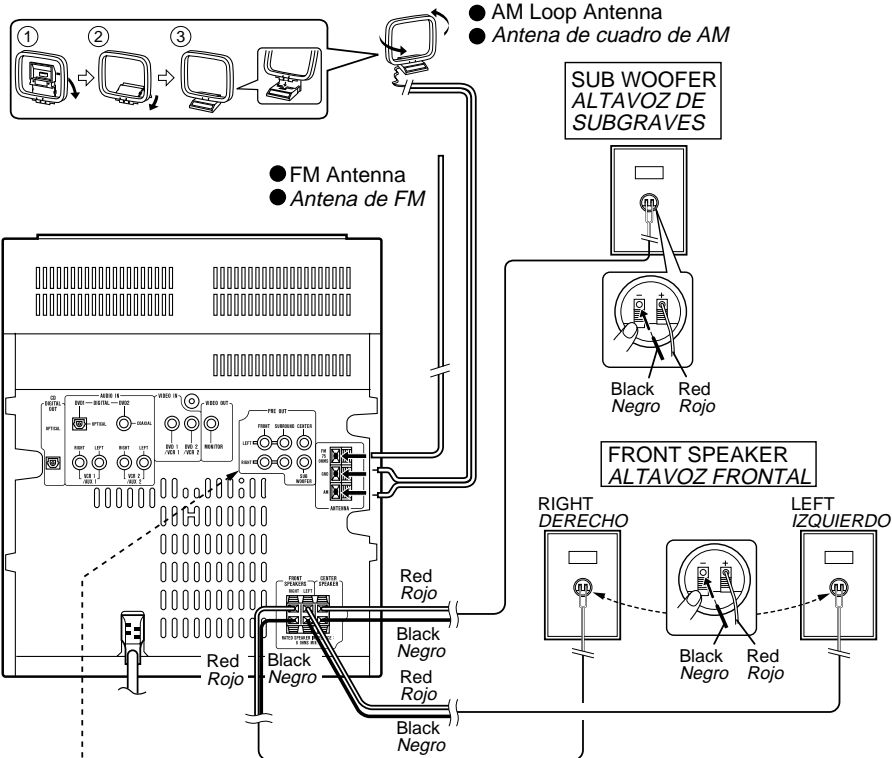

EXPANDED SPEAKER SYSTEM SISTEMA DE ALTAVOCES AMPLIADO

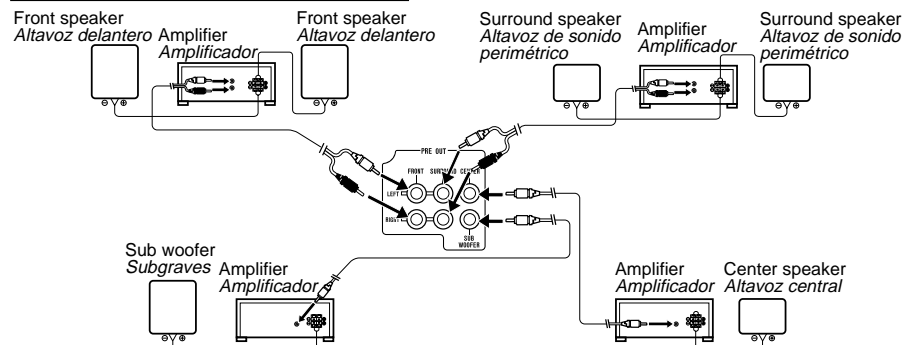

- 1** Press the **POWER** button to turn the power on.
*Pulse el botón **POWER** para conectar la alimentación.*
- 2** Press the **CD** button.
*Pulse el botón **CD**.*
- 3** Press the **OPEN/CLOSE** button to open the disc tray and place the CD (s) on the disc tray, label side up.
*Pulse el botón **OPEN/CLOSE** para abrir la bandeja del disco y coloque el disco(s) CD en la bandeja del disco con el lado de la etiqueta arriba.*
- 4** Press the **OPEN/CLOSE** button to close the disc tray.
*Pulse el botón **OPEN/CLOSE** para cerrar la bandeja del disco.*
- 5** Press the **▶/◀** button.
*Pulse el botón **▶/◀**.*
- 6** Adjust the volume level. Turn the **VOLUME** control clockwise to increase the volume. Turn the **VOLUME** control counterclockwise to decrease the volume.
*Ajuste el nivel de volumen. Girando el control **VOLUME** hacia la derecha se incrementa el volumen. Girando el control **VOLUME** hacia la izquierda se reduce el volumen.*


To stop the playback Para detener la reproducción

- Press the **■** button.
*Pulse el botón **■**.*

6 Listening to a tape / Audición de una cinta

- 1** Press the POWER button to turn the power on.
Pulse el botón POWER para conectar la alimentación.

POWER

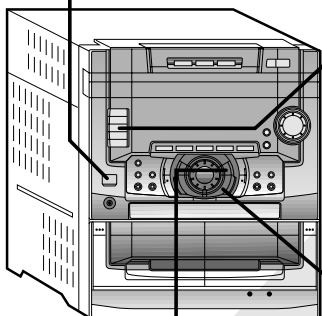


- 2** Press the TAPE button to select "TAPE 1" or "TAPE 2".
Pulse el botón TAPE para seleccionar "TAPE 1" o "TAPE 2".

TAPE

TAPE 1 00
TAPE 2 00

- 3** Load a cassette into the cassette compartment.
Inserte un casete en el compartimiento del casete.



To stop the playback
Para detener la reproducción

- Press the ■ button.
Pulse el botón ■.


- 4** Press the ►/◄ button.
Pulse el botón ►/◄.



7 Listening to the radio / Audición de la radio

- 1** Press the POWER button to turn the power on.
Pulse el botón POWER para conectar la alimentación.

POWER

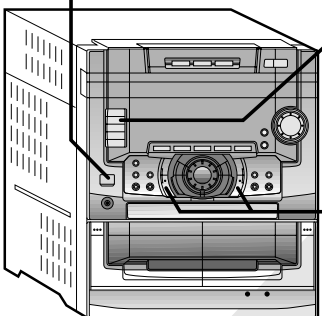

- 2** Press the TUNER (BAND) button to select "FM ST", "FM" or "AM".
Pulse el botón TUNER (BAND) para seleccionar "FM ST", "FM", o "AM".

TUNER (BAND)

FM ST FM AM
FM


- 3** Press the TUNING (∧/∨) button to tune in to the desired station.
Pulse el botón TUNING (∧/∨) para sintonizar la emisora deseada.



8 Recording from CDs / Grabaciones de discos CD

- 1** Press the POWER button to turn the power on.
Pulse el botón POWER para conectar la alimentación.

POWER

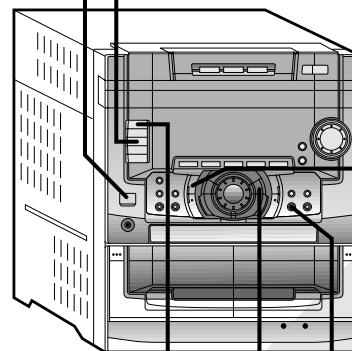

- 2** Press the TAPE (1↔2) button to select the "TAPE 2".
Pulse el botón TAPE (1 ↔ 2) para seleccionar "TAPE 2".

TAPE (TAPES)

TAPE 2 00

- 3** Load a cassette into the TAPE2 cassette compartment.
Inserte un casete en el compartimiento del casete de TAPE 2.



- 4** Press the REVERSE MODE button to select the reverse mode.
Pulse el botón REVERSE MODE para seleccionar el modo de inversión.



⏮ One side / Una cara
⏮⏭ Both side / Ambas caras

- 5** Press the CD button and load the desired disc.
Pulse el botón CD y coloque el disco deseado.

CD

[]

To stop the recording
Para detener la grabación

- Press the ■ button.
Pulse el botón ■.



- 6** Press the NORMAL EDIT button.
Pulse el botón NORMAL EDIT.

NORMAL



DISASSEMBLY

Caution on Disassembly

Follow the below-mentioned notes when disassembling the unit and reassembling it, to keep it safe and ensure excellent performance:

1. Take cassette tape and compact disc out of the unit.
2. Be sure to remove the power supply plug from the wall outlet before starting to disassemble the unit.
3. Take off nylon bands or wire holders where they need to be removed when disassembling the unit. After servicing the unit, be sure to rearrange the leads where they were before disassembling.
4. Take sufficient care on static electricity of integrated circuits and other circuits when servicing.

CD-C482

STEP	REMOVAL	PROCEDURE	FIGURE
1	Top Cabinet	1. Screw (A1) x4	11-1
2	Side Panel (Left/right)	1. Screw (B1) x8	11-1
3	CD Player Unit/ CD Tray Cover	1. Turn on the power supply, open the disc tray, take out the CD cover, and close. (Note 1) 2. Hook (C1) x3 3. Hook (C2) x2 4. Screw (C3) x1 5. Socket (C4) x3	11-2 12-1
4	Dolby PWB	1. Flat cable (D1) x2 2. Socket (D2) x1 3. Screw (D3) x11	12-1
5	Tuner PWB	1. Socket (E1) x1 2. Screw (E2) x5	12-1
6	Rear Panel	1. Screw (F1) x10	11-2
7	Main PWB	1. Flat cable (G1) x2 2. Flat wire (G2) x1 3. Socket (G3) x4 4. Screw (G4) x3	12-2
8	Front Panel	1. Flat wire (H1) x1 2. Screw (H2) x2	12-2
10	Power Amp. PWB	1. Socket (K1) x2 2. Screw (K2) x6	12-3
11	Power Supply PWB	1. Screw (L1) x6	12-4
12	Display PWB	1. Knob (M1) x2 2. Nut (M2) x2 3. Screw (M3) x12	12-4
13	CD Switch PWB	1. Screw (N1) x3	12-4
14	Headphones	1. Screw (P1) x1	12-4
15	Tape Mechanism	1. Screw (Q1) x6	12-4
16	Turntable	1. Screw (R1) x1 2. Cover (R2) x1	12-5
17	Disc Tray	1. Screw (S1) x2 2. Guide (S2) x2	12-5
18	CD Player Unit/ CD Servo PWB	1. Screw (T1) x1 2. Socket (T2) x4	12-5
19	CD Changer Mechanism	1. Screw (U1) x4	13-1
20	CD Mechanism	1. Screw (V1) x1	13-1

Note 1:

How to open the changer manually. (Fig. 11-3)

1. Then, turn fully the lock lever in the arrow direction through the hole on the loading chassis bottom in this state.
After that, push forward the CD player base.

CD-C482

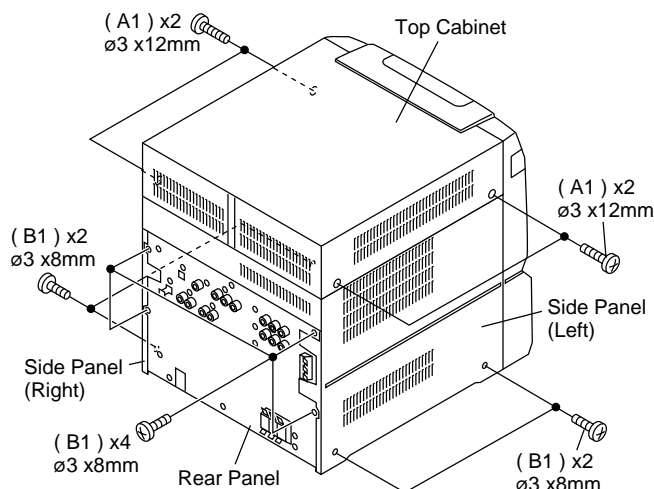


Figure 11-1

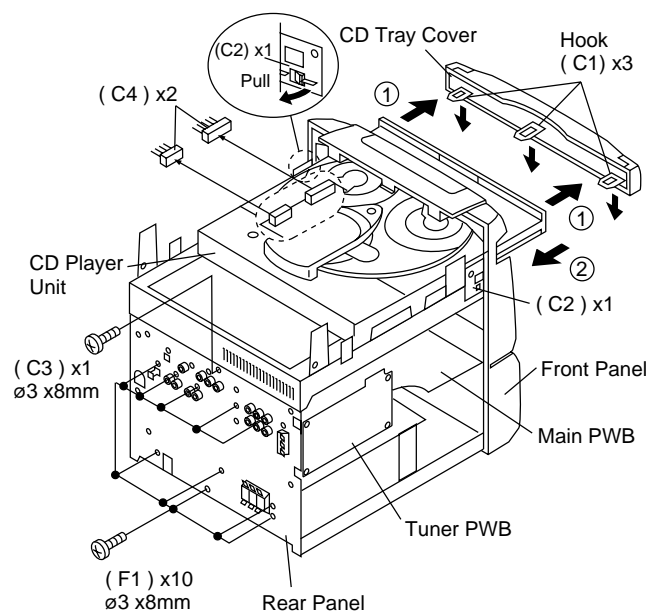


Figure 11-2

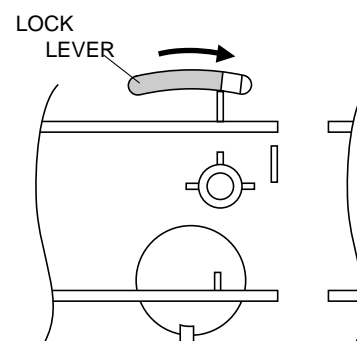


Figure 11-3

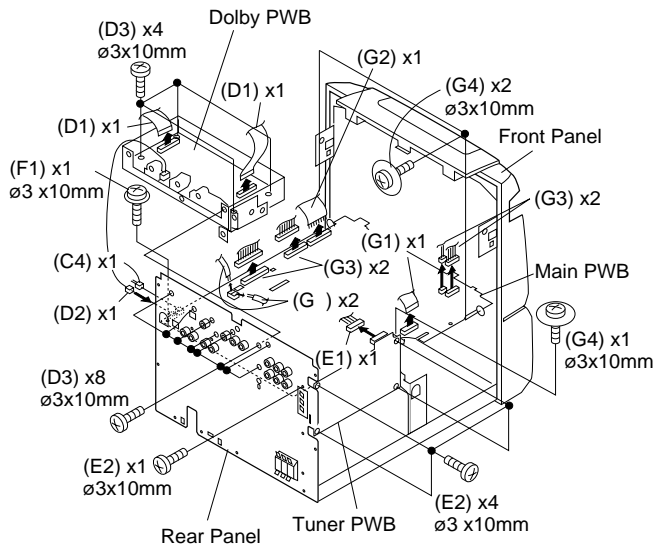


Figure 12-1

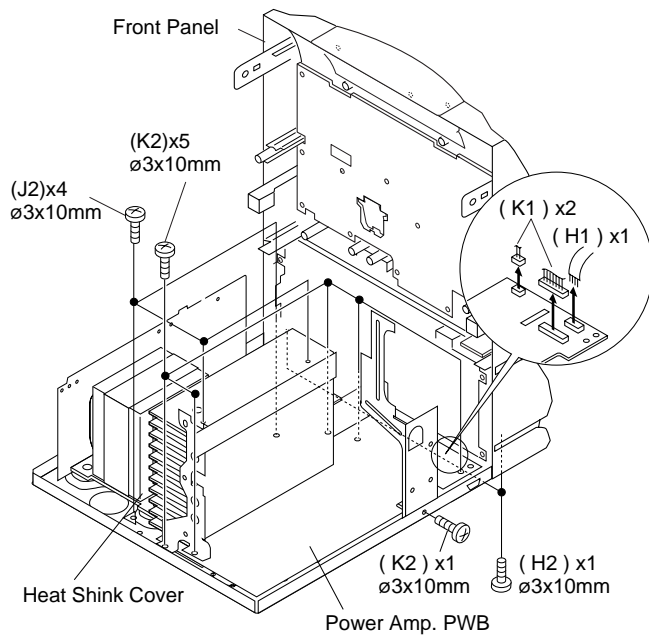


Figure 12-2

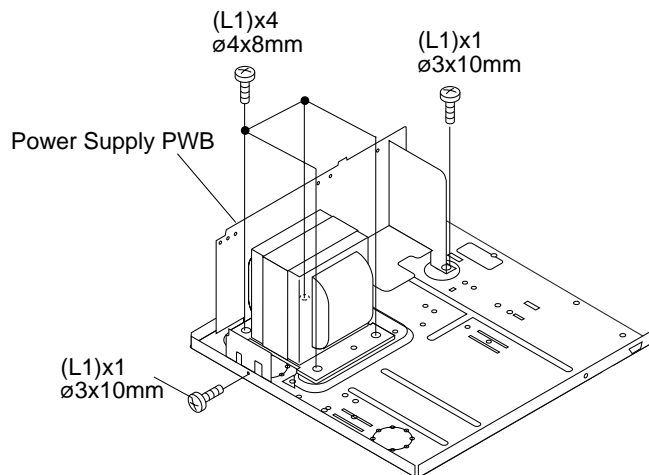


Figure 12-3

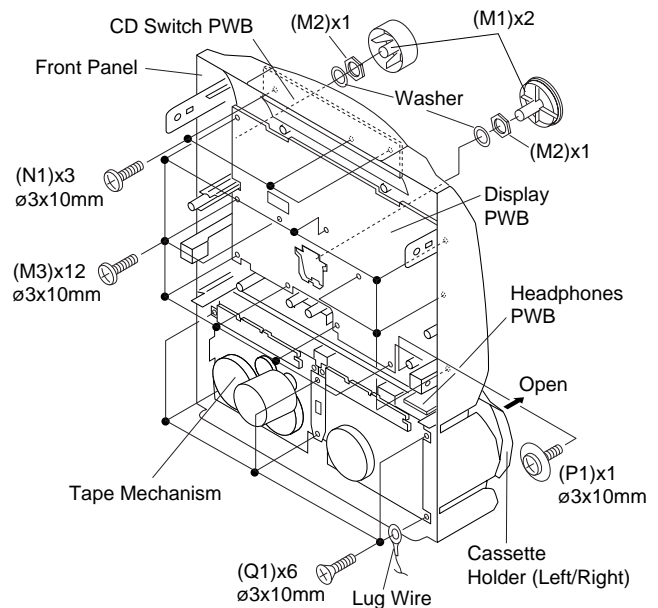


Figure 12-4

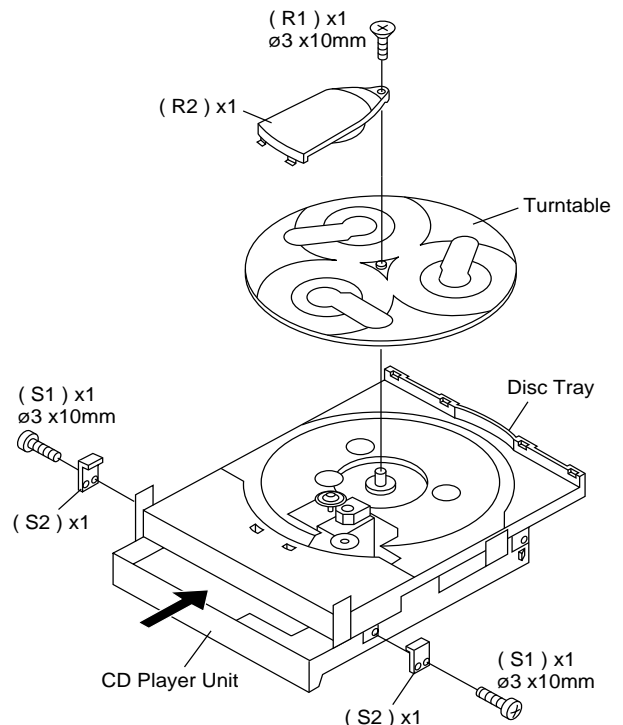


Figure 12-5


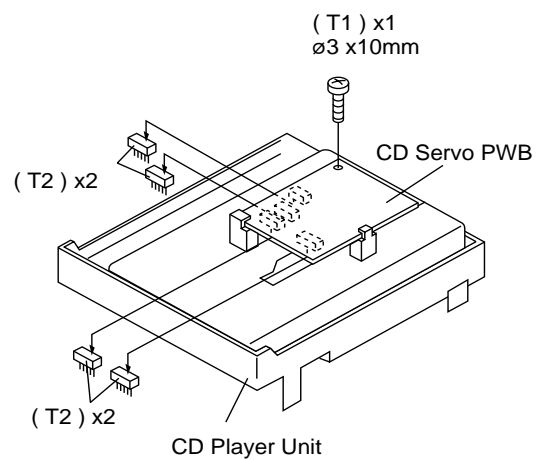


Figure 12-6

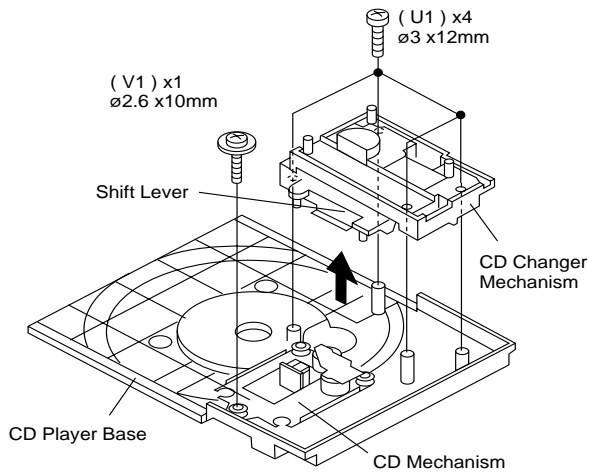

Be careful when installing the CD changer mechanism. Install the CD changer mechanism on the CD player base after the shift lever has been set in the highest position.

Figure 13-1

CP-C482			
STEP	REMOVAL	PROCEDURE	FIGURE
1	Front Speaker	1. Net (A1) x1 2. Baffle Board (A2) x1 3. Screw (A3) x2 4. Screw (A4) x4 5. Screw (A5) x2	13-2

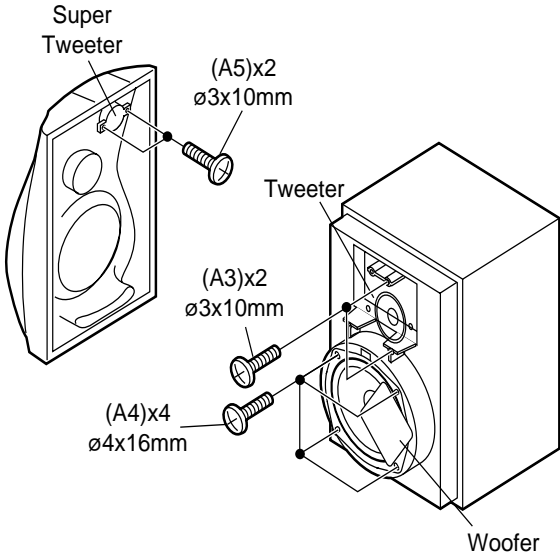
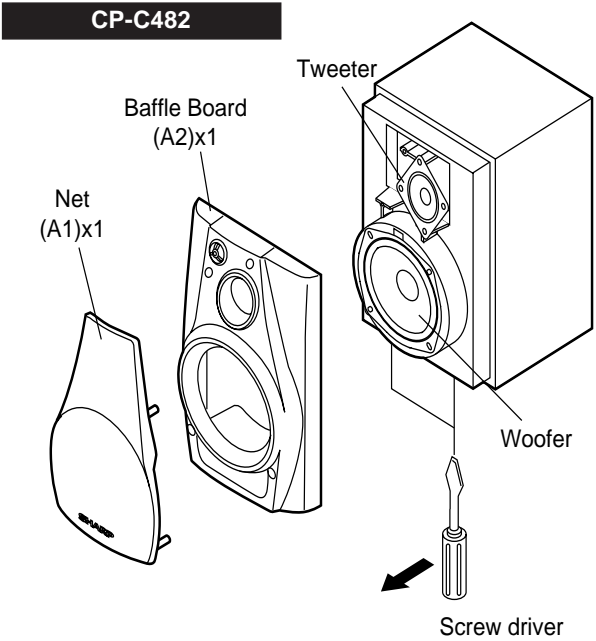


Figure 13-2

CP-SW482			
STEP	REMOVAL	PROCEDURE	FIGURE
1	Sub woofer	1. Net (A1) x1 2. Duct Panel (A2) x1 3. Screw (A3) x4	13-3

Note:
The center and rear speakers can be easily disassembled. Therefore the disassembling method is not described. For details refer to the disassembling drawing in the Parts Guide.

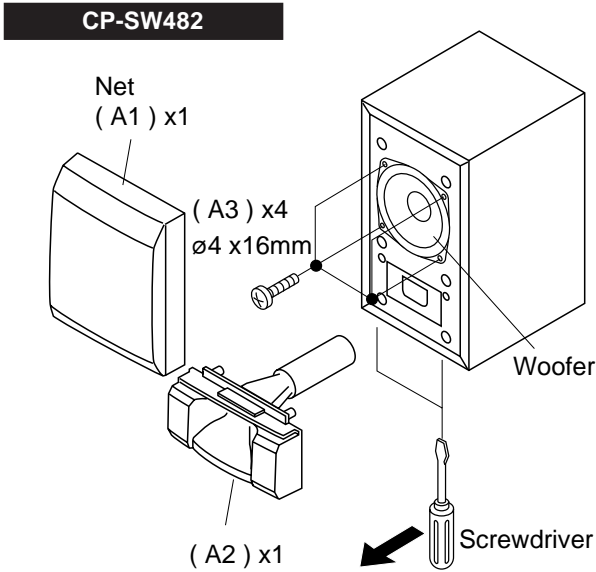


Figure 13-3

NOTES ON SCHEMATIC DIAGRAM

- Resistor:

To differentiate the units of resistors, such symbol as K and M are used: the symbol K means 1000 ohm and the symbol M means 1000 kohm and the resistor without any symbol is ohm-type resistor. Besides, the one with "Fusible" is a fuse type.

- Capacitor:

To indicate the unit of capacitor, a symbol P is used: this symbol P means micro-micro-farad and the unit of the capacitor without such a symbol is microfarad. As to electrolytic capacitor, the expression "capacitance/withstand voltage" is used.

(CH), (TH), (RH), (UJ): Temperature compensation

(ML): Mylar type

(P.P.): Polypropylene type

- Schematic diagram and Wiring Side of P.W.Board for this model are subject to change for improvement without prior notice.

- The indicated voltage in each section is the one measured by Digital Multimeter between such a section and the chassis with no signal given.

1. In the tuner section,

() indicates AM

< > indicates FM stereo

2. In the main section, a tape is being played back.

3. In the deck section, a tape is being played back.

() indicates the record state.


4. In the power section, a tape is being played back.

5. In the CD section, the CD is stopped.


- Parts marked with "△" (□ = = = □) are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

REF. NO	DESCRIPTION	POSITION
SW1	OPEN/CLOSE	ON—OFF
SW2	MECHA UP	ON—OFF
SW3	DISC NUMBER	ON—OFF
SW4	PICKUP IN	ON—OFF
SWD1	VOLUME	ON—OFF
SWD2	JOG	ON—OFF
SWD3	X-BASS	ON—OFF
SWD4	PRE EQ	ON—OFF
SWD5	MENU	ON—OFF
SWD6	ITEM	ON—OFF
SWD12	TUNING UP/CUE	ON—OFF
SWD13	STOP	ON—OFF
SWD14	NORMAL EDIT	ON—OFF
SWD15	REC. PAUSE	ON—OFF
SWD16	REC/PAUSE	ON—OFF
SWD17	F-PLAY	ON—OFF
SWD23	QSOUND	ON—OFF
SWD26	VIRTUAL	ON—OFF
SWD27	PHANTOM	ON—OFF
SWD28	NORMAL	ON—OFF
SWD29	BYPASS	ON—OFF
SWD30	TUNING DOWN/REWIND	ON—OFF
SWD31	CD PAUSE	ON—OFF


REF. NO	DESCRIPTION	POSITION
SWD32	REVERSE MODE	ON—OFF
SWD33	R-PLAY	ON—OFF
SWD34	CLOCK	ON—OFF
SWD35	MEMORY	ON—OFF
SWD36	TIMER	ON—OFF
SWD37	SLEEP	ON—OFF
SWD38	CLEAR	ON—OFF
SWD39	DVD/VIDEO 1	ON—OFF
SWD40	DVD/VIDEO 2	ON—OFF
SWD41	TAPE 1/2	ON—OFF
SWD42	TUNER/BAND	ON—OFF
SWD43	CD	ON—OFF
SWD48	POWER	ON—OFF
SWD50	DISC 1	ON—OFF
SWD51	DISC 2	ON—OFF
SWD52	DISC 3	ON—OFF
SWD53	DISC SKIP	ON—OFF
SWD54	OPEN/CLOS	ON—OFF
SWM3	REC FWD	ON—OFF
SWM4	REC RVS	ON—OFF
SWM5	F.A.S	ON—OFF
SWM6	CAM	ON—OFF




KTA1266 GR KRA109 M
 KTA1270Y KRC102 M
 KTA1271 Y KRC104 M
 KTA1273 Y KRC107 M
 KTC3199 GR 2SC535 C
 KTC3203 Y 2SD468 C
 KRA102 M 2SC2878 A
 KRA107 M



2SD2012
 2SB1375

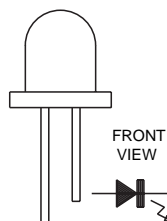


SLR325 MG
 SLR325 VR
 KL052 UL
 SLR505 MC
 LMKD515 B

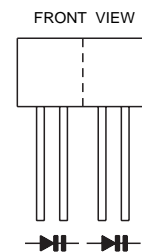

KV1236Z23

Figure 14 TYPES OF TRANSISTOR

Figure 15 BLOCK DIAGRAM (1/5)

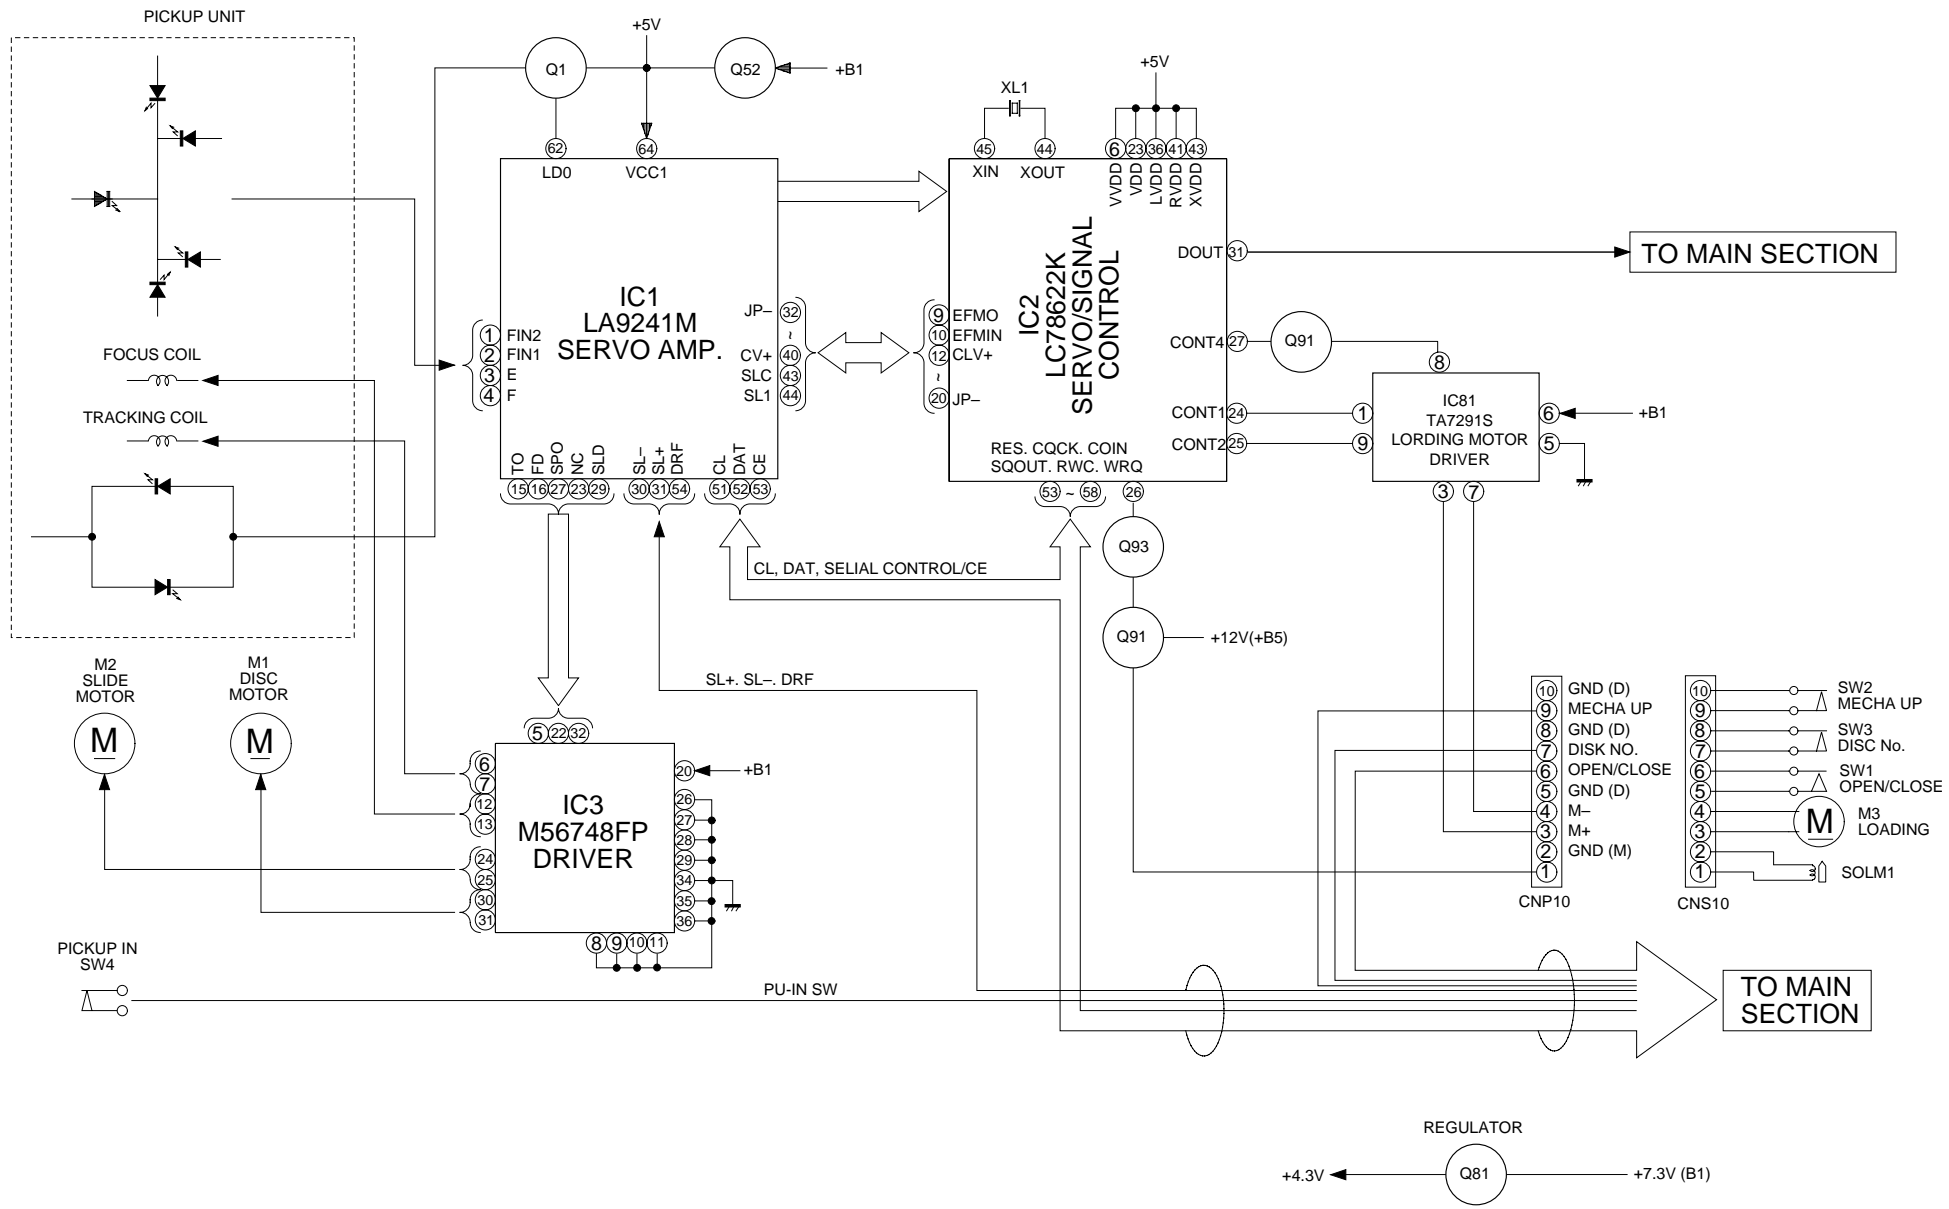

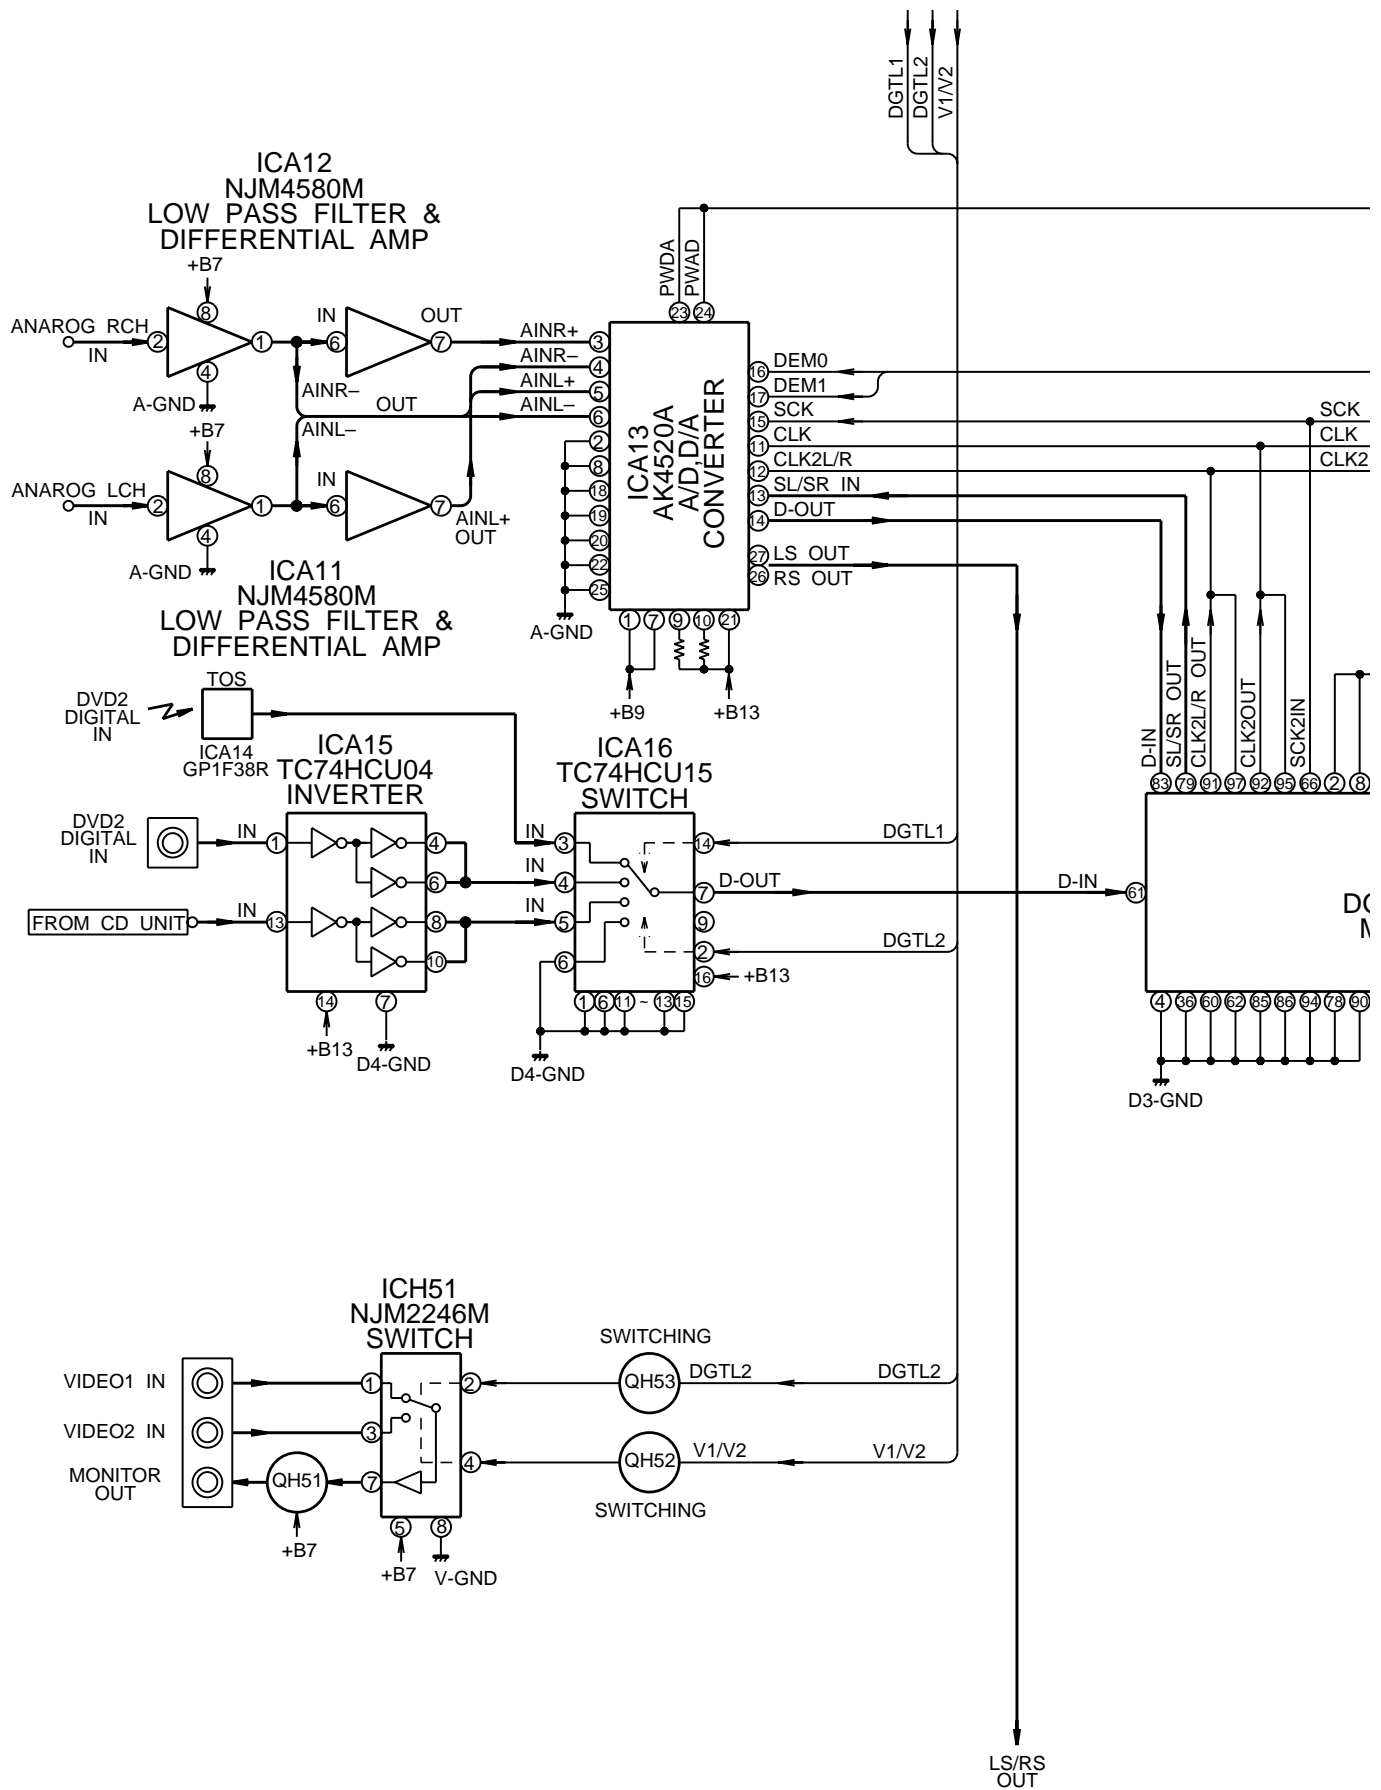


Figure 16 BLOCK DIAGRAM (2/5)

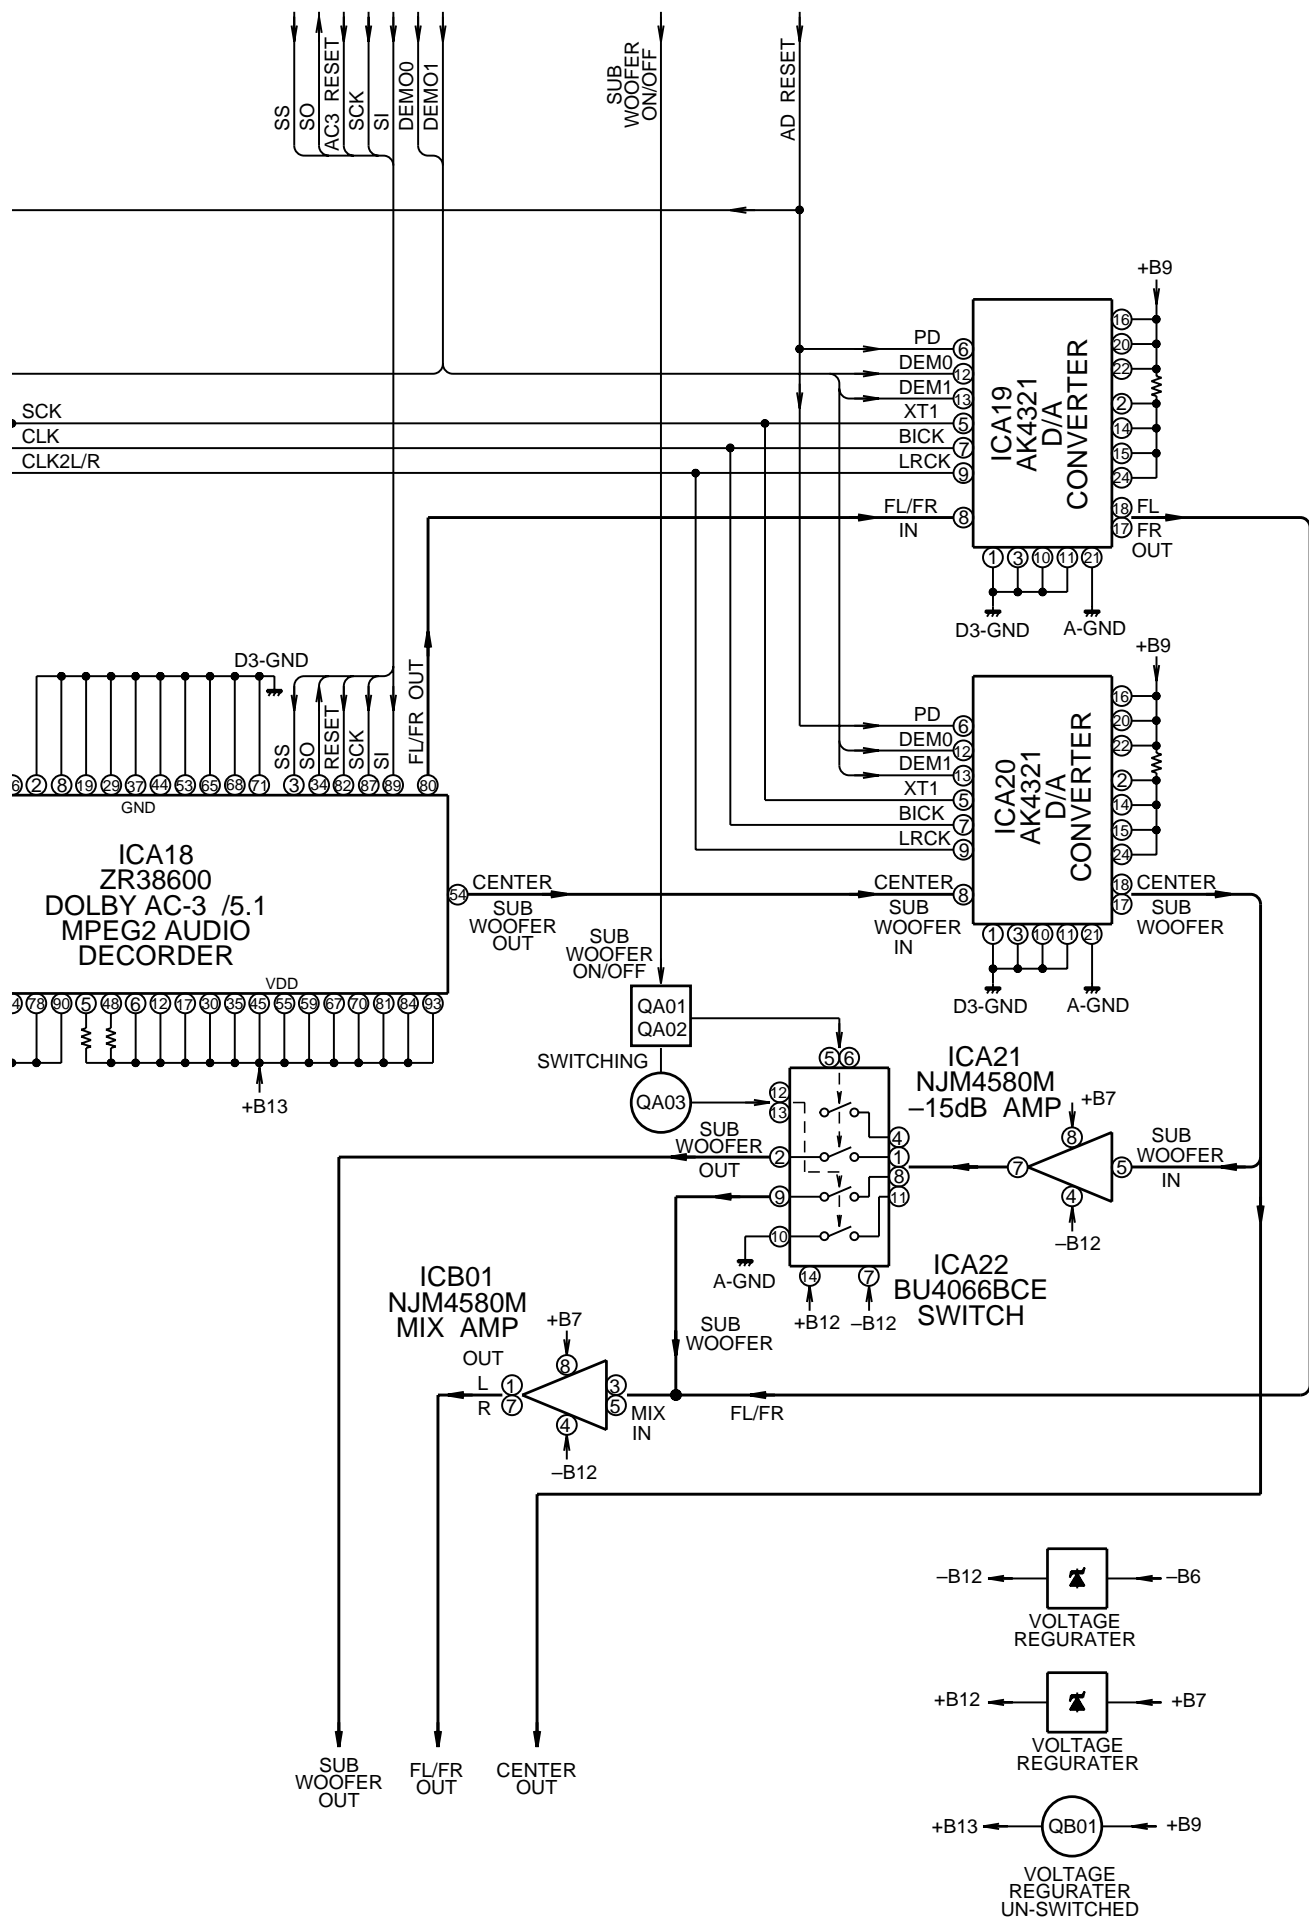


Figure 17 BLOCK DIAGRAM (3/5)

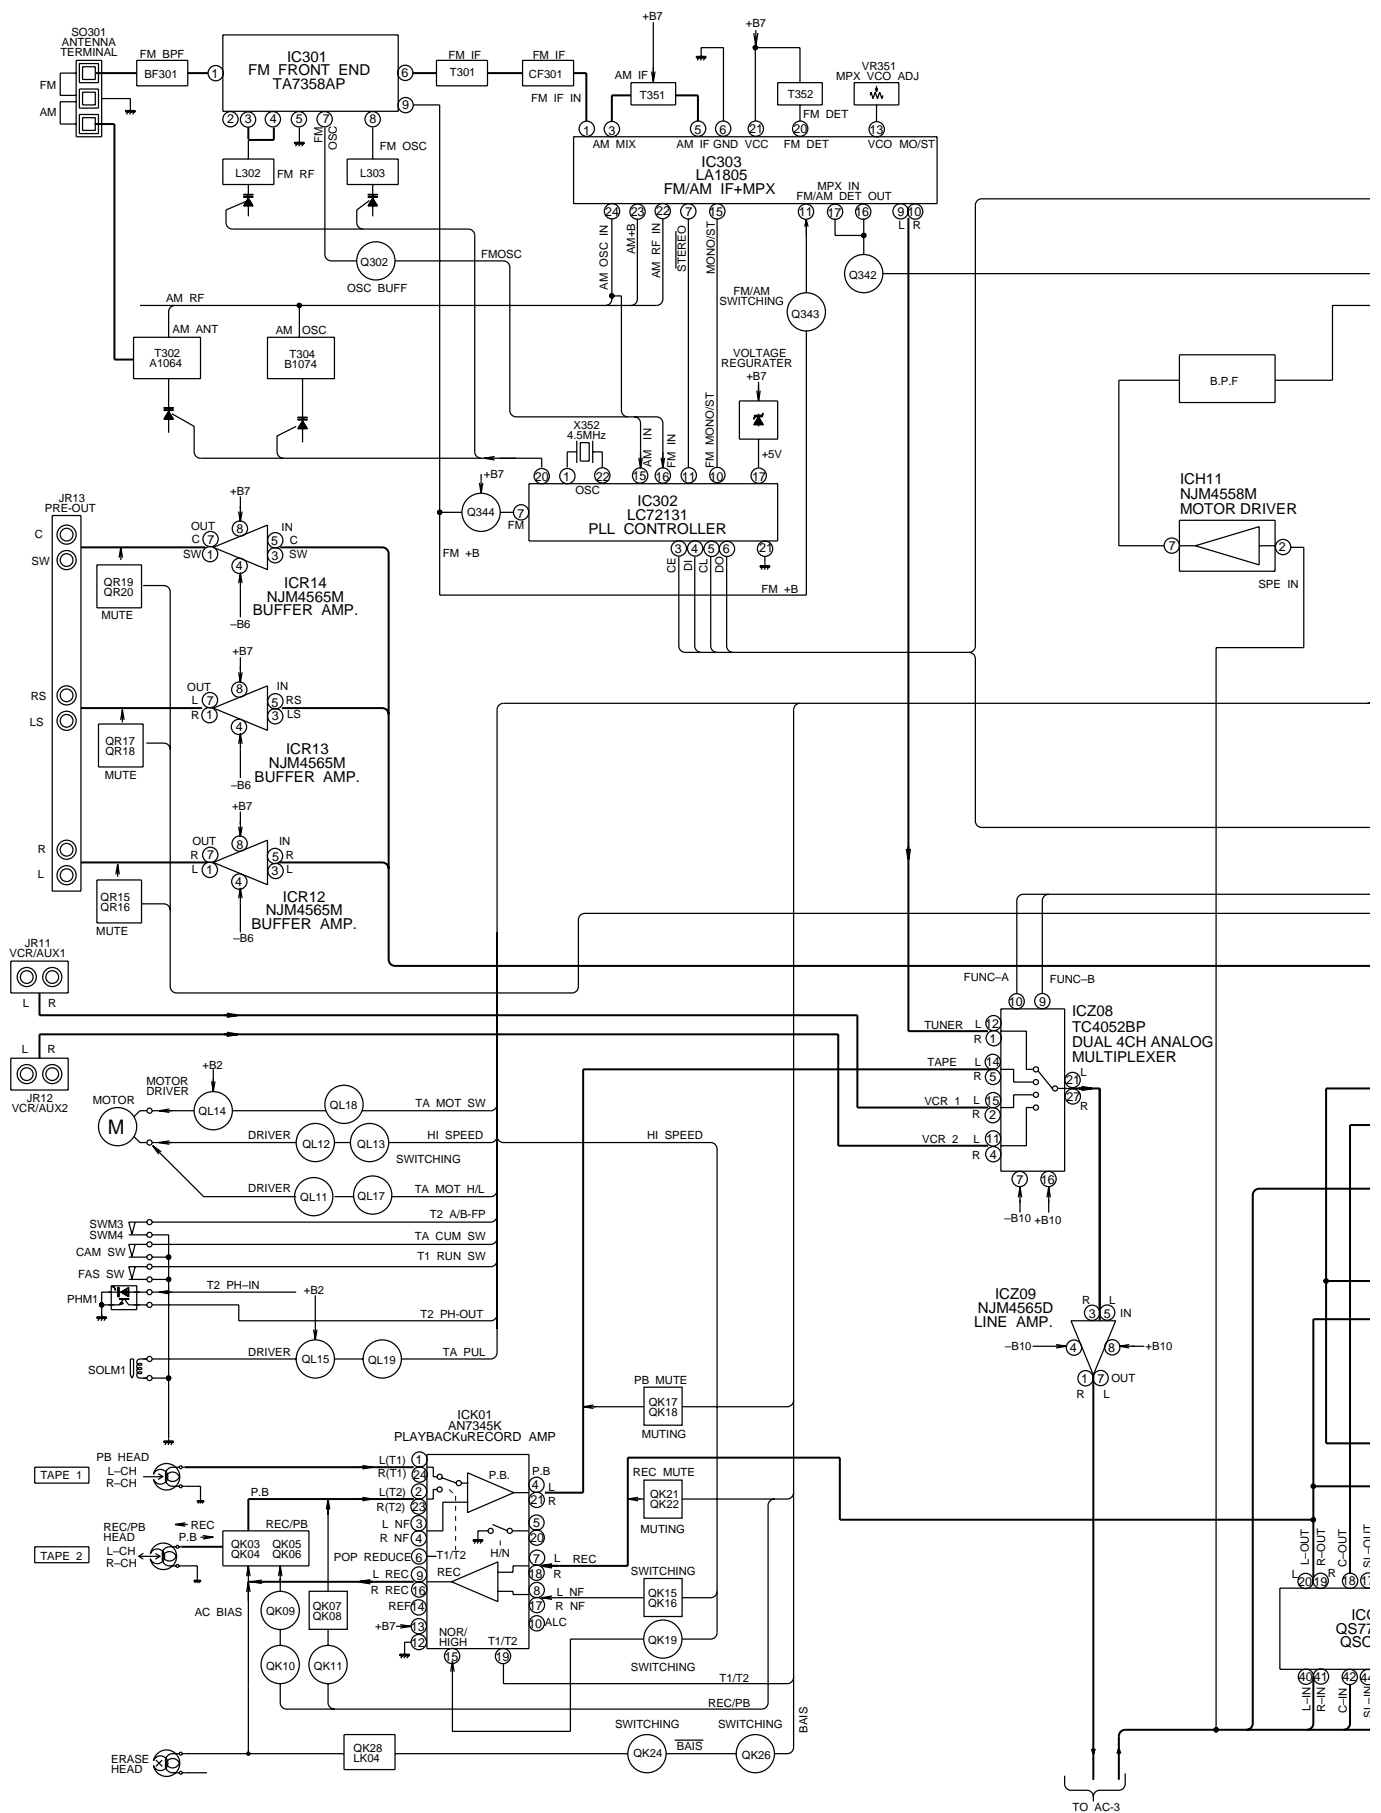


Figure 18 BLOCK DIAGRAM (4/5)

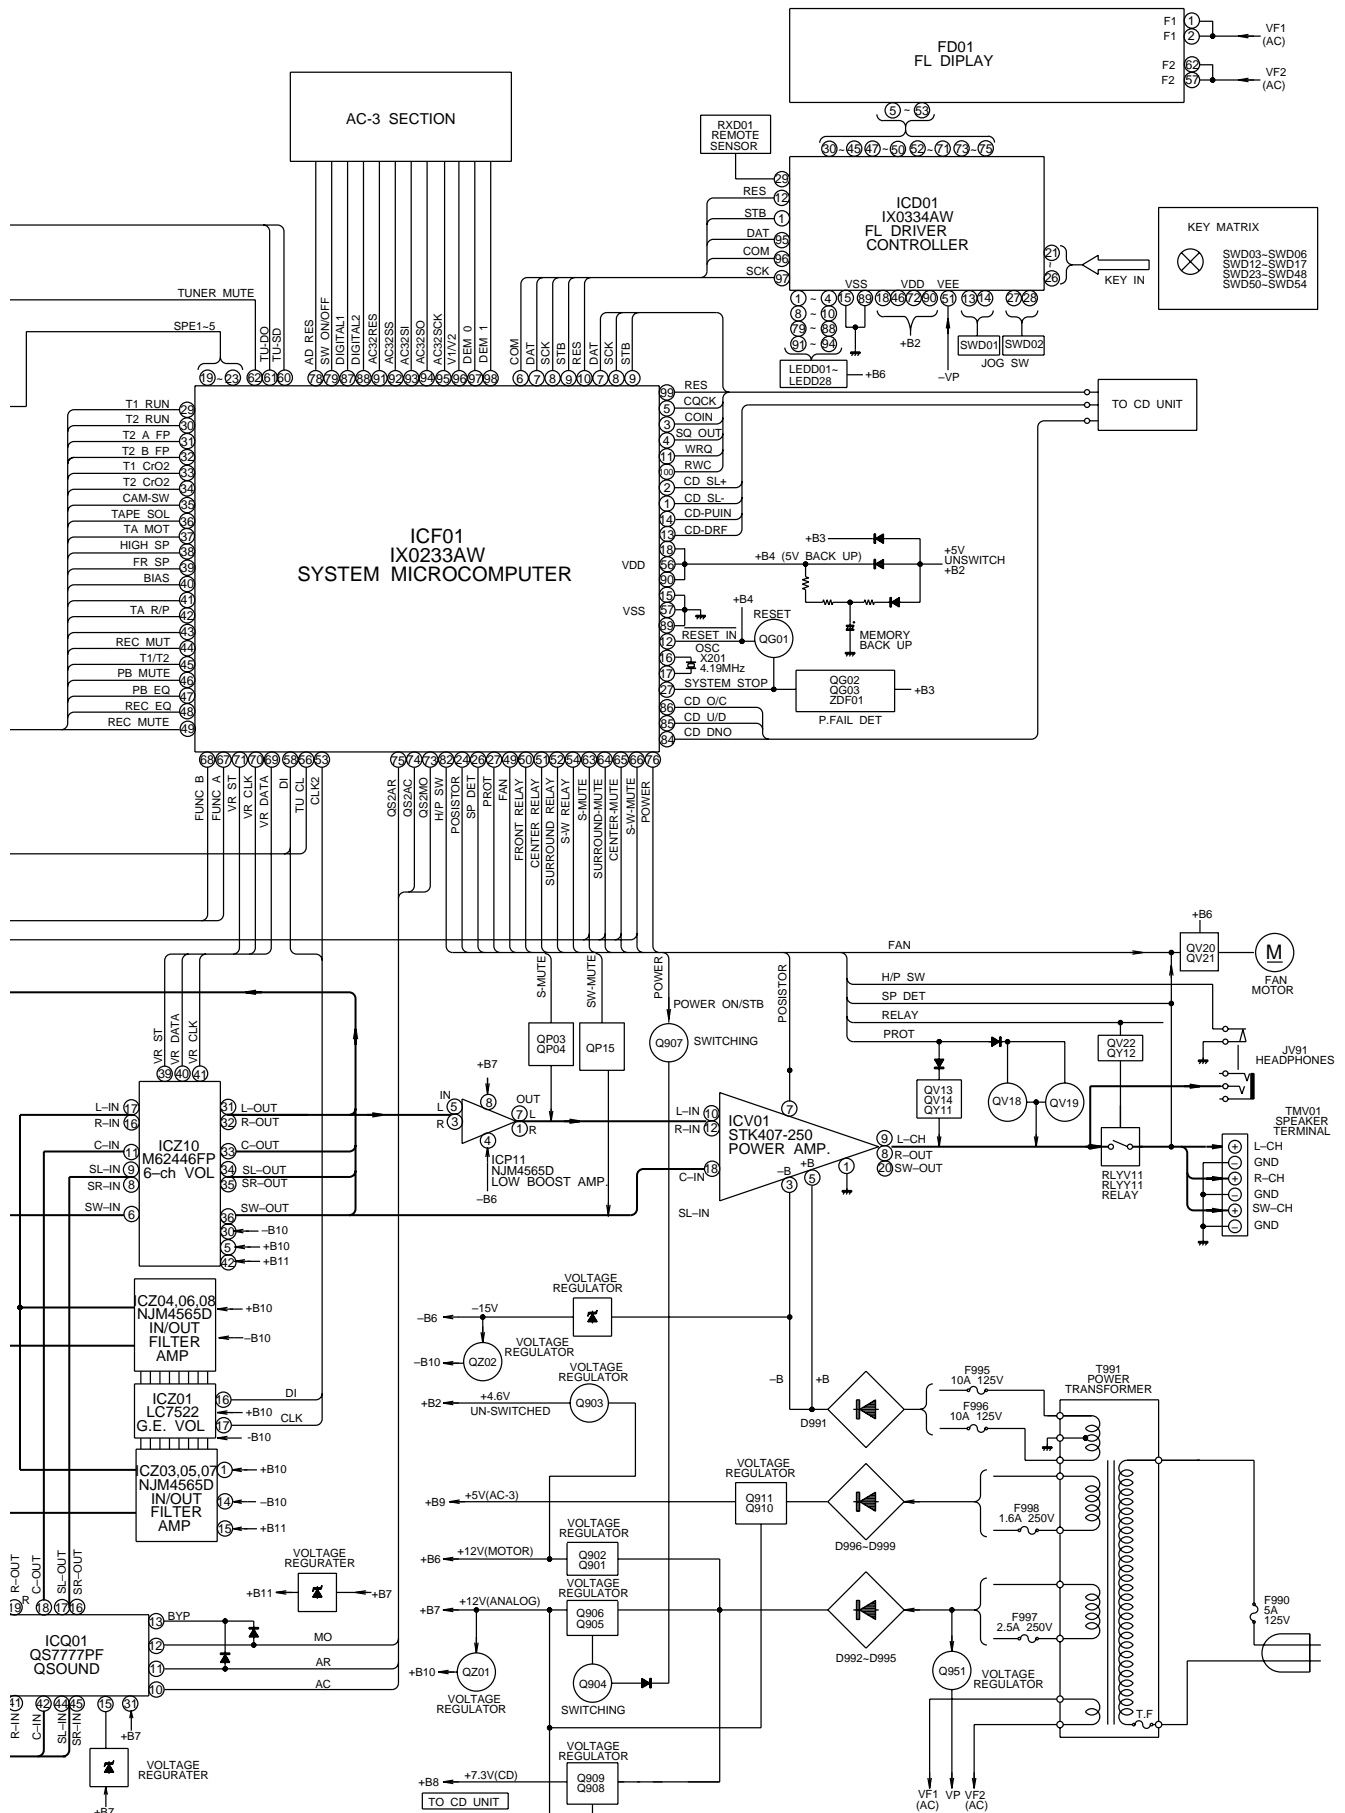


Figure 19 BLOCK DIAGRAM (5/5)


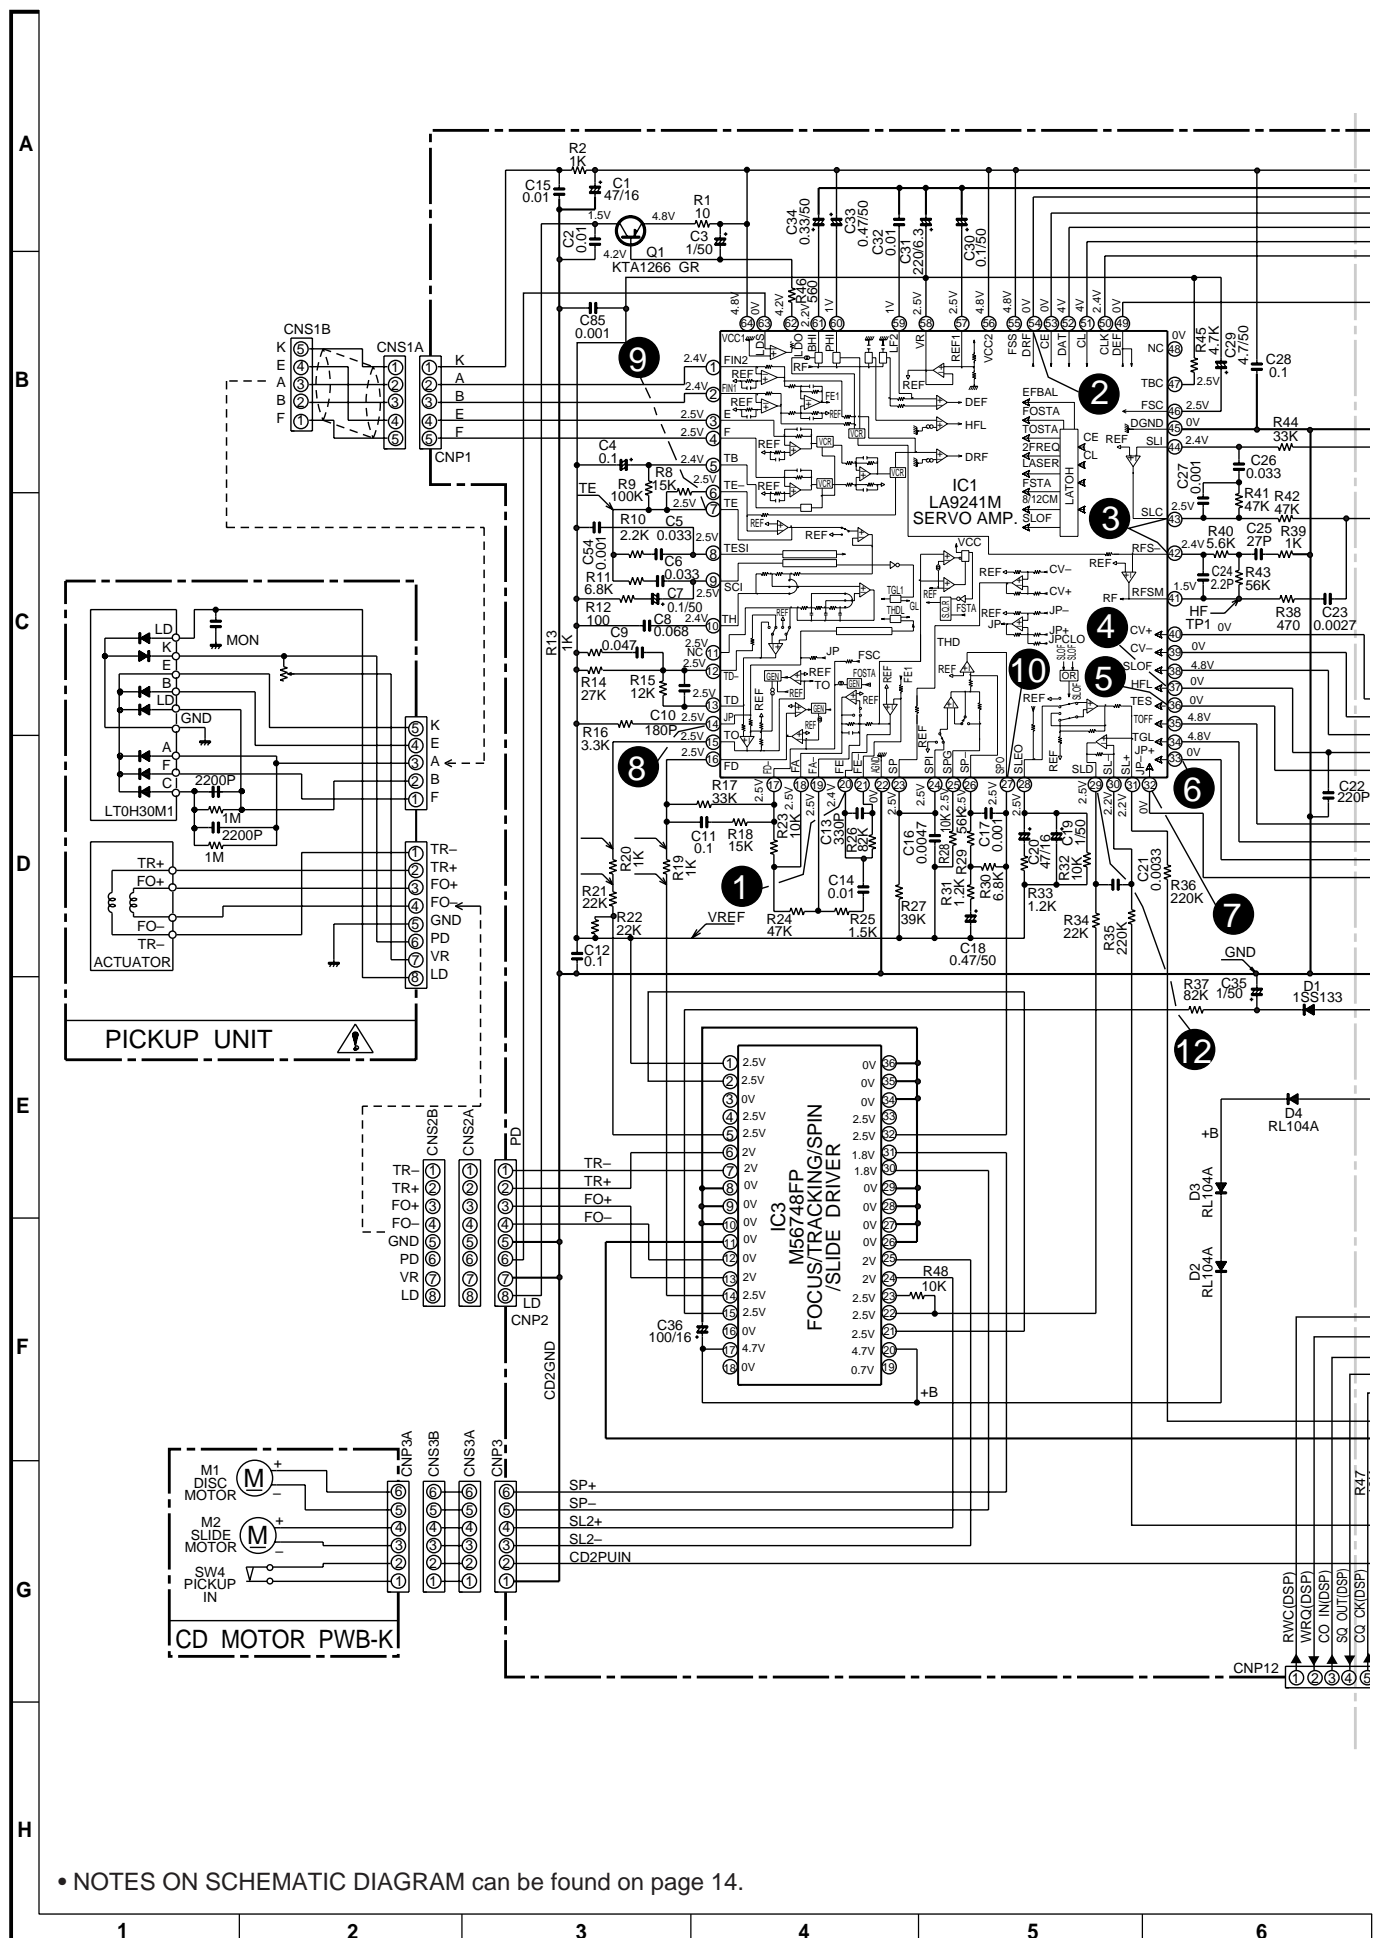


Figure 20 SCHEMATIC DIAGRAM (1/20)

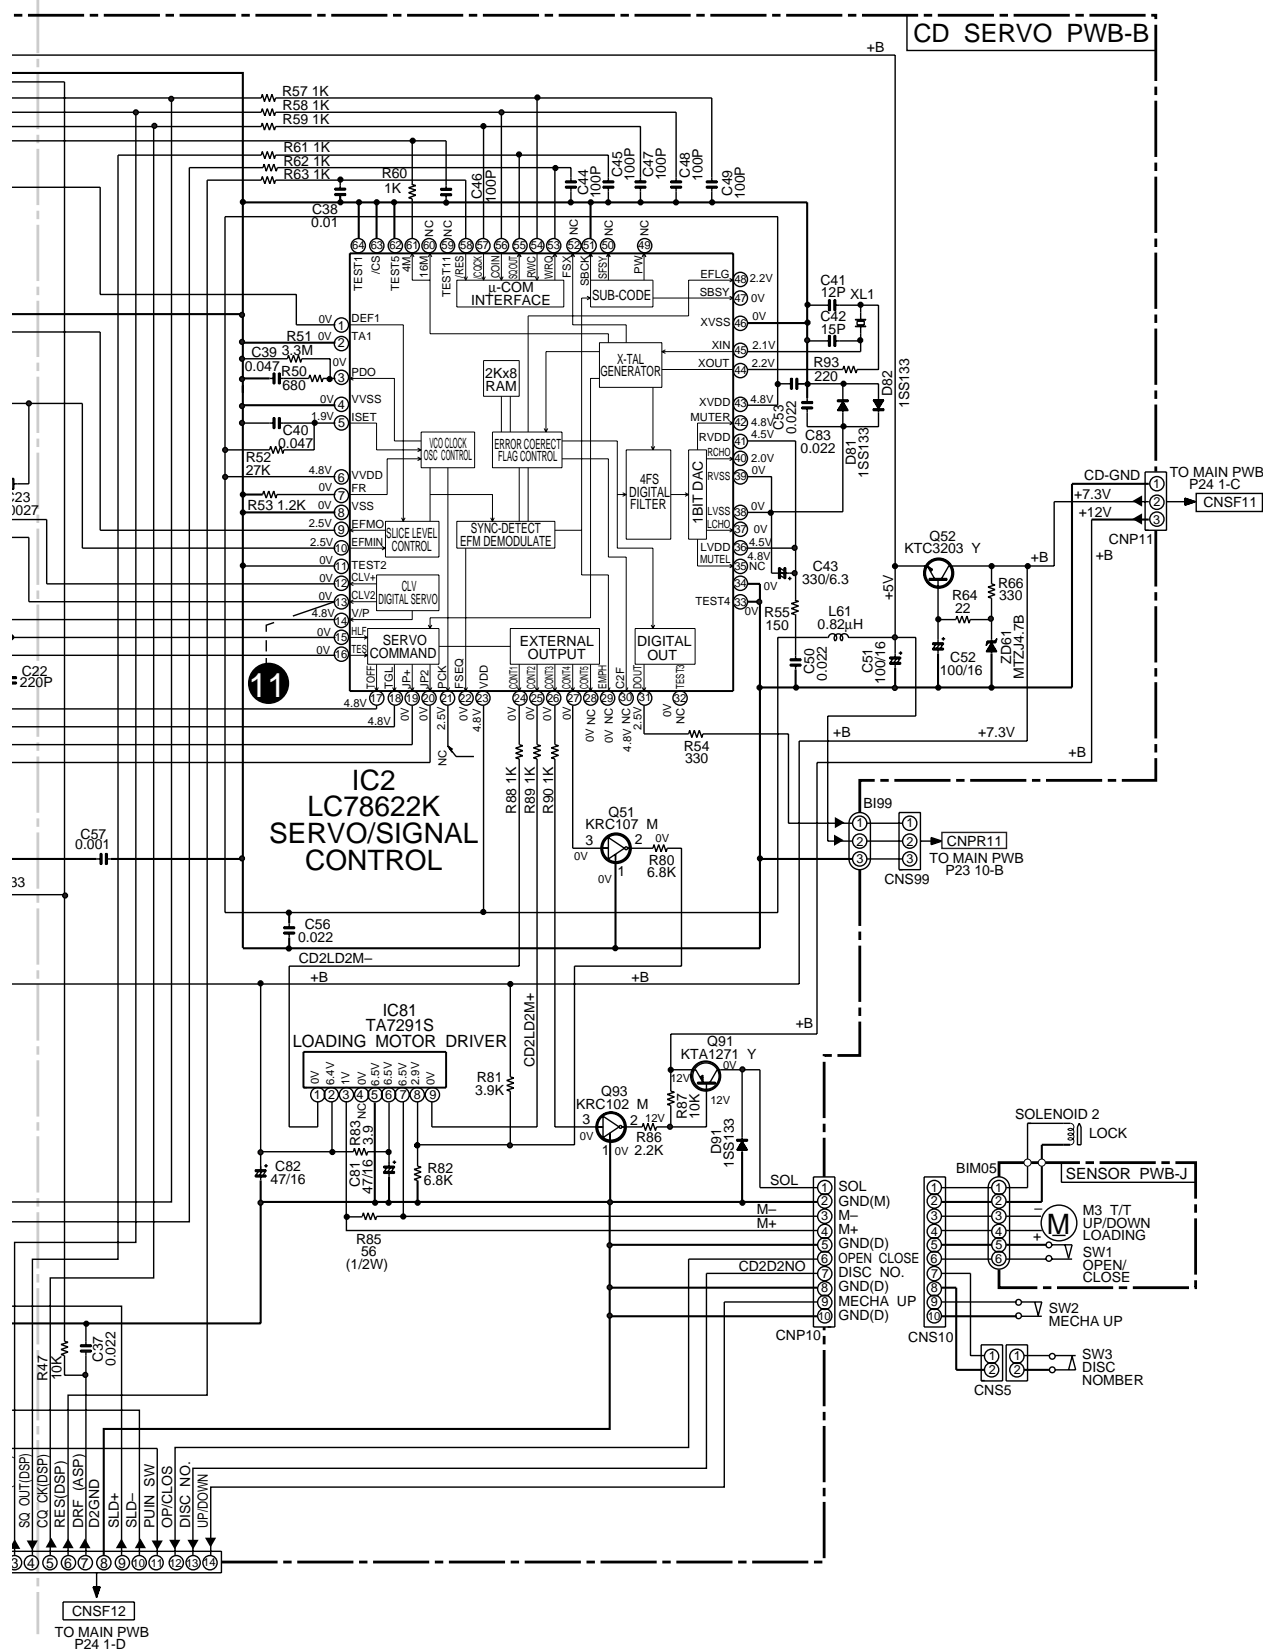

• The numbers 1 to 12 are waveform numbers shown in page 20 (CD-C492).

7	8	9	10	11	12
---	---	---	----	----	----

Figure 21 SCHEMATIC DIAGRAM (2/20)

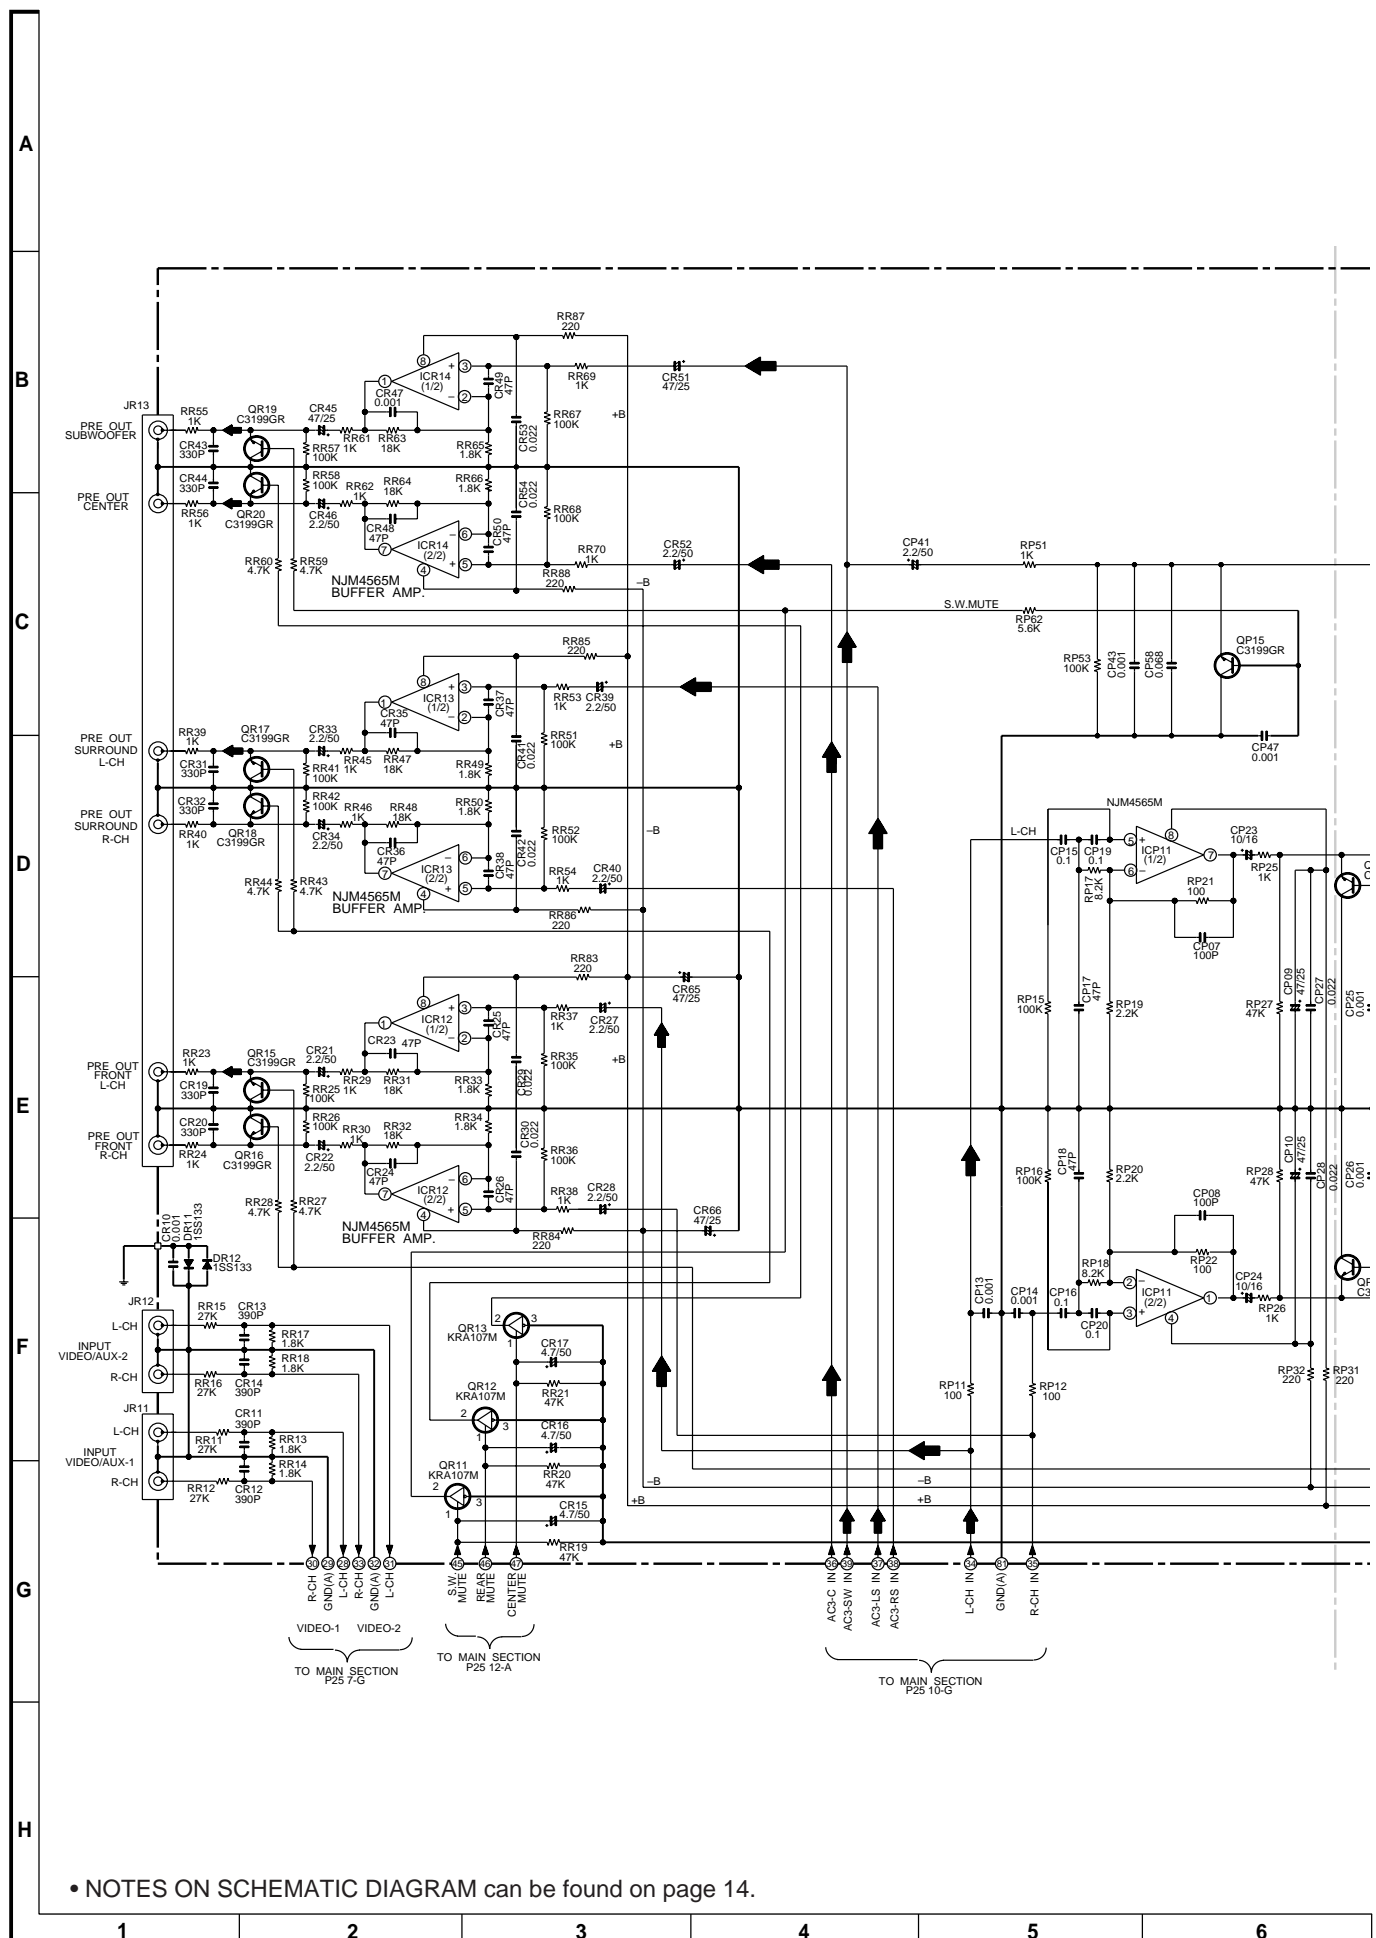


Figure 22 SCHEMATIC DIAGRAM (3/20)


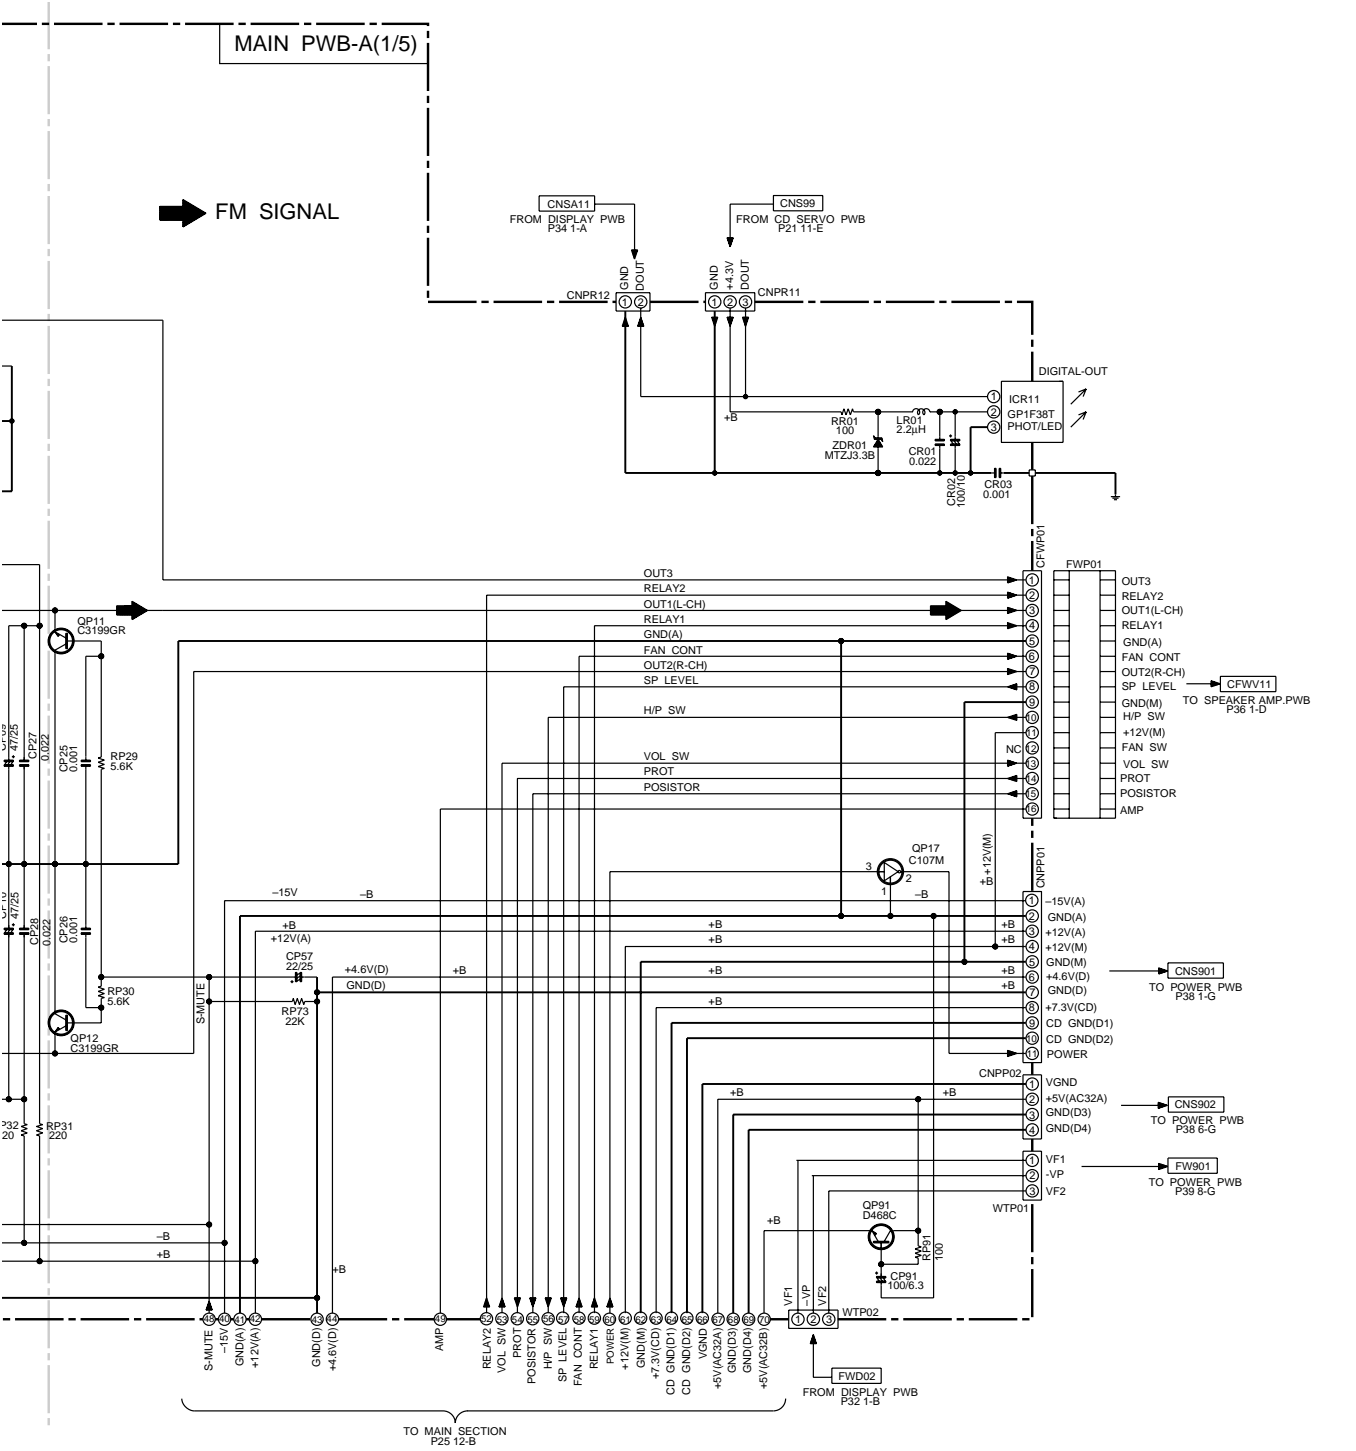


Figure 23 SCHEMATIC DIAGRAM (4/20)

- 24 -

• NOTES ON SCHEMATIC DIAGRAM can be found on page 14.

- 25 -

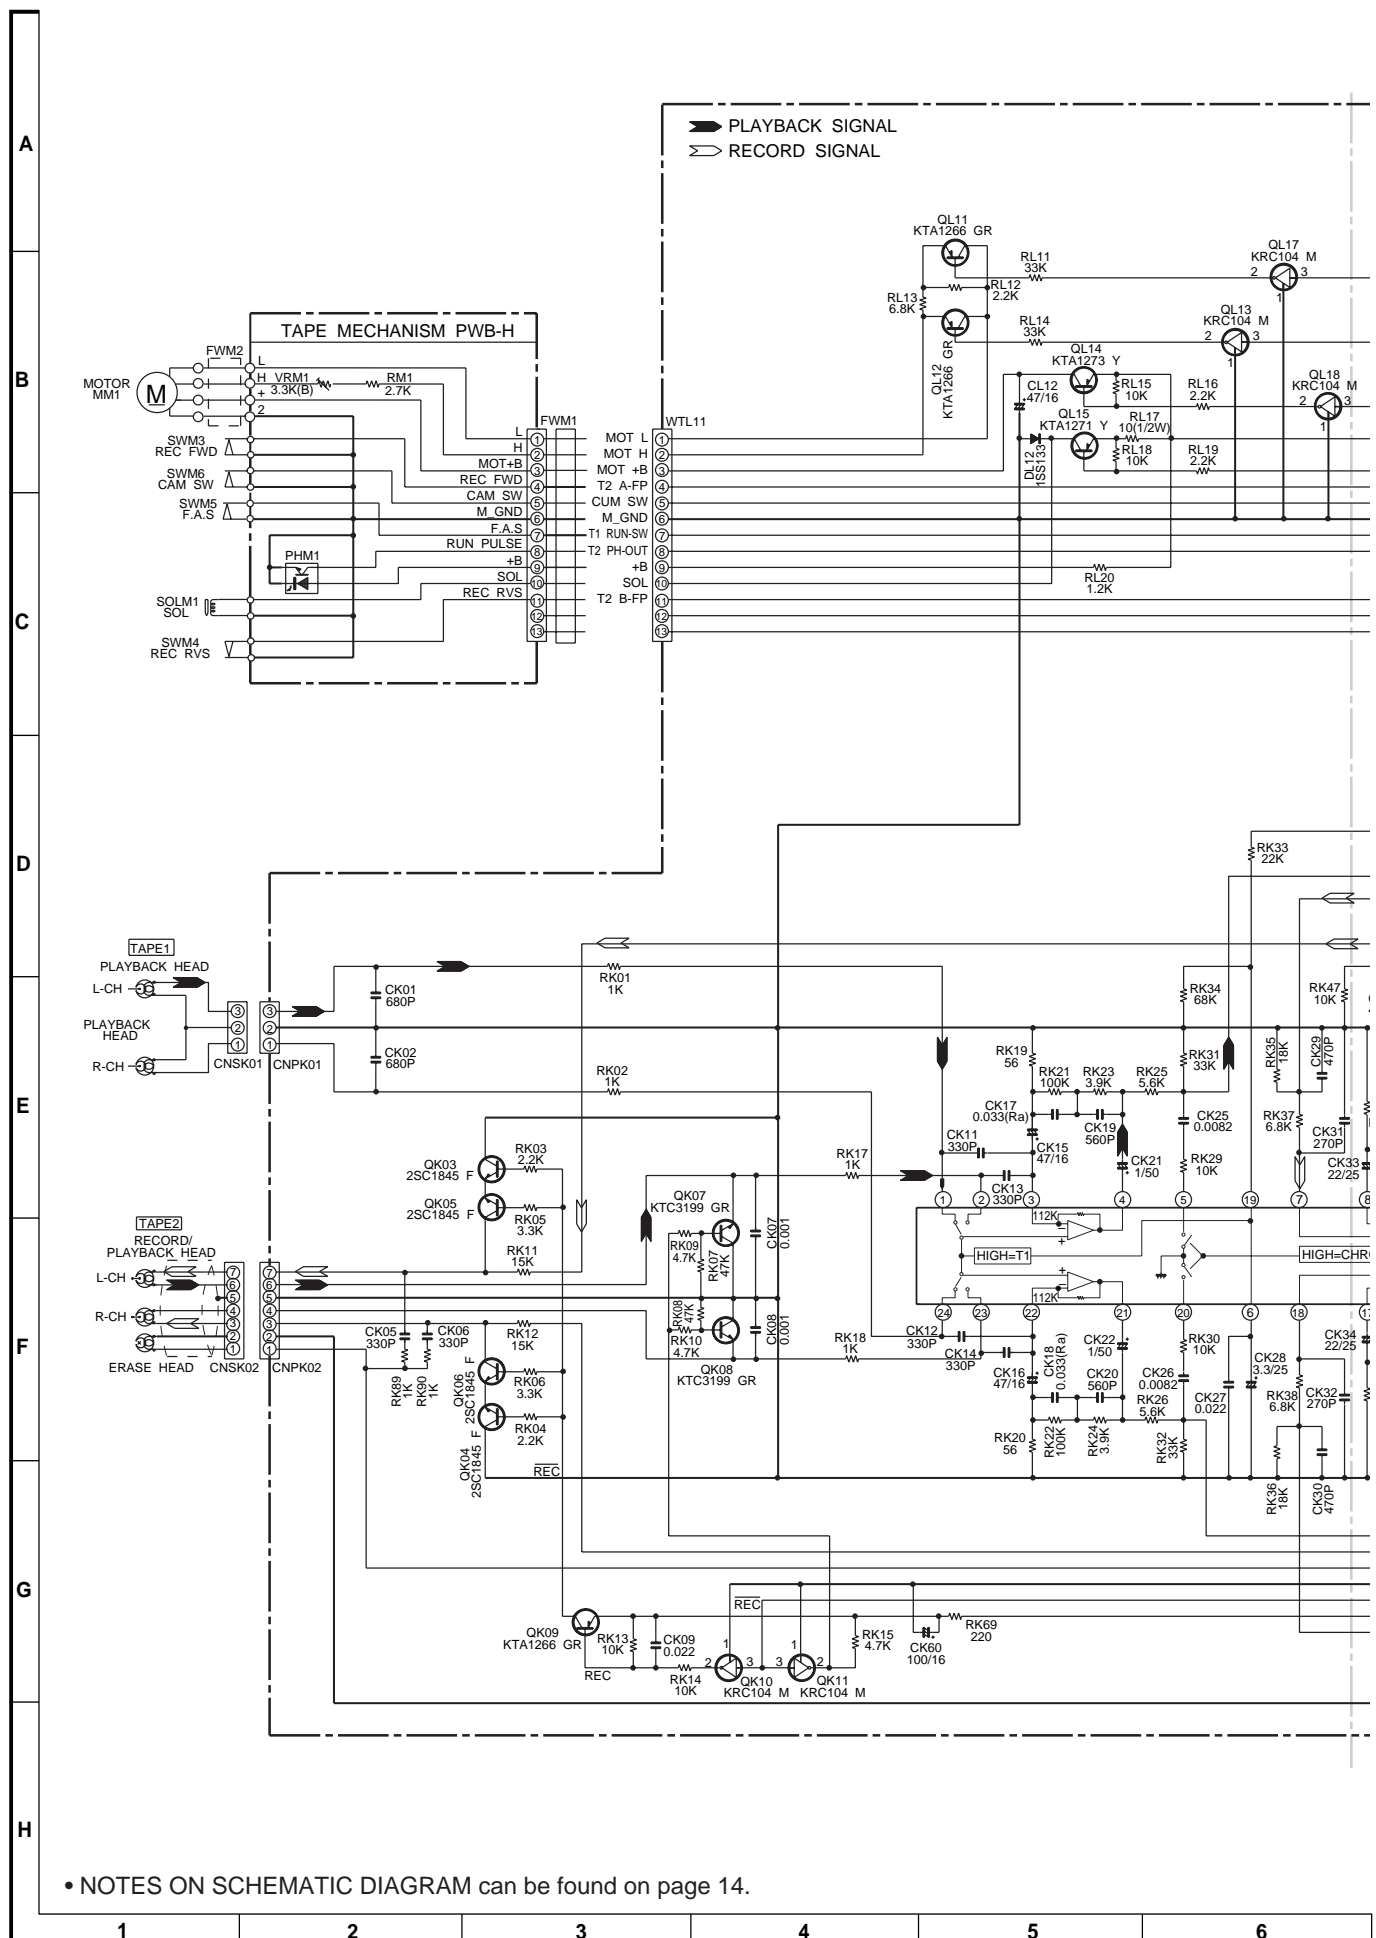

• NOTES ON SCHEMATIC DIAGRAM can be found on page 14.

Figure 26 SCHEMATIC DIAGRAM (7/20)



- 27 -



- 28 -

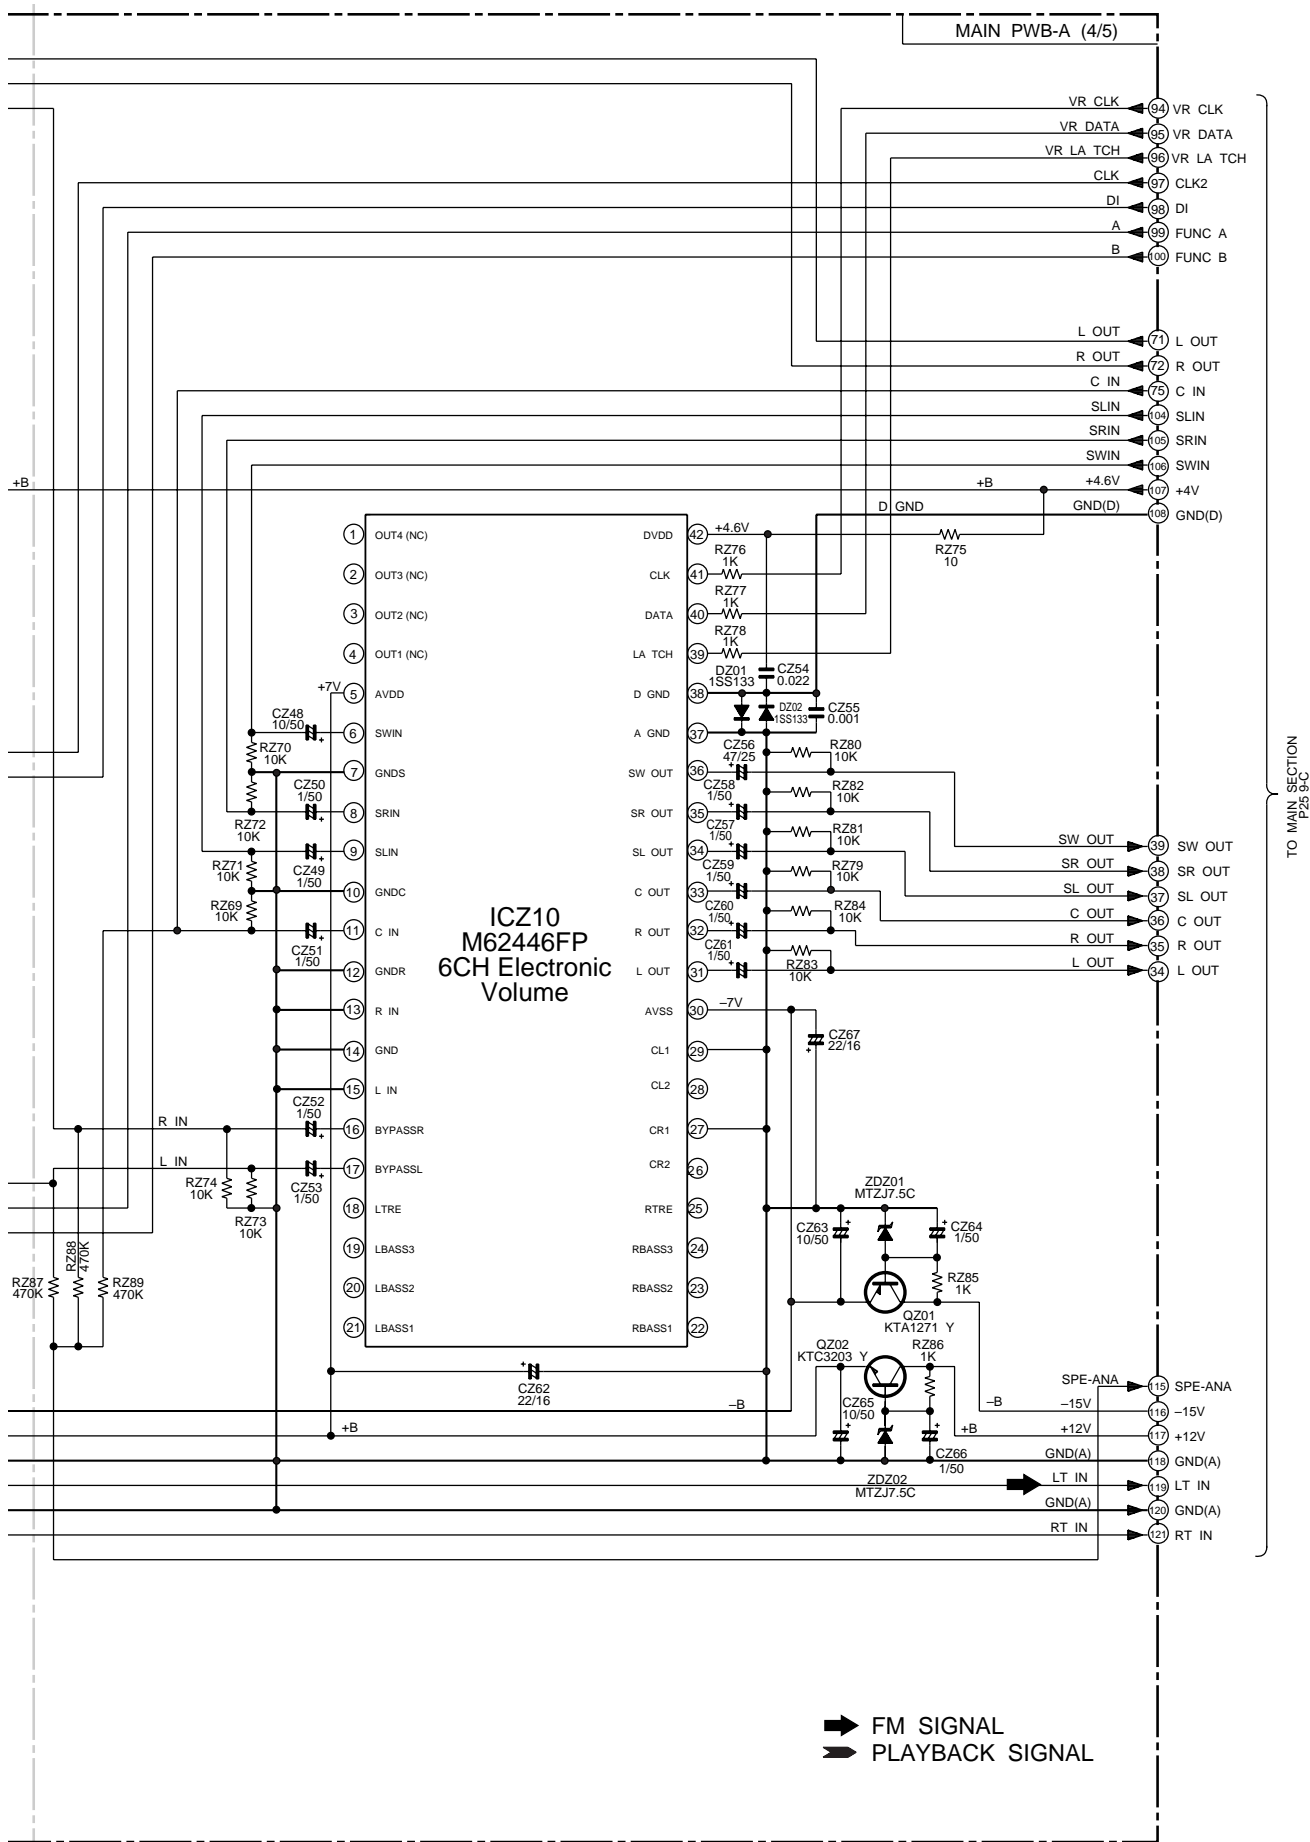


Figure 29 SCHEMATIC DIAGRAM (10/20)

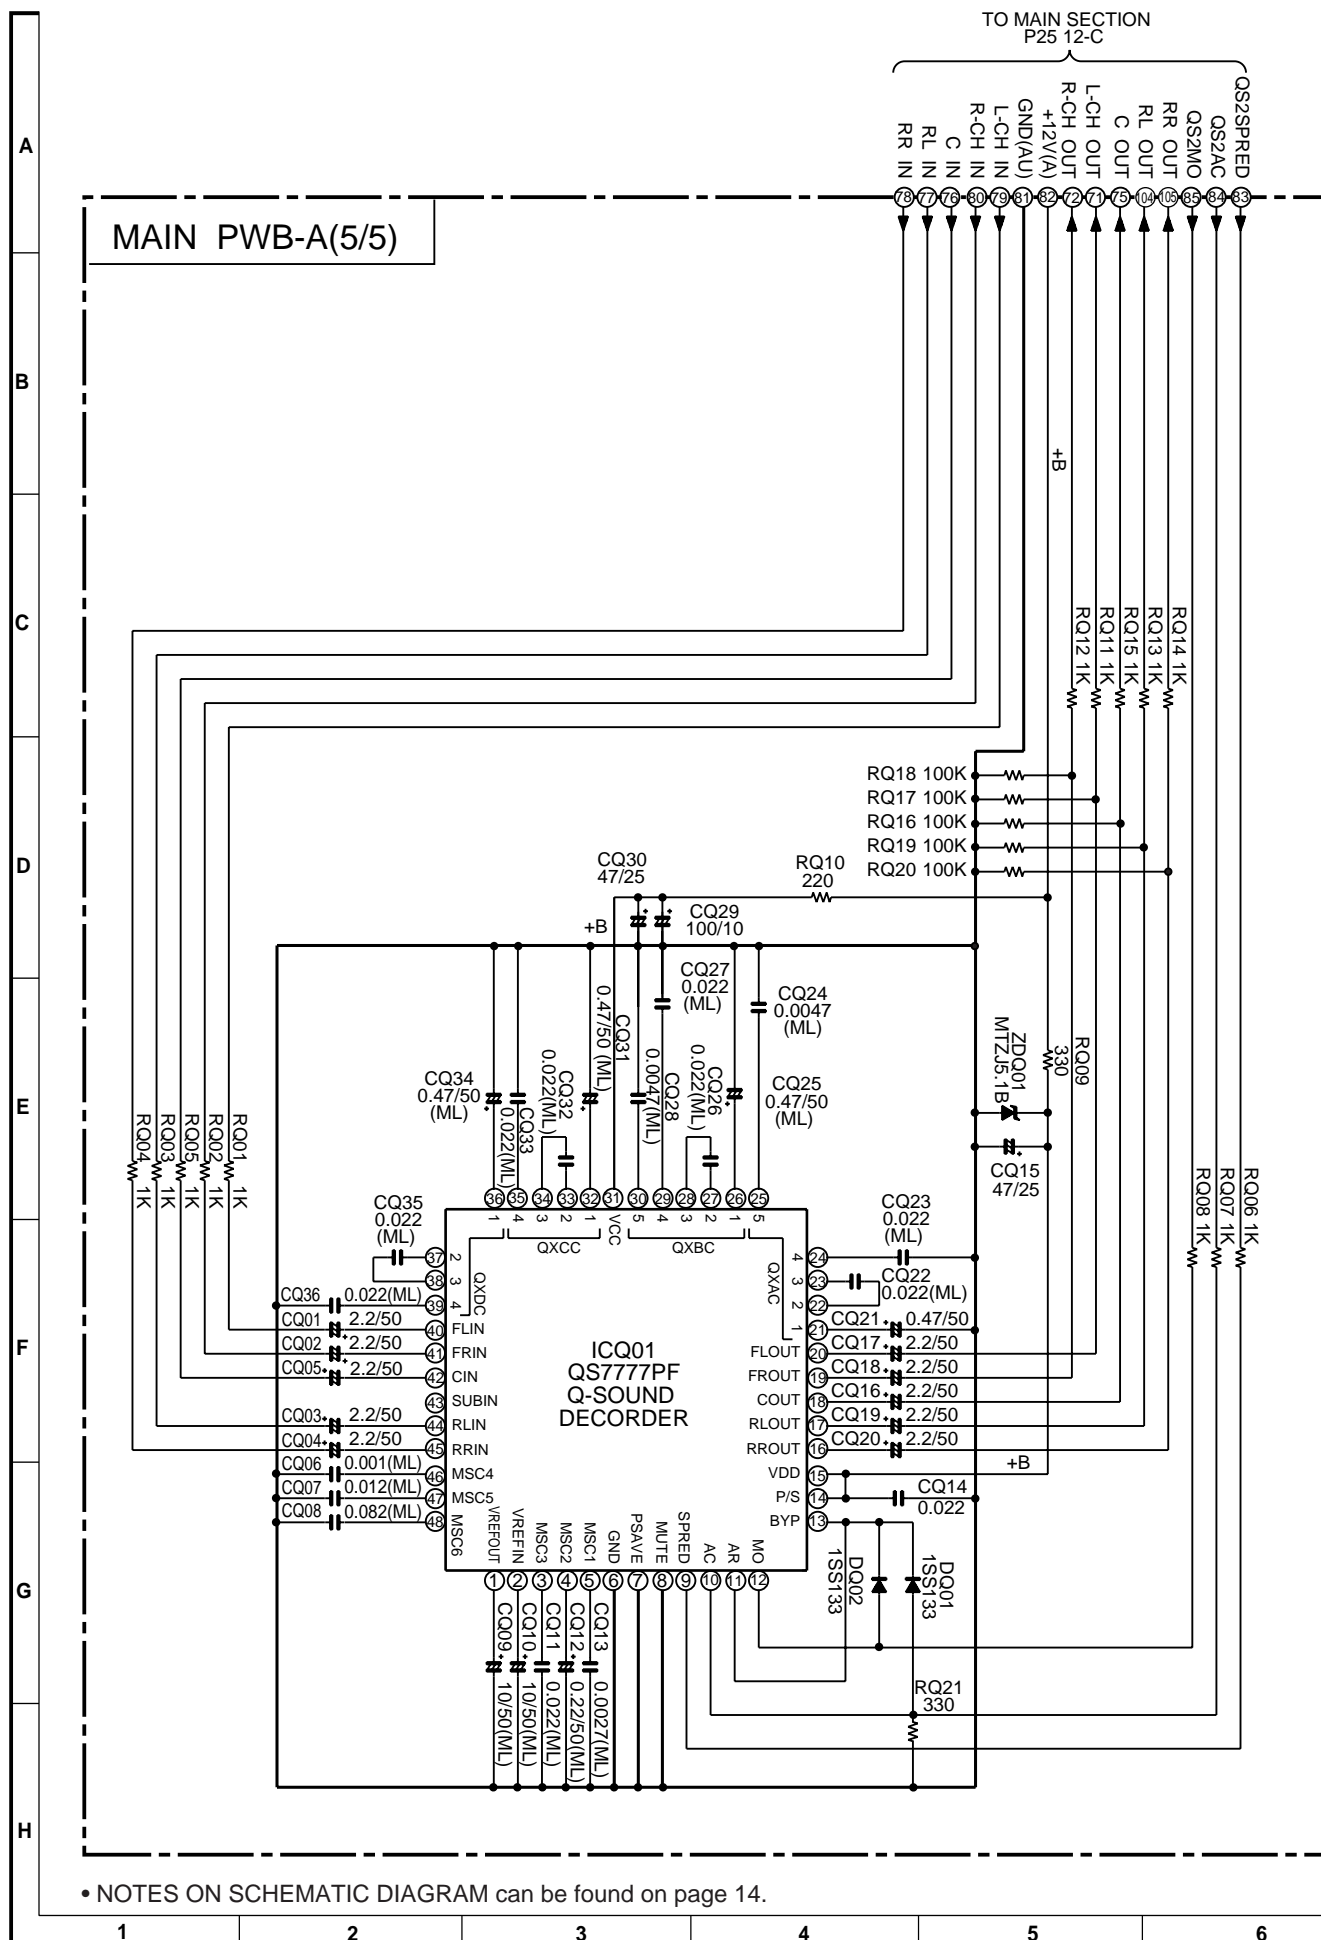


Figure 30 SCHEMATIC DIAGRAM (11/20)



- 31 -

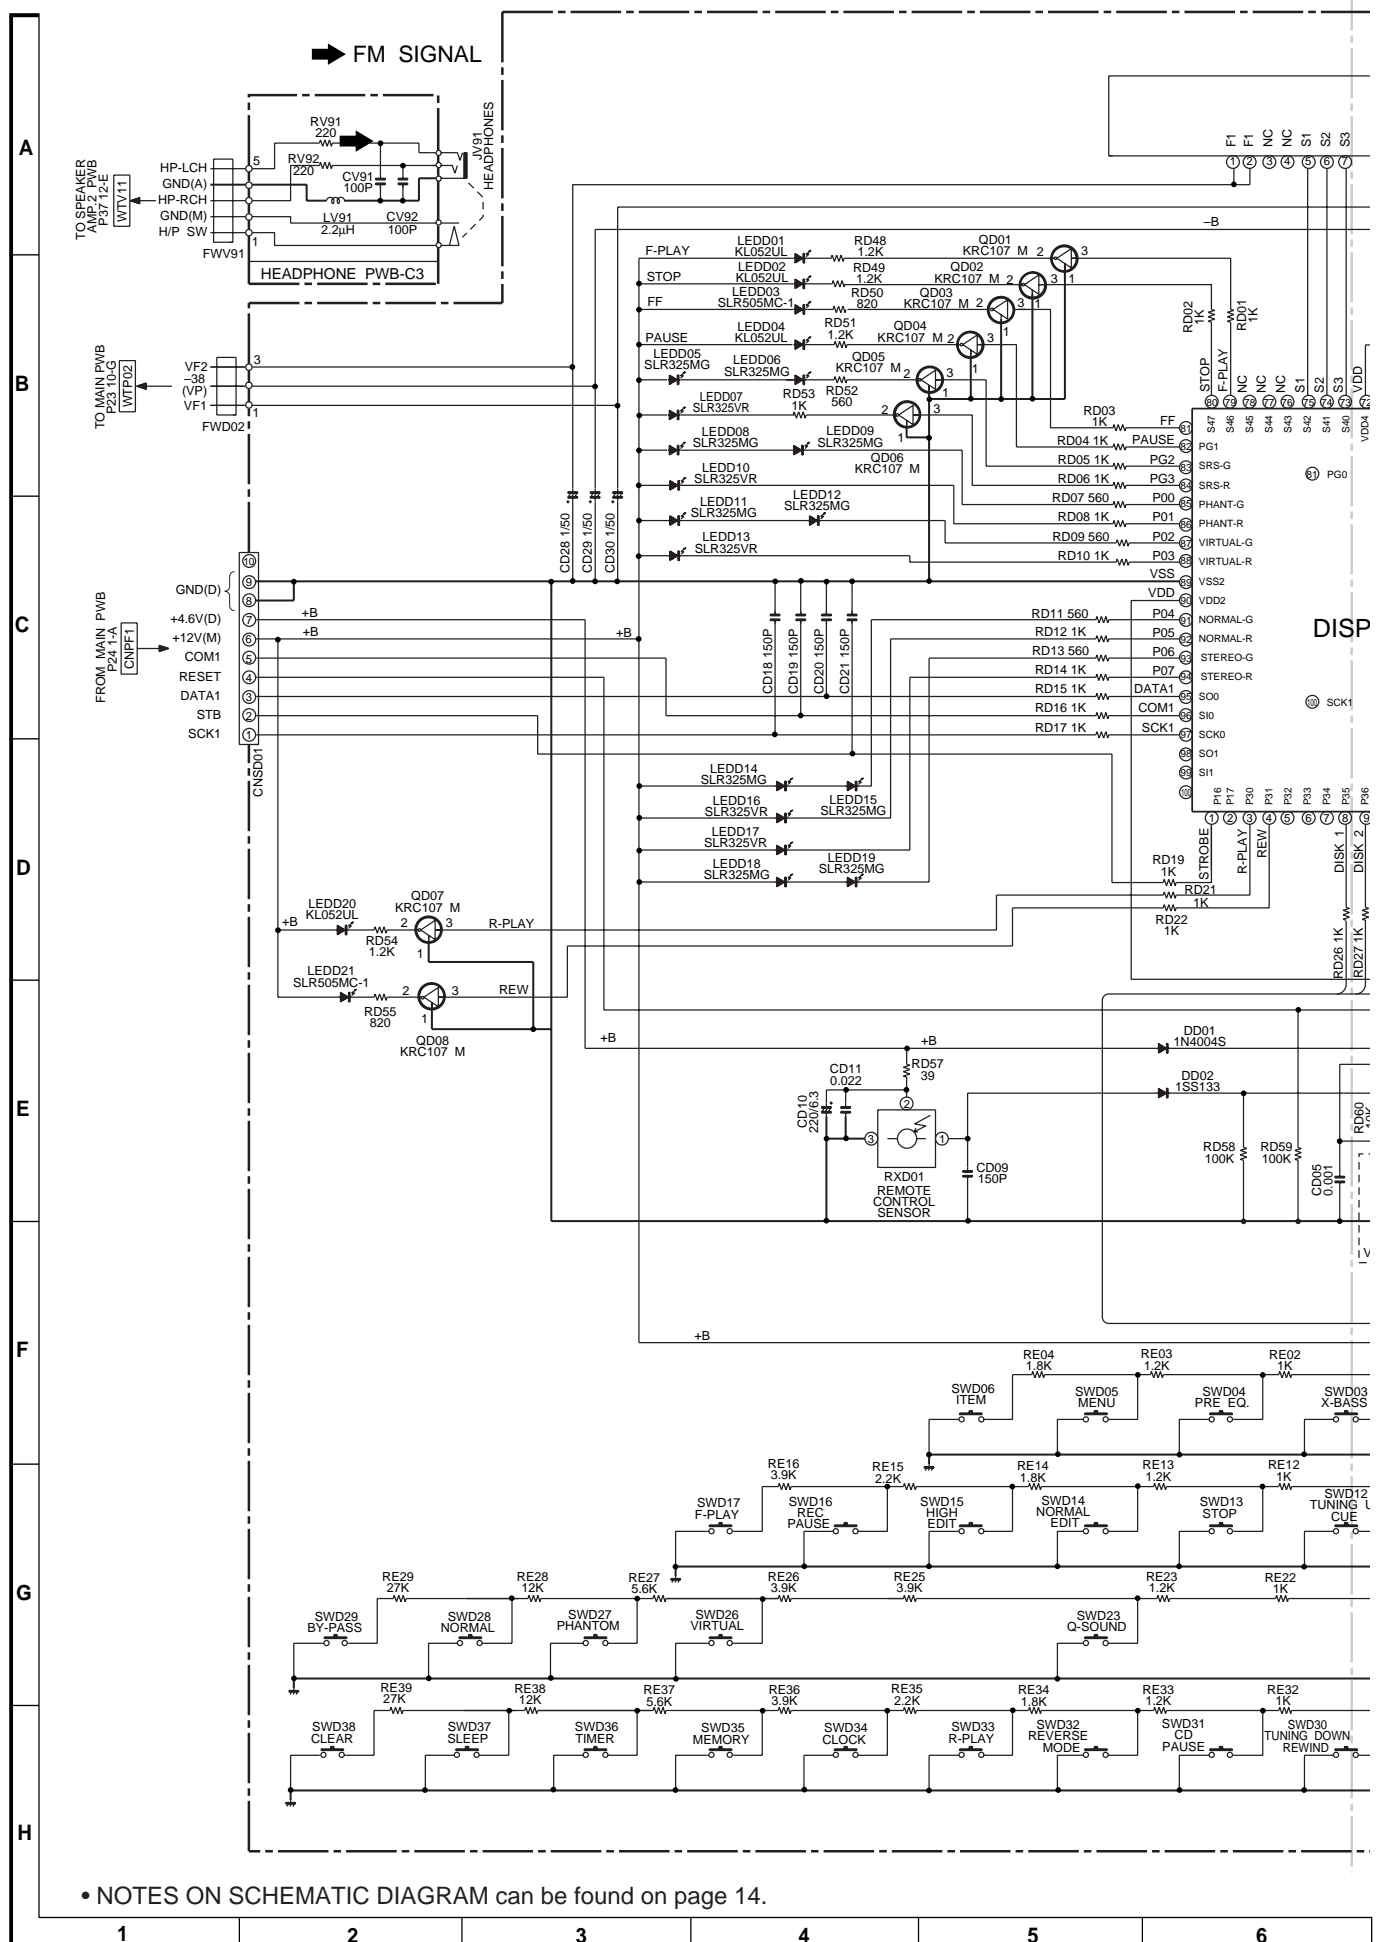


Figure 32 SCHEMATIC DIAGRAM (13/20)

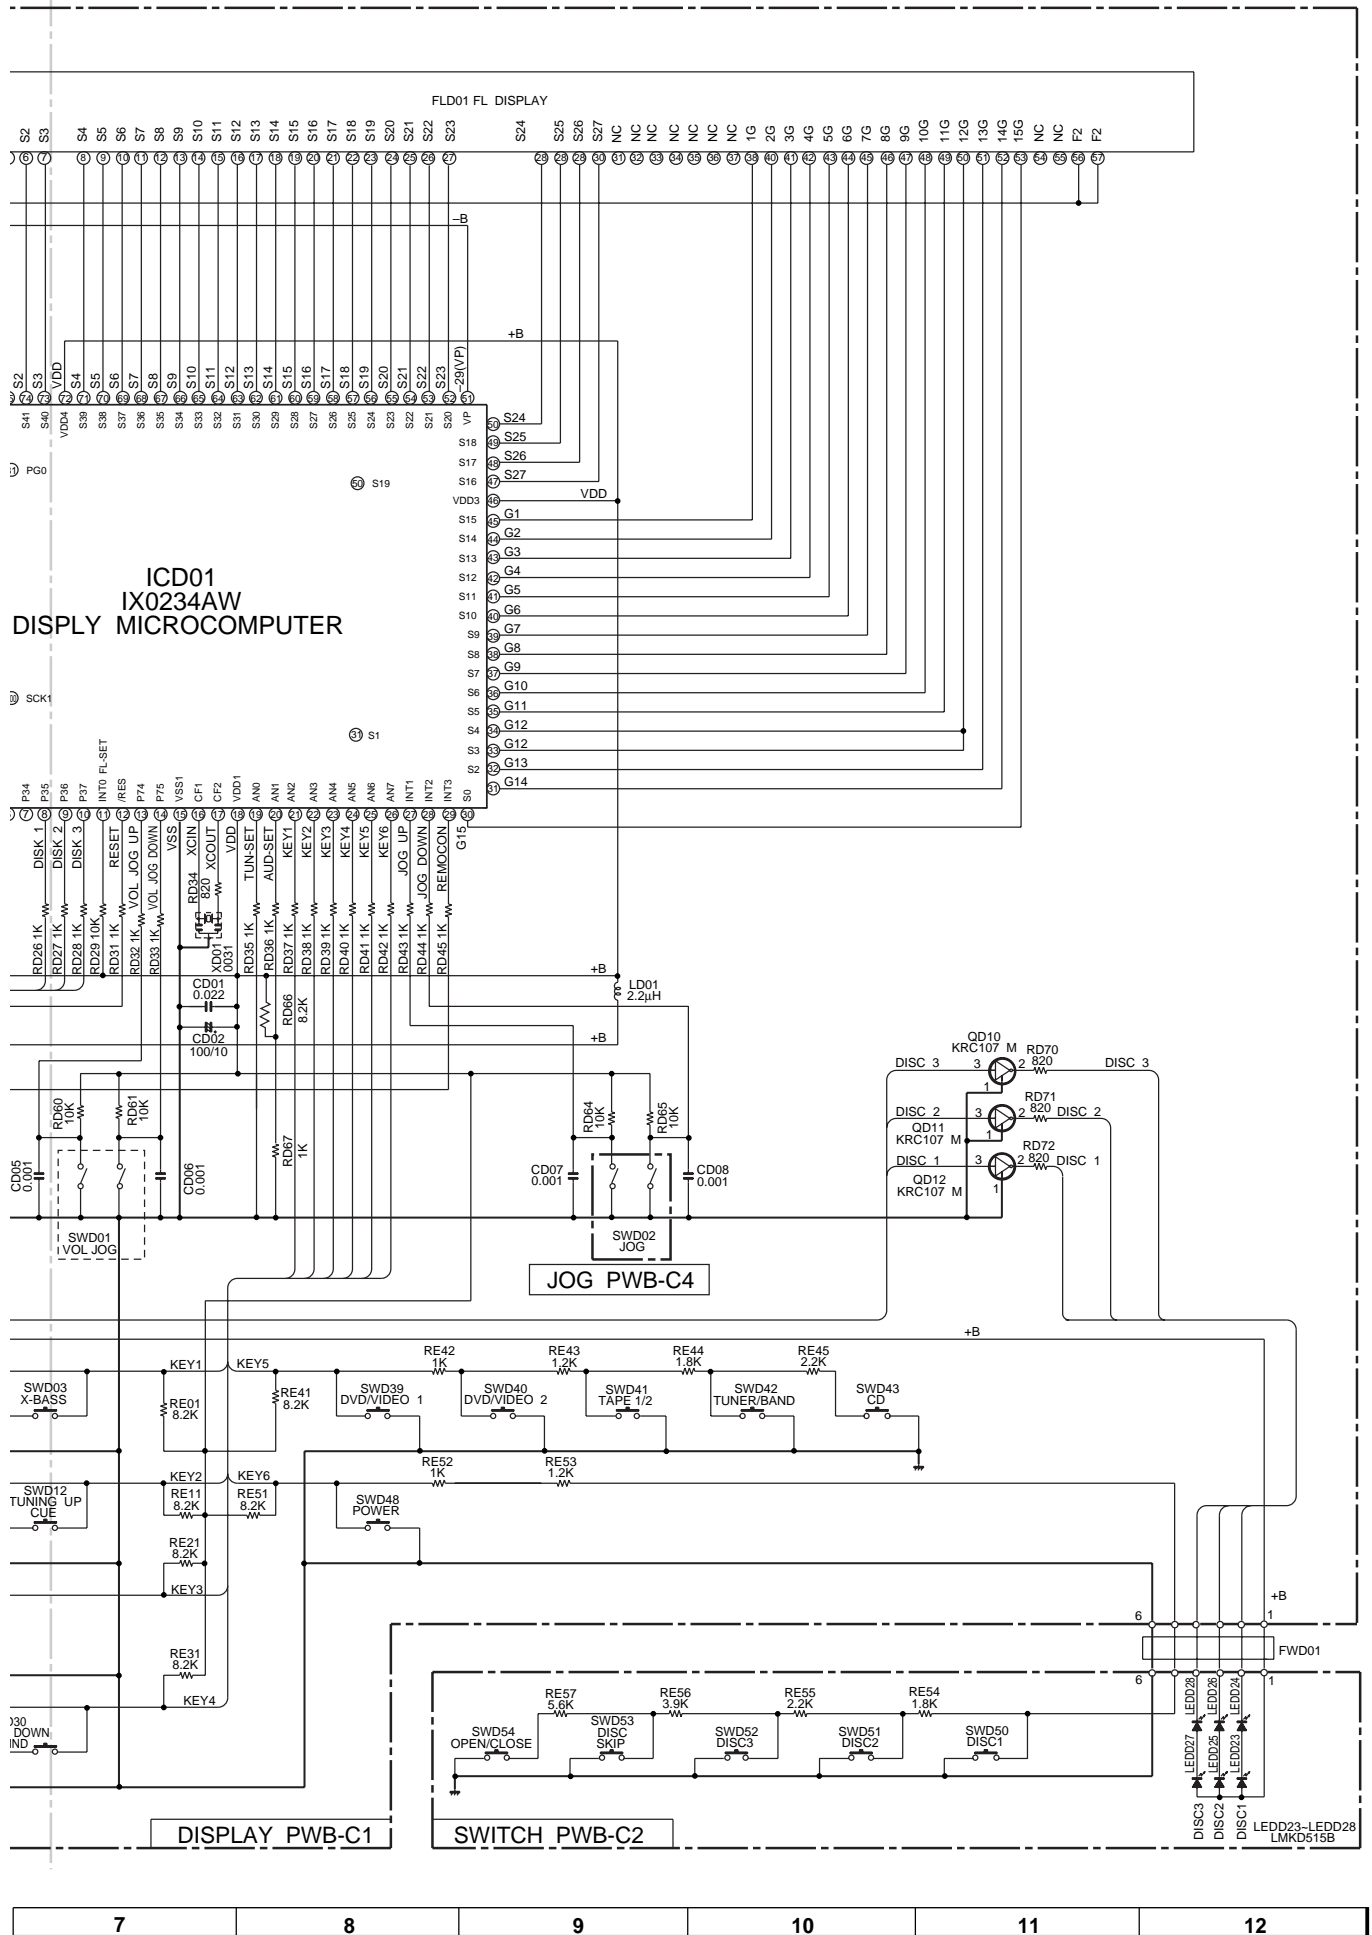


Figure 33 SCHEMATIC DIAGRAM (14/20)

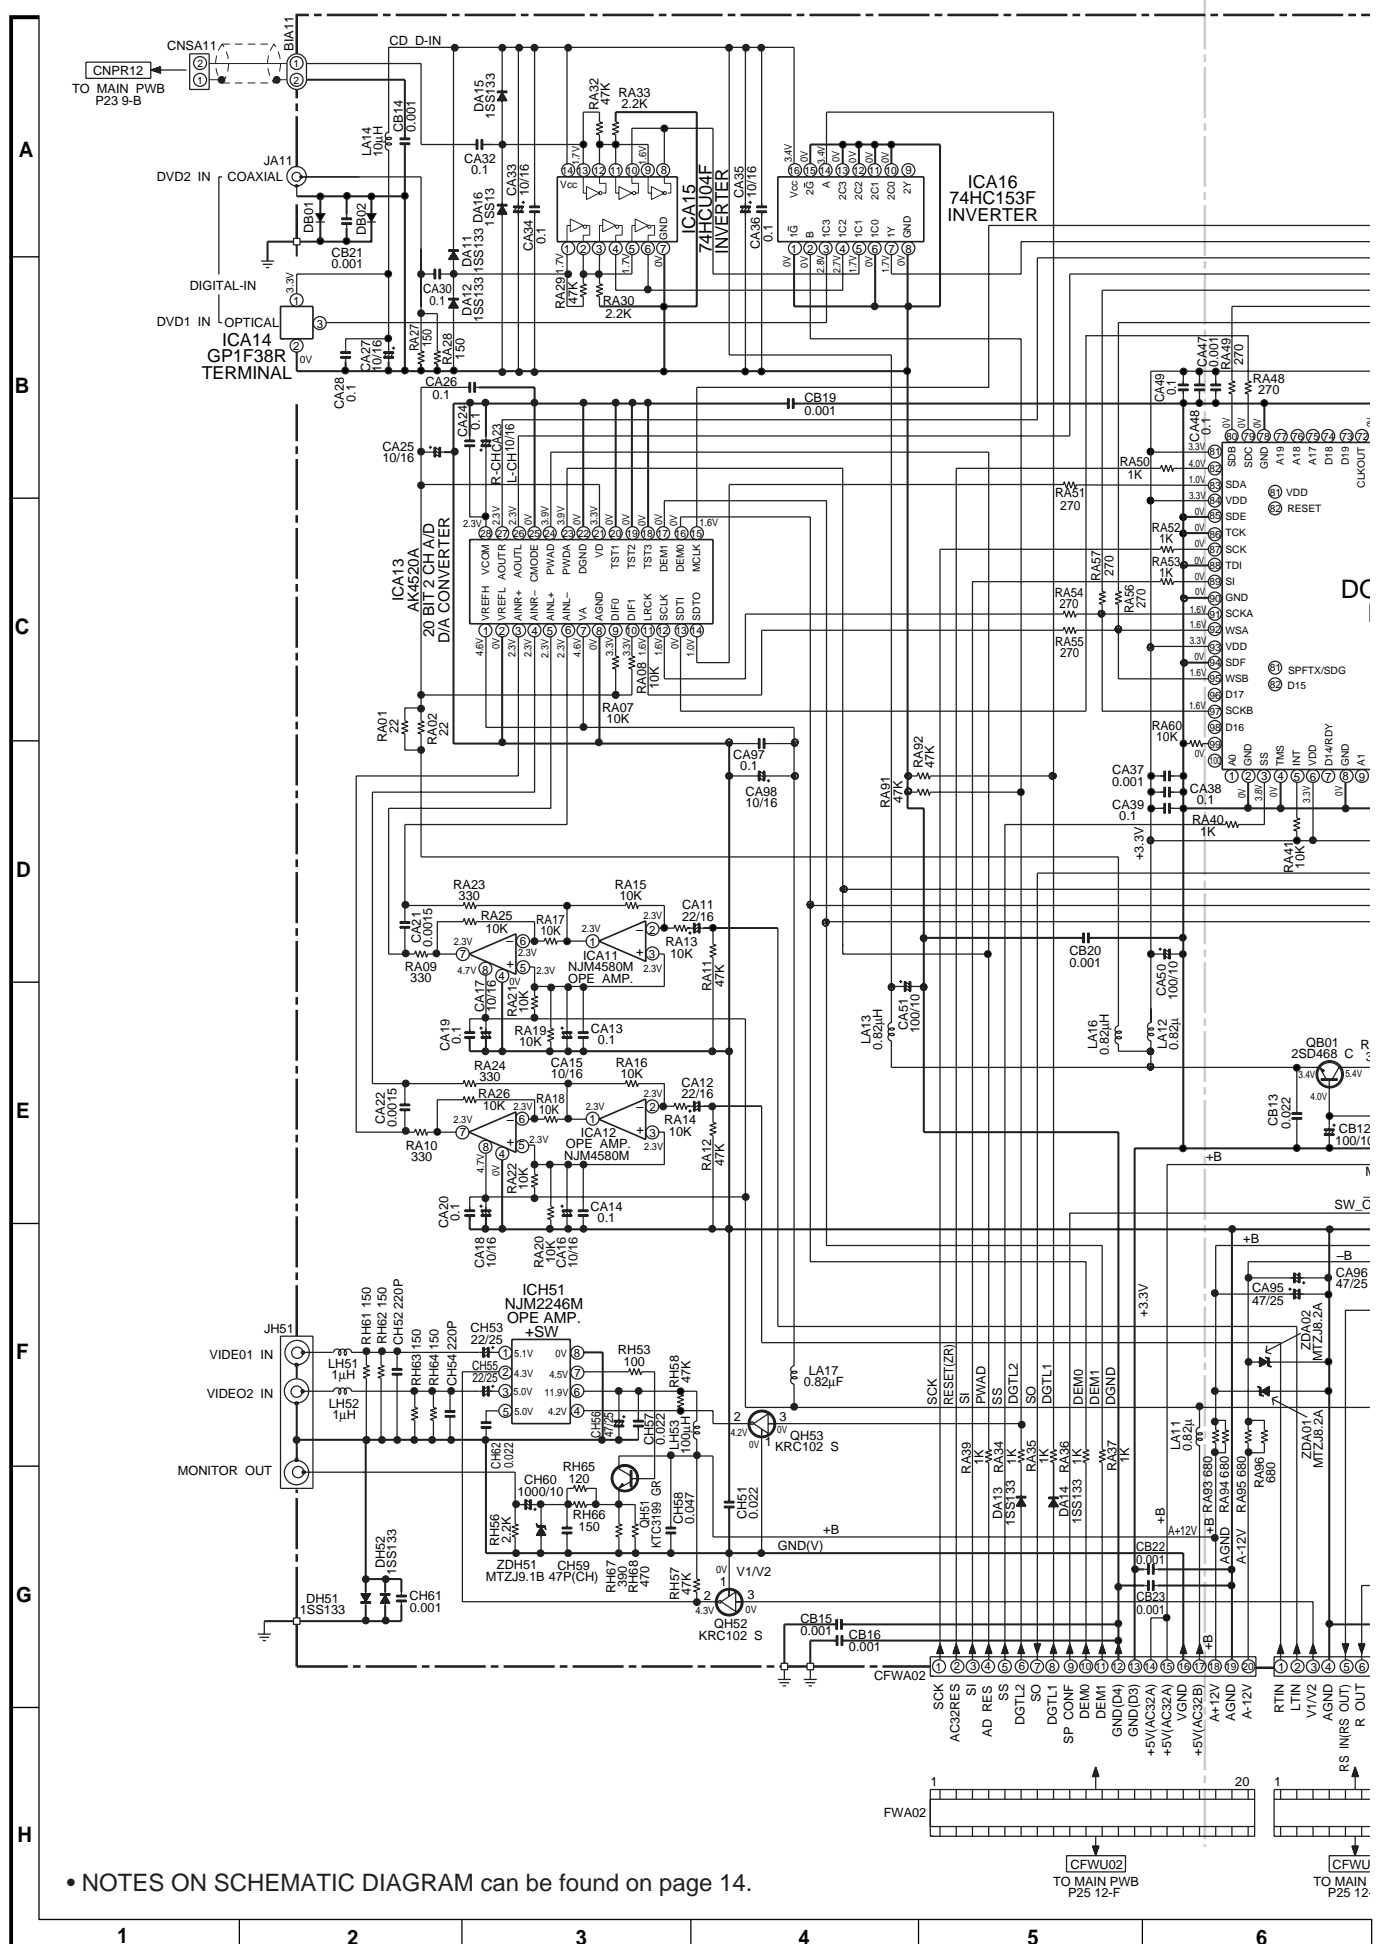


Figure 34 SCHEMATIC DIAGRAM (15/20)

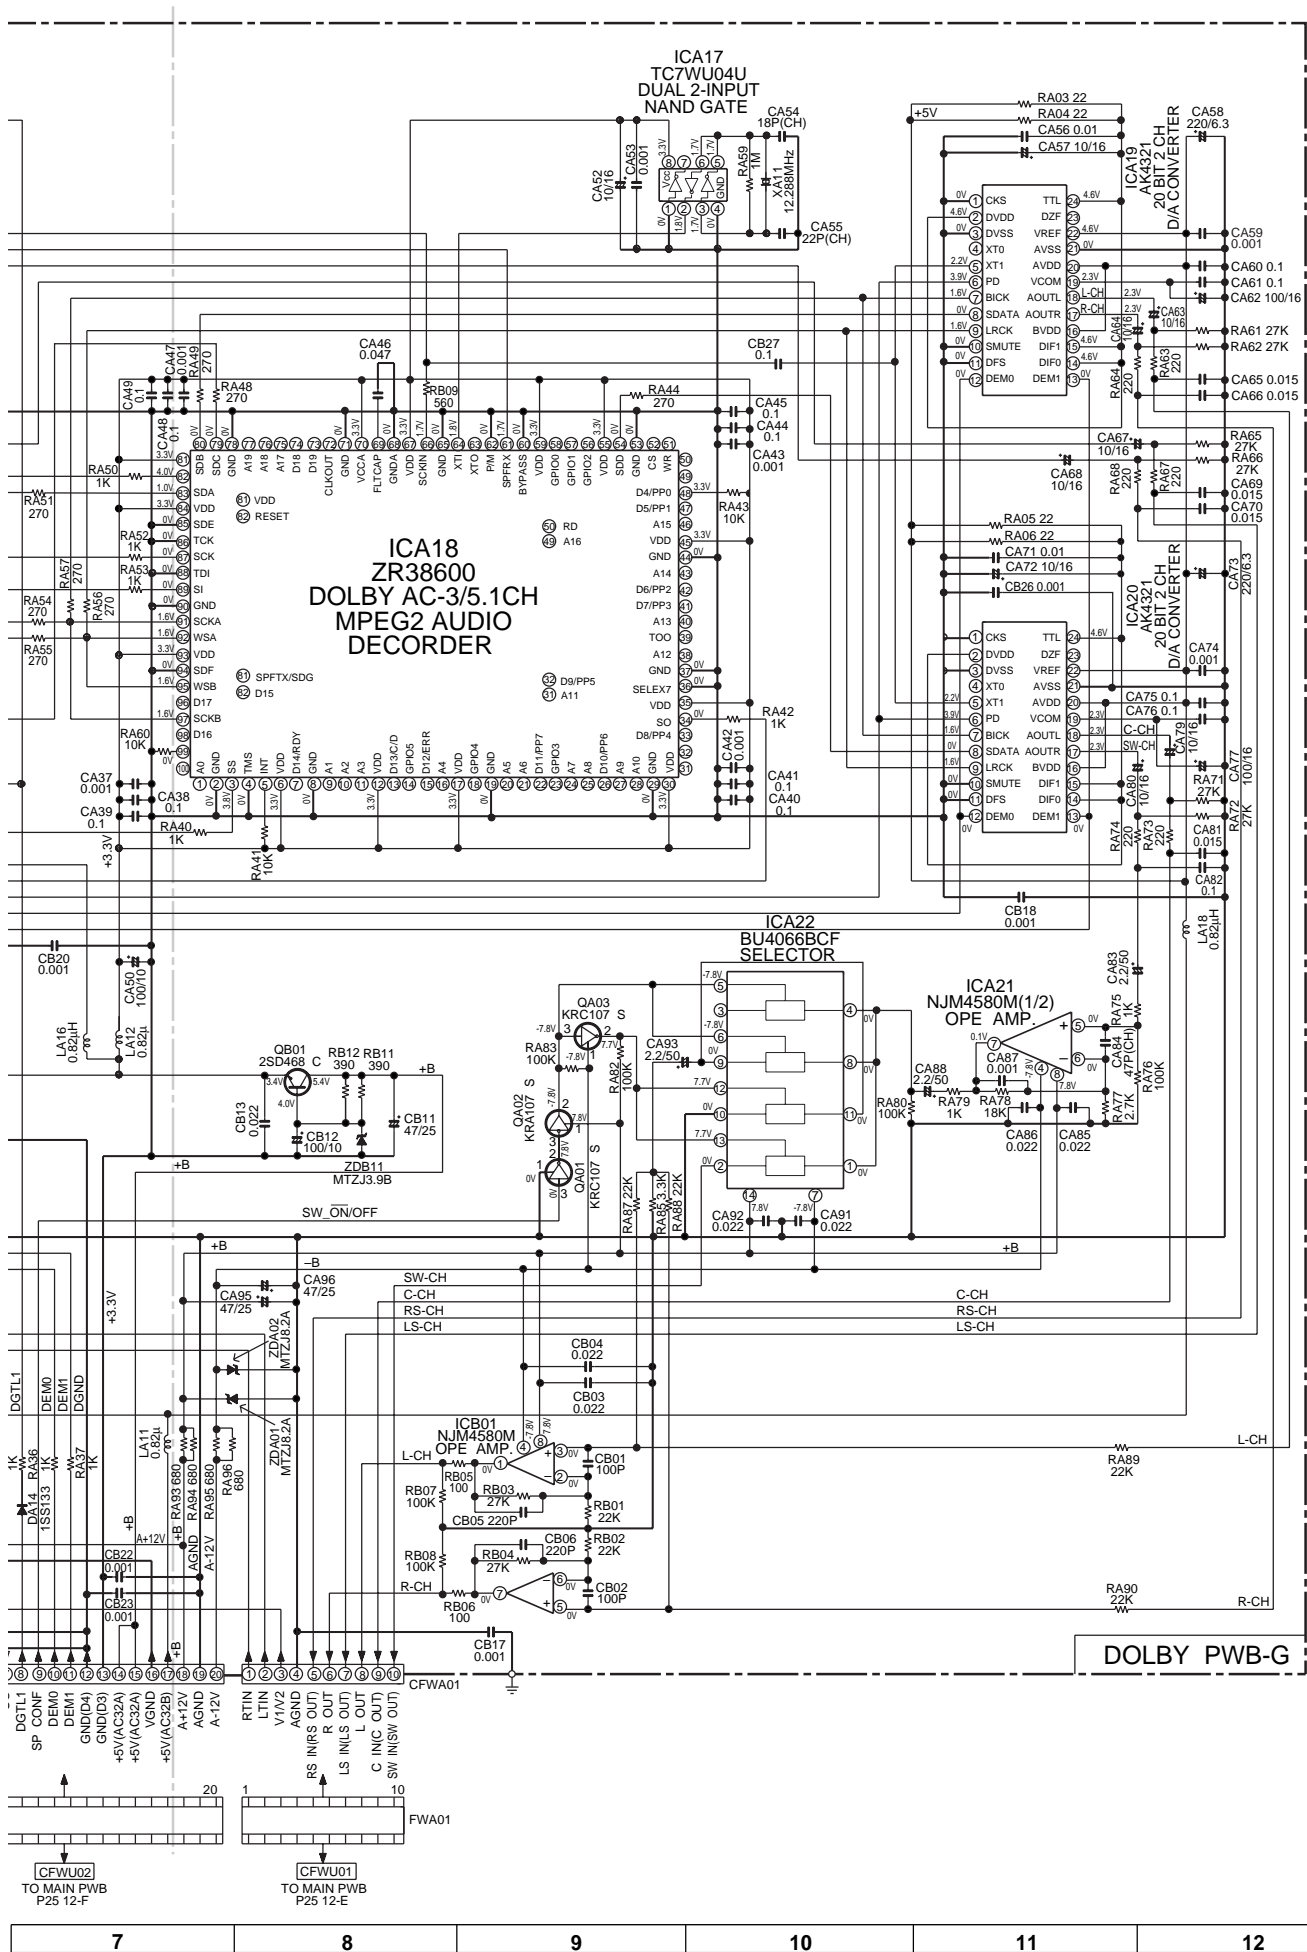


Figure 35 SCHEMATIC DIAGRAM (16/20)


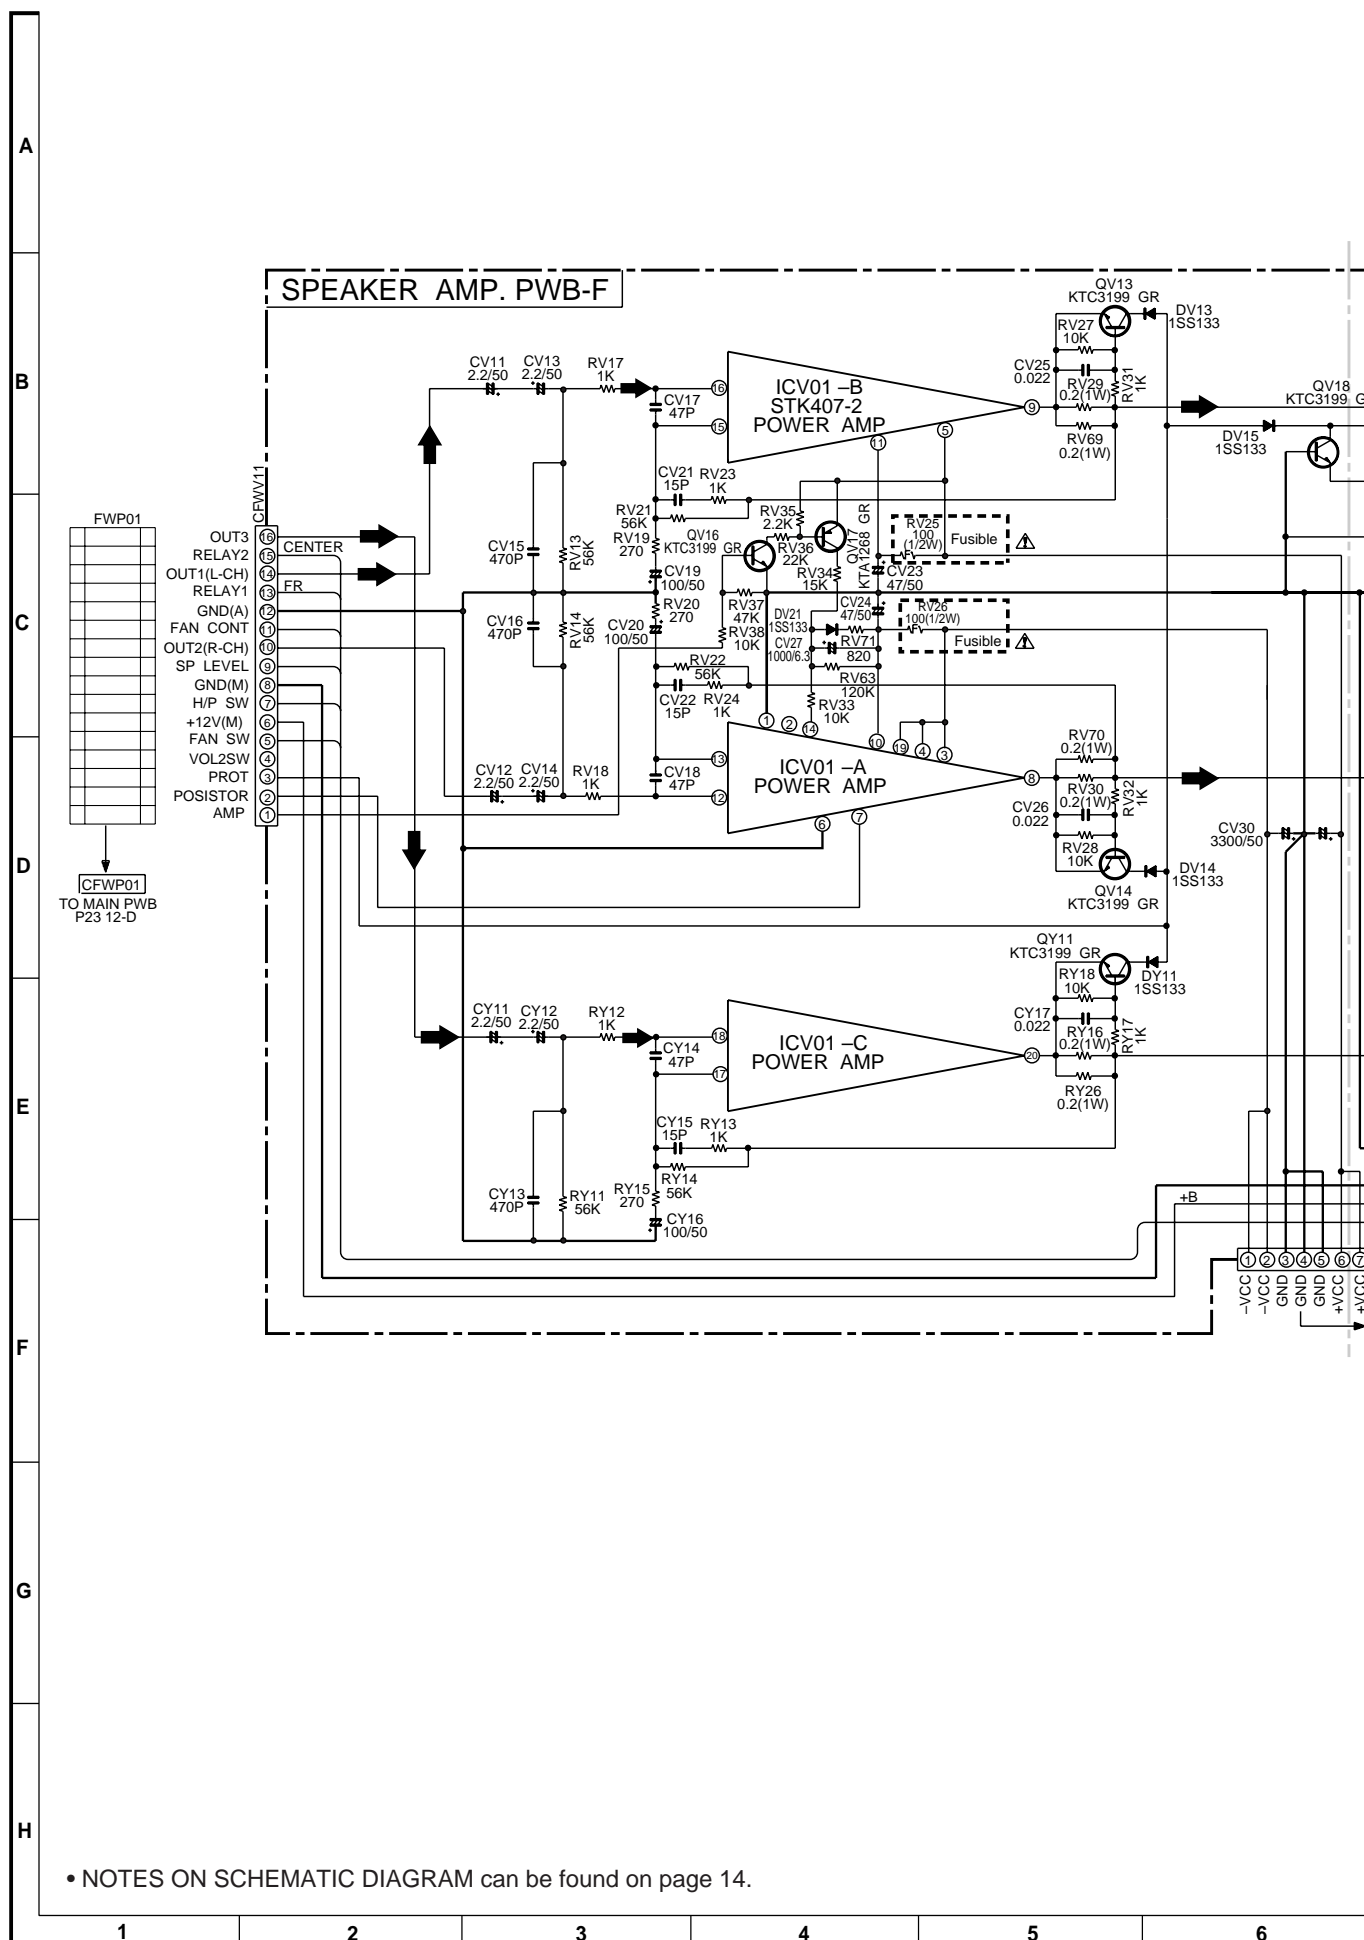



Figure 36 SCHEMATIC DIAGRAM (17/20)



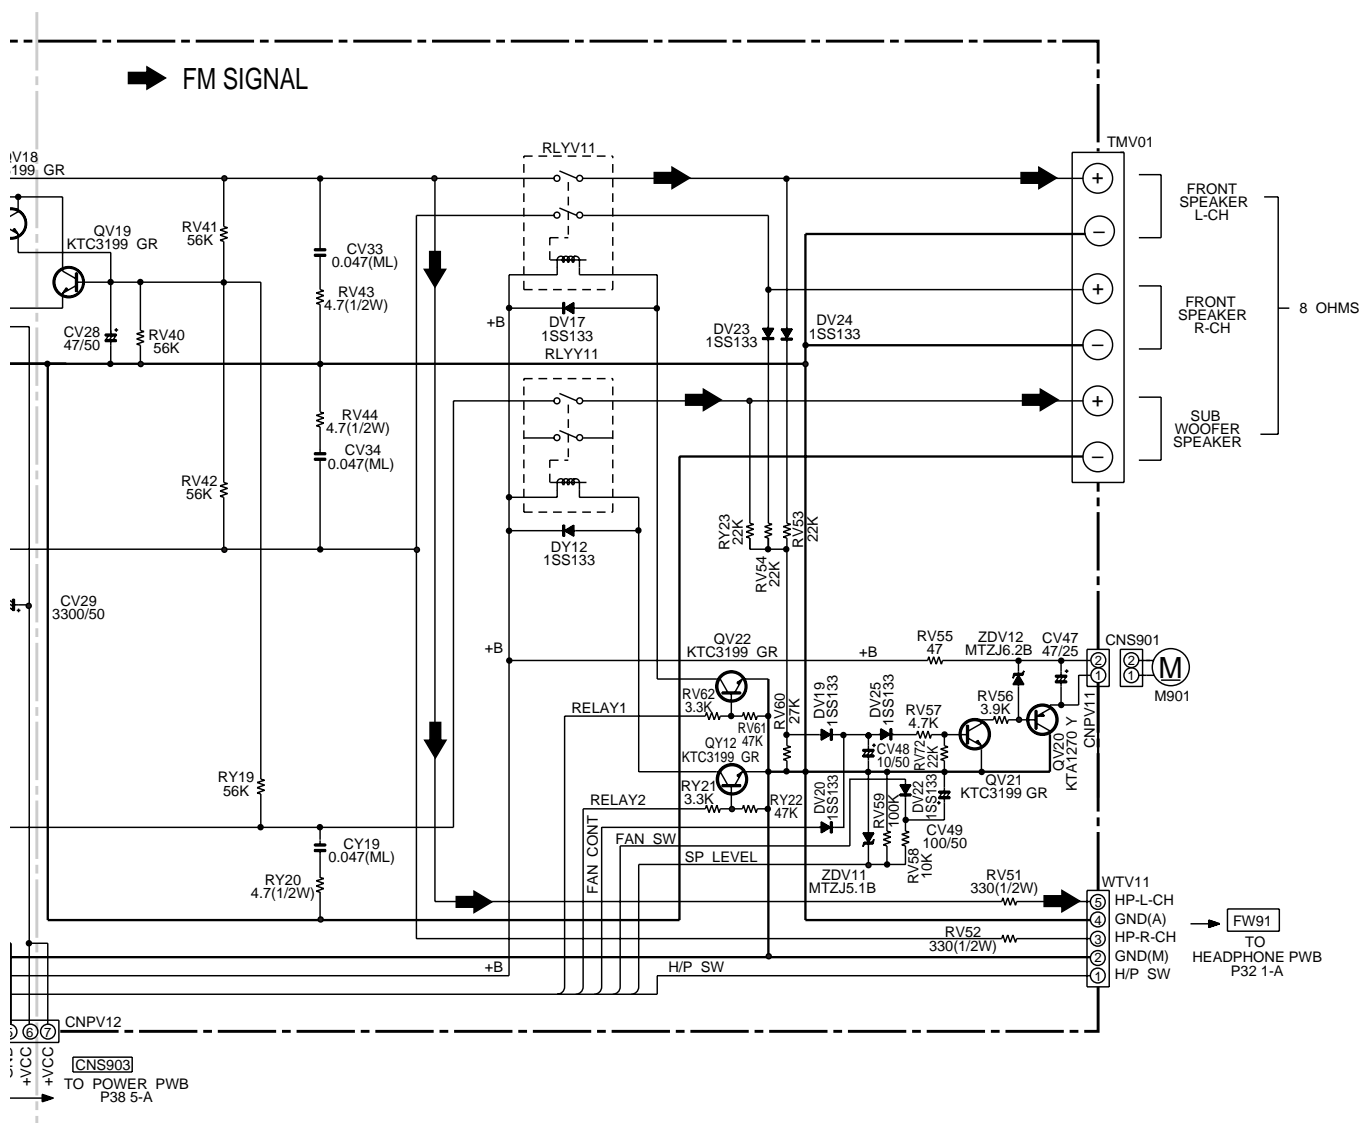

- 38 -

- 39 -

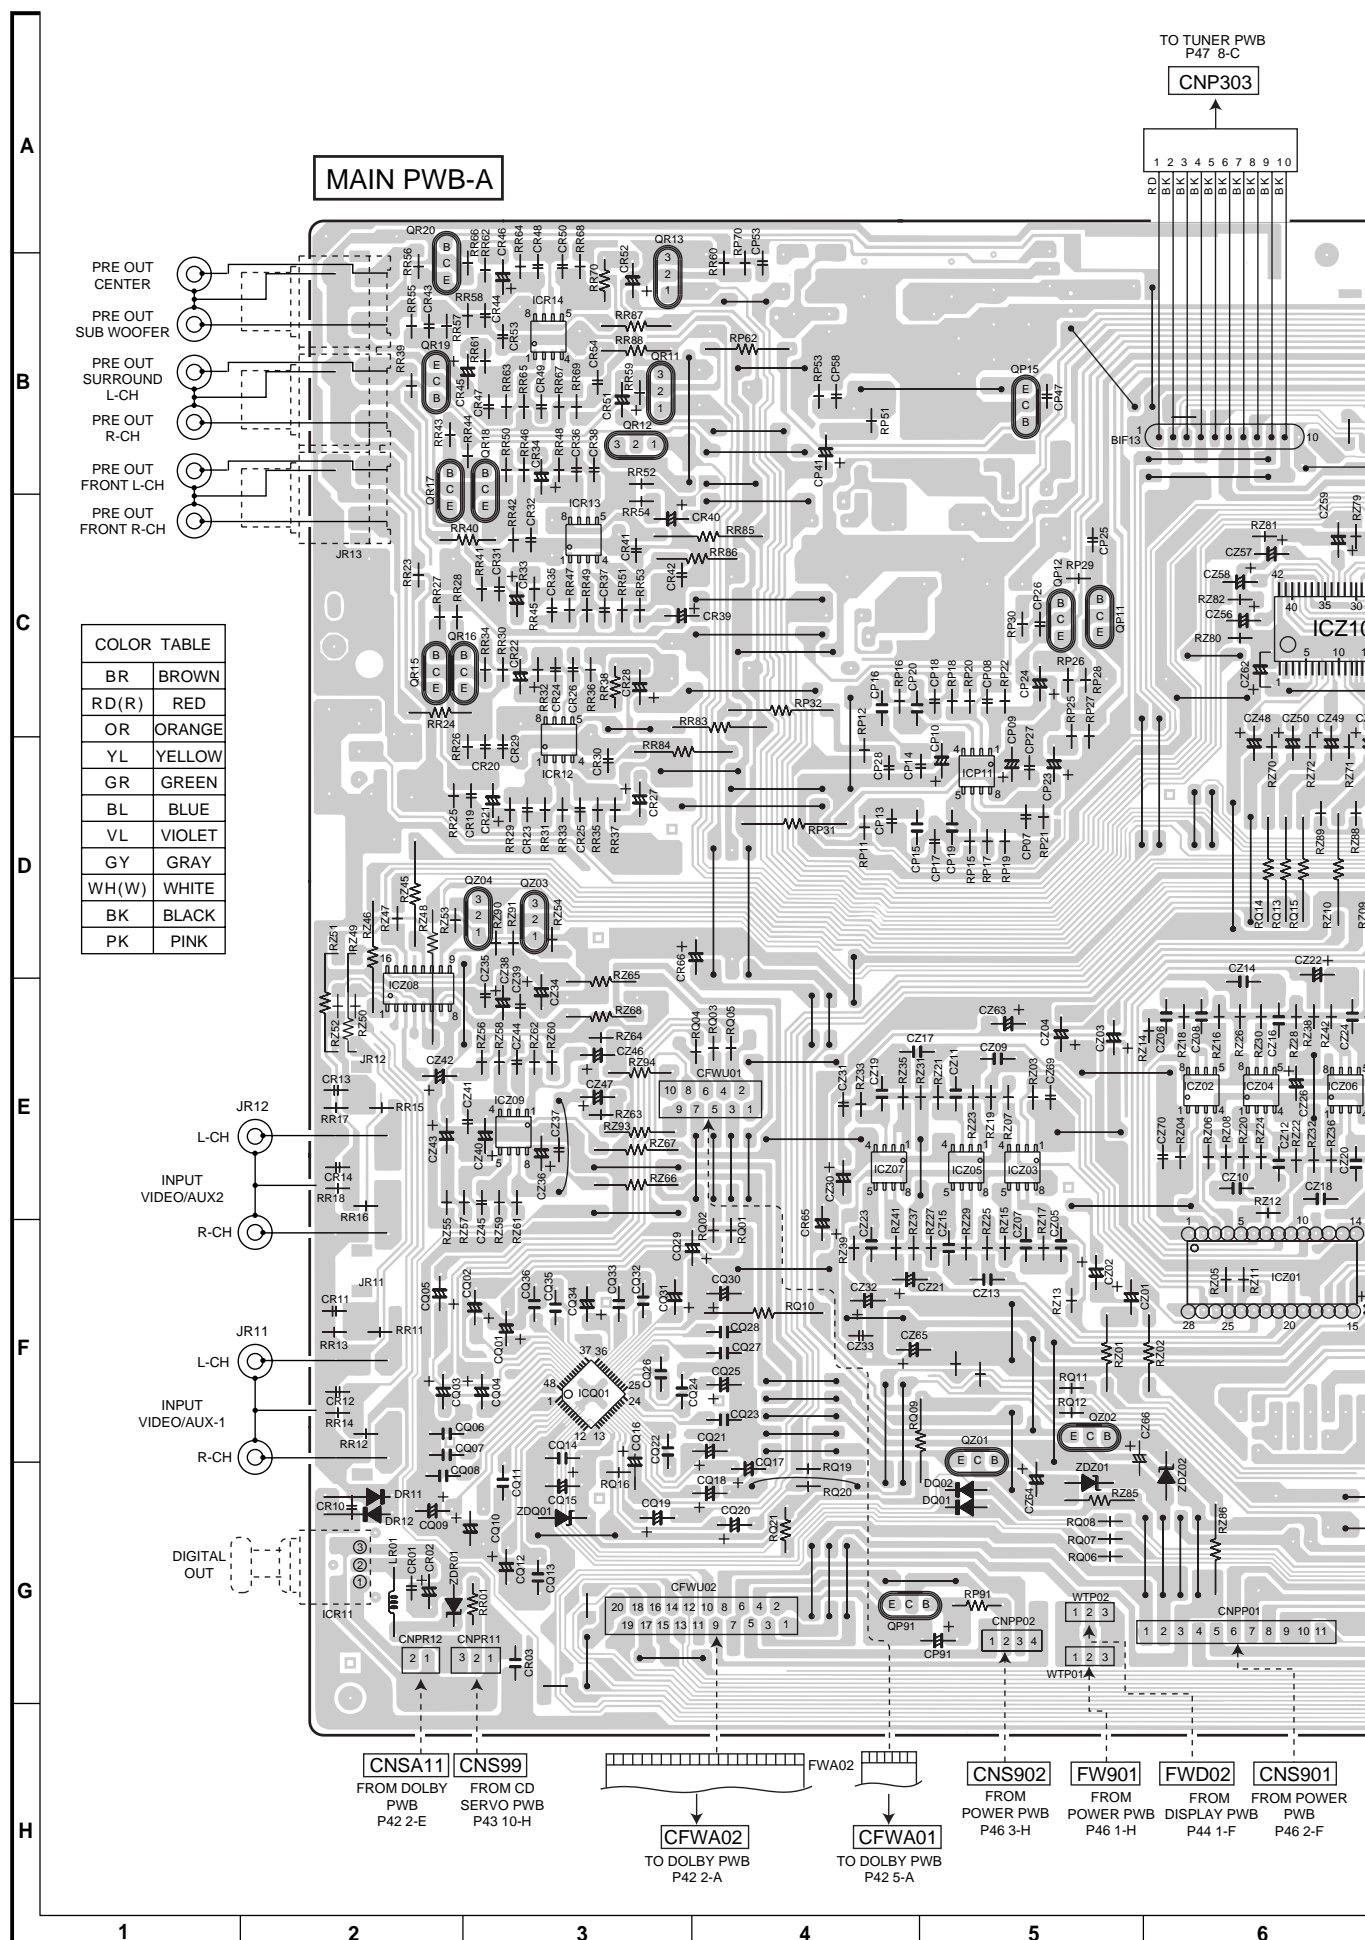



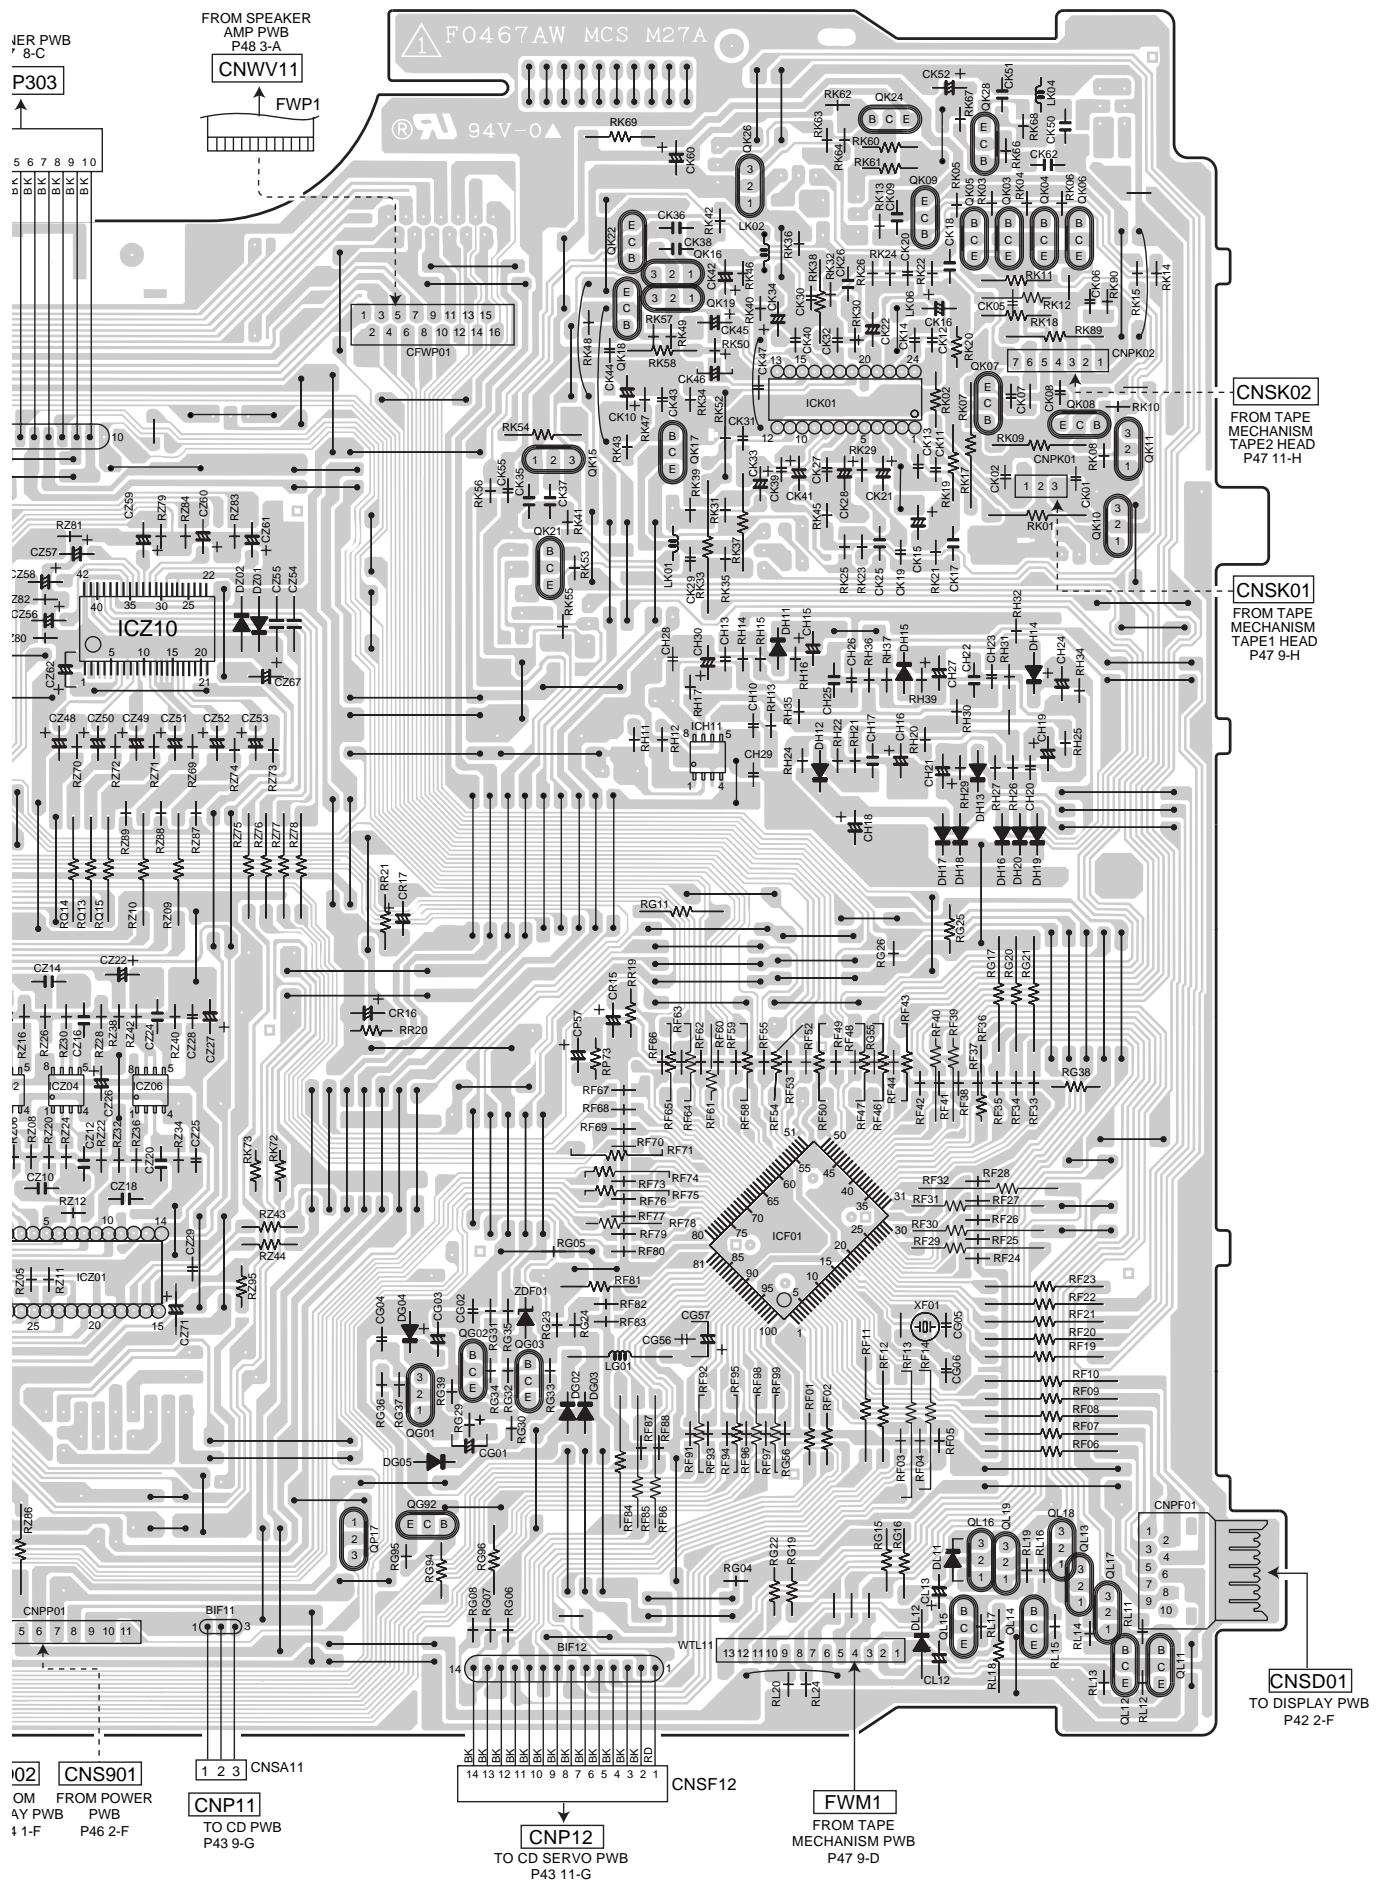


Figure 41 WIRING SIDE OF P.W.BOARD (2/9)

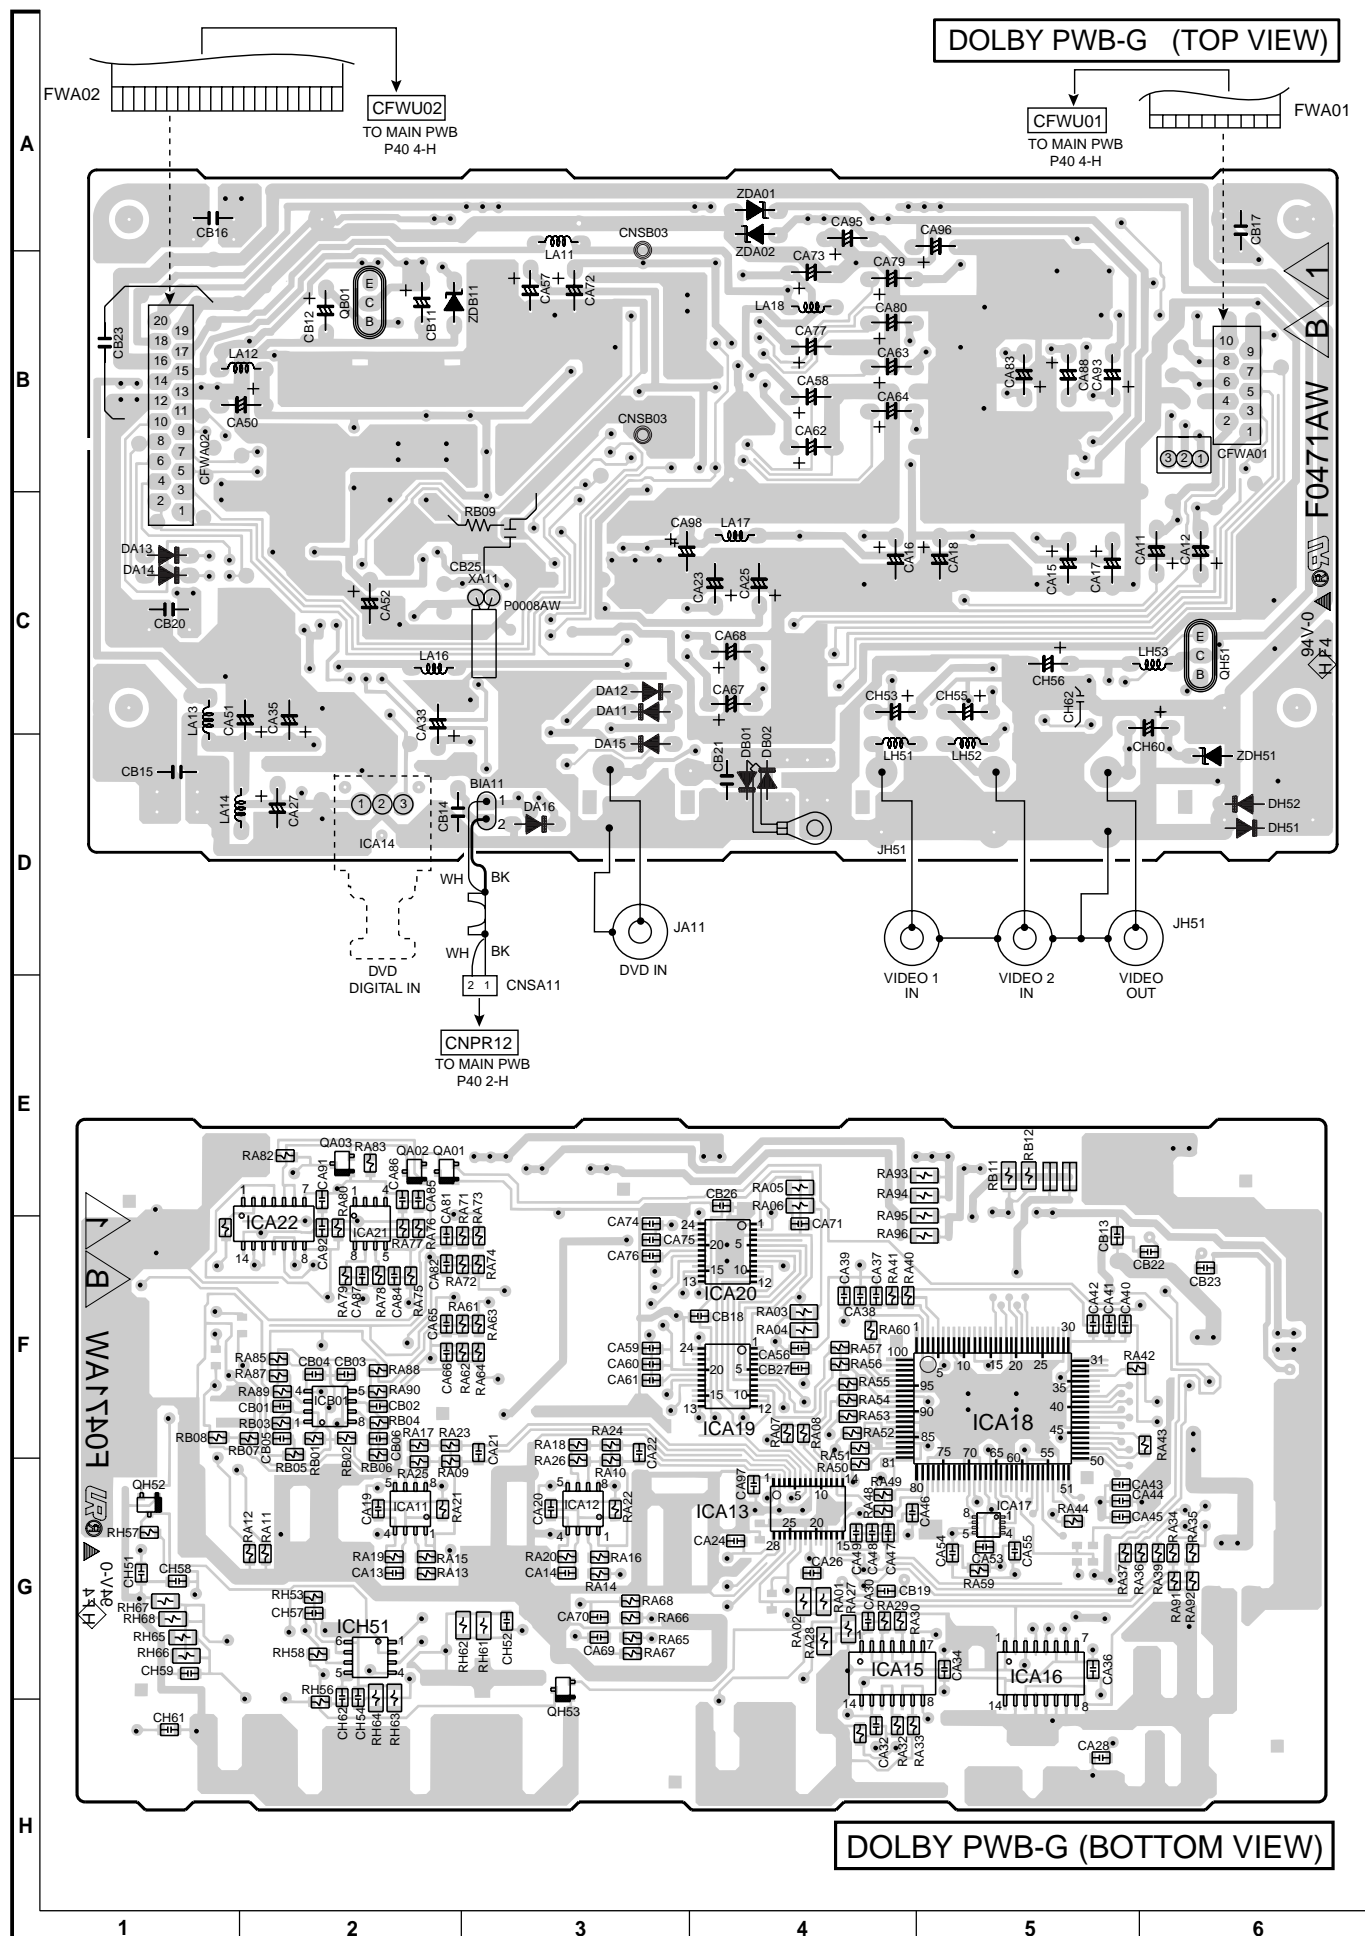

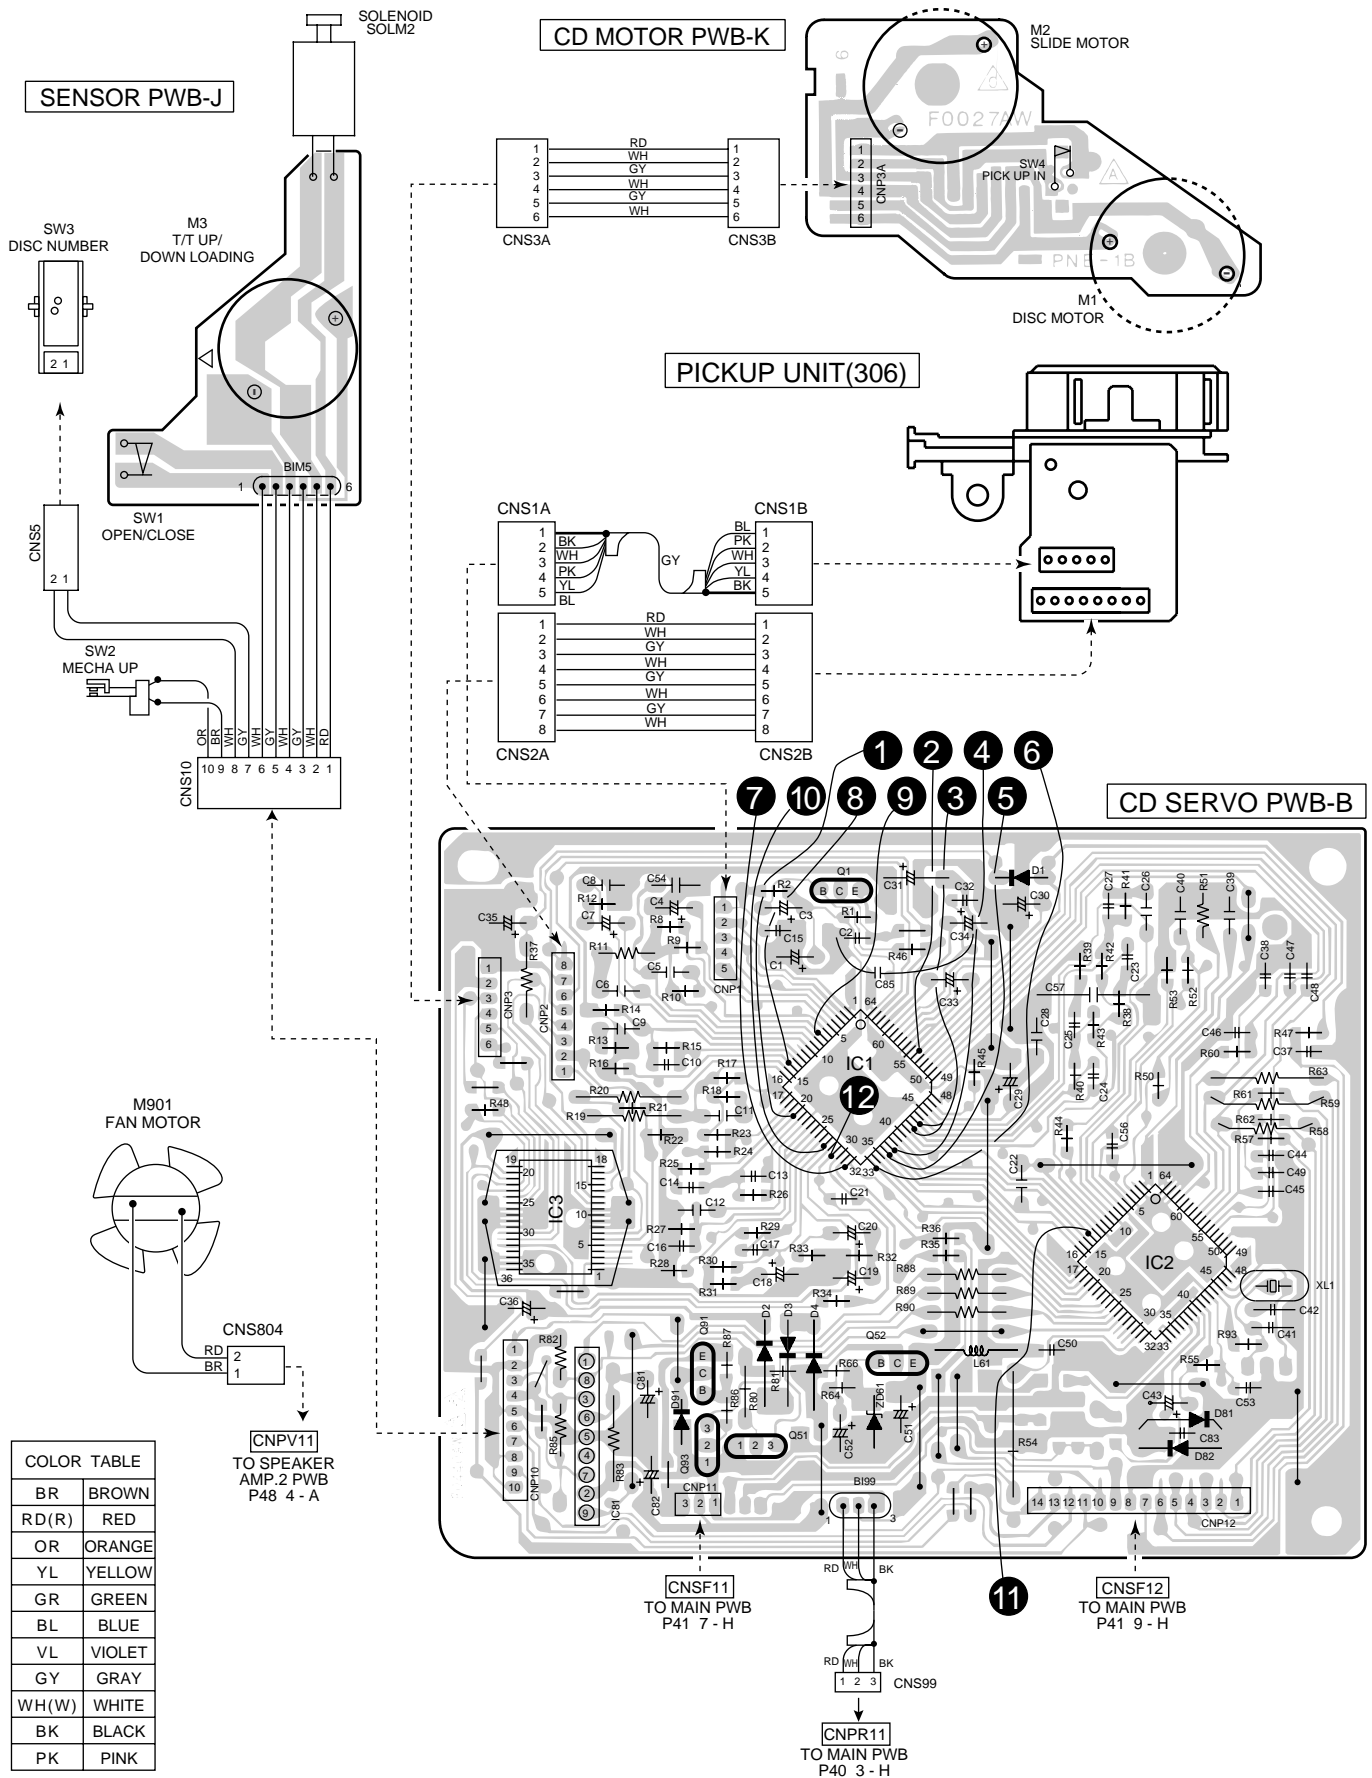

• The numbers ① to ⑫ are waveform numbers shown in page 20(CD-492).

7	8	9	10	11	12
---	---	---	----	----	----

Figure 43 WIRING SIDE OF P.W.BOARD (4/9)


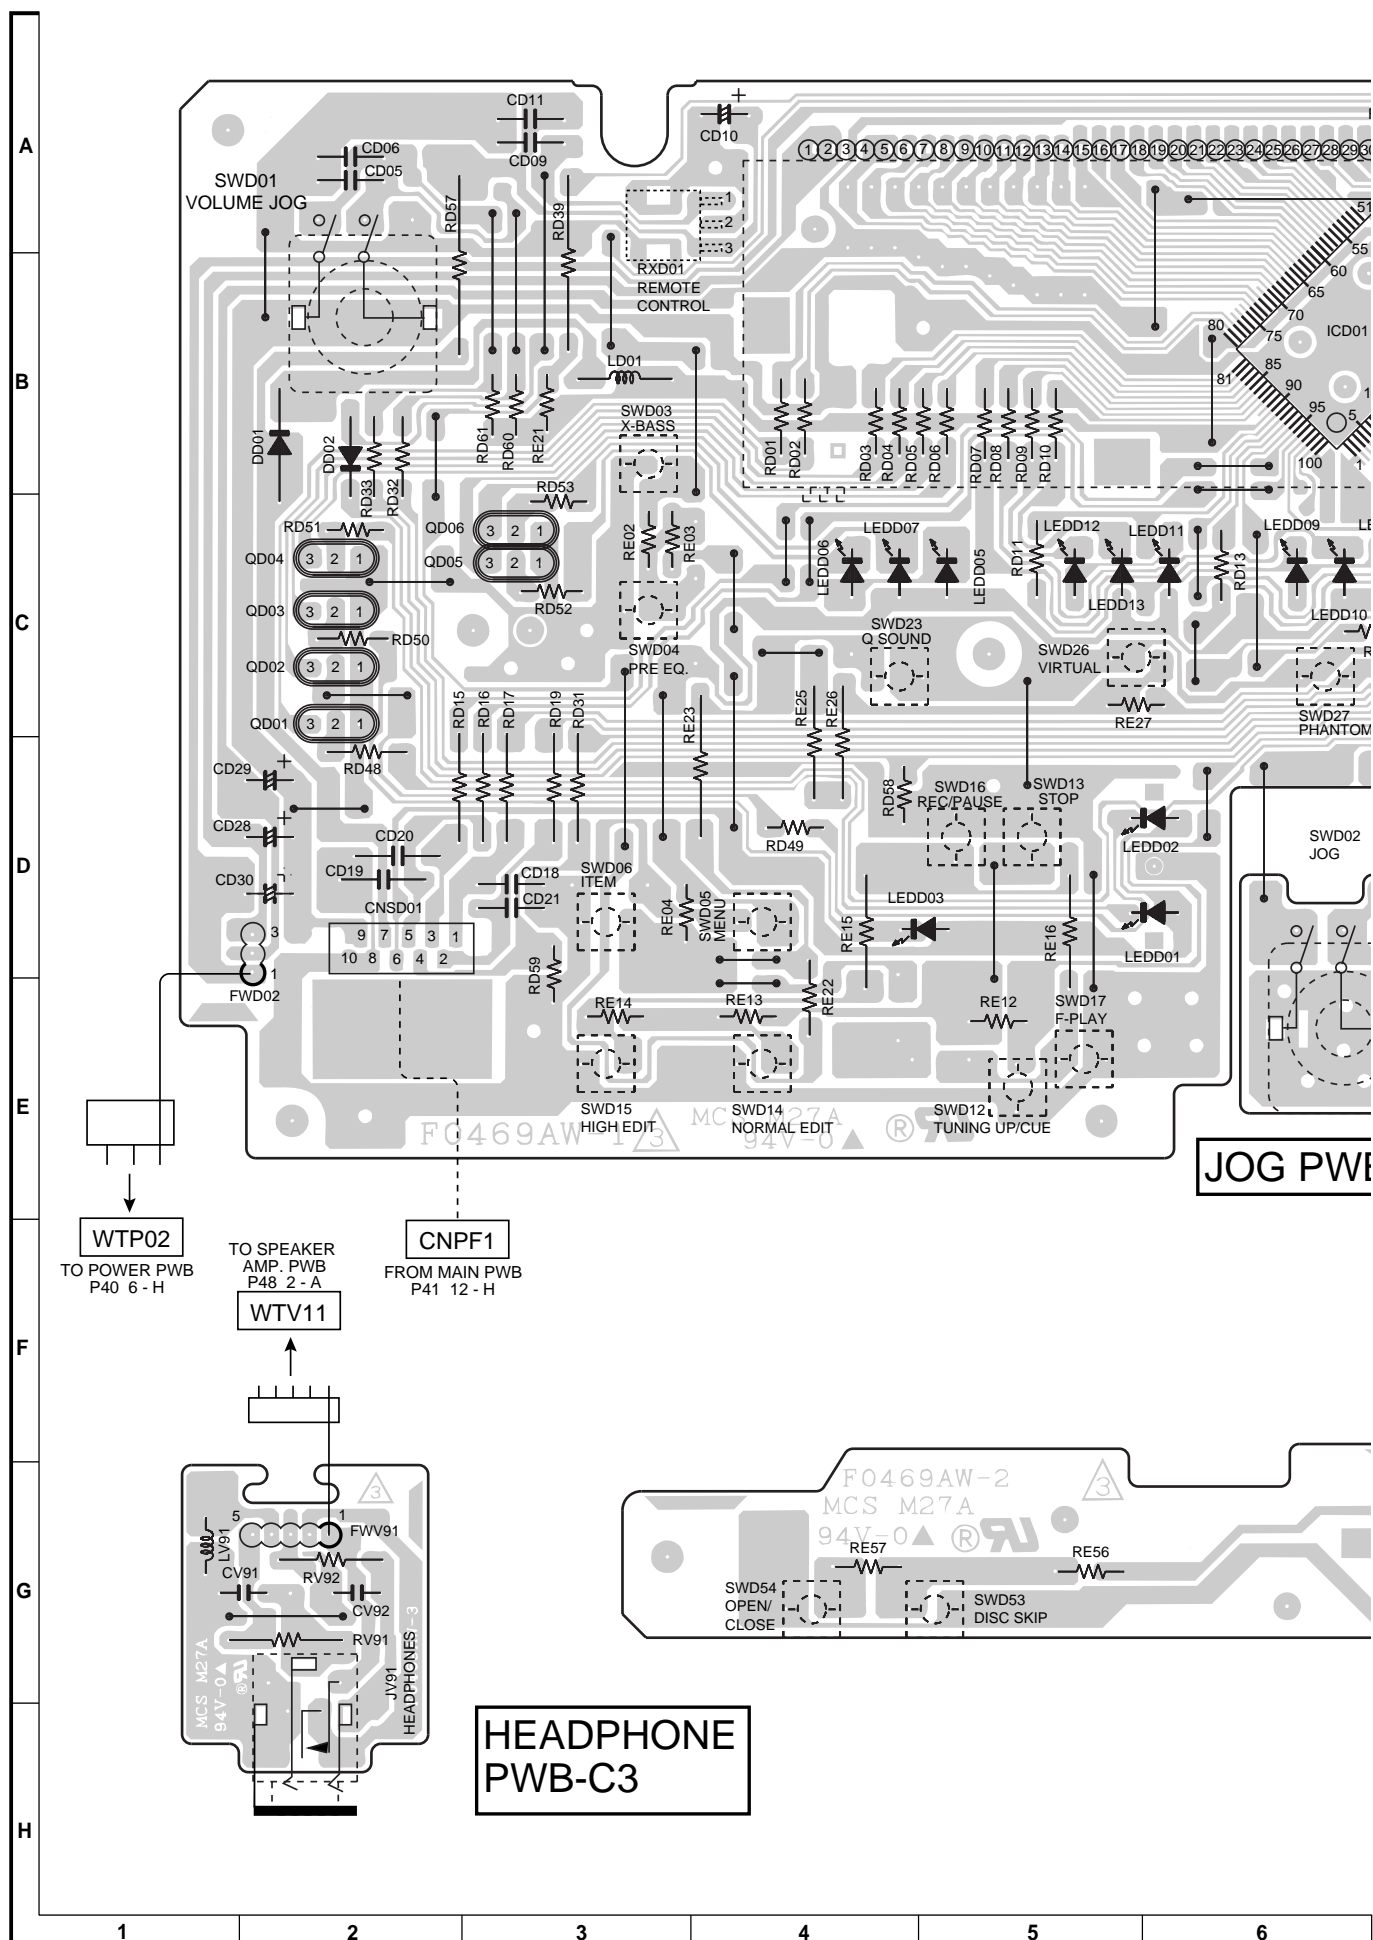


Figure 44 WIRING SIDE OF P.W.BOARD (5/9)

DISPLAY PWB-C1

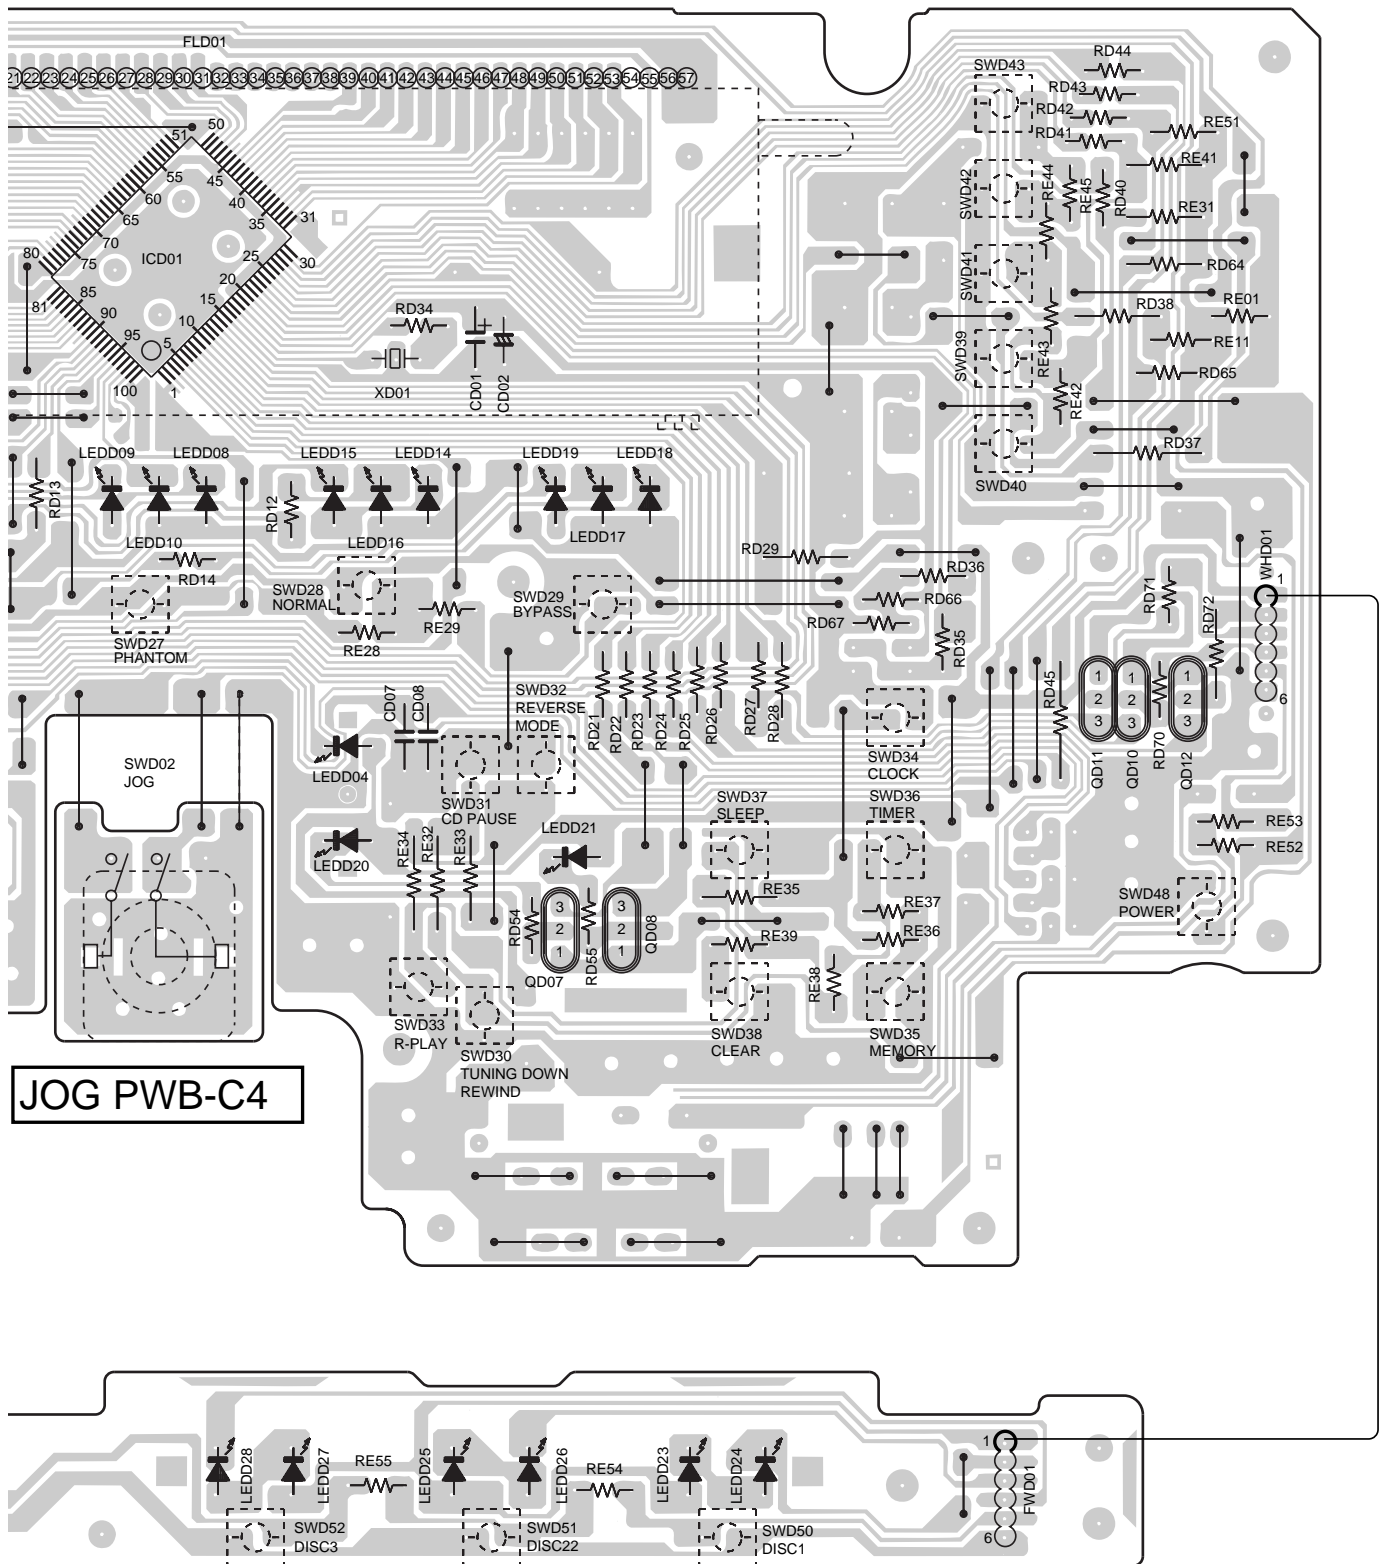

SWITCH PWB-C2

7	8	9	10	11	12
---	---	---	----	----	----

Figure 45 WIRING SIDE OF P.W.BOARD (6/9)

- 46 -

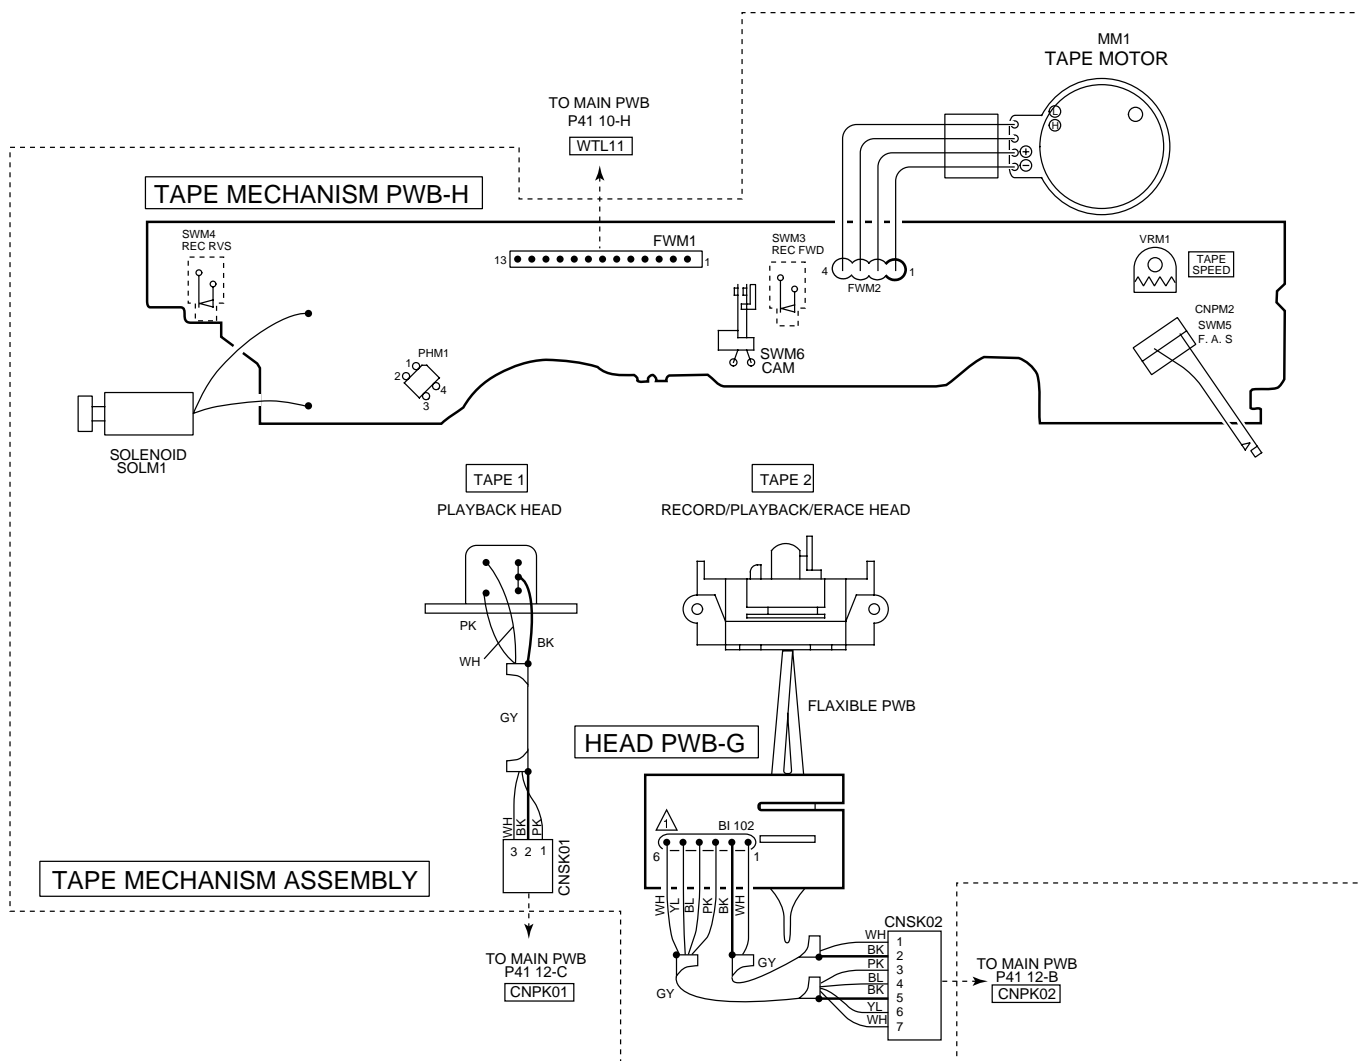
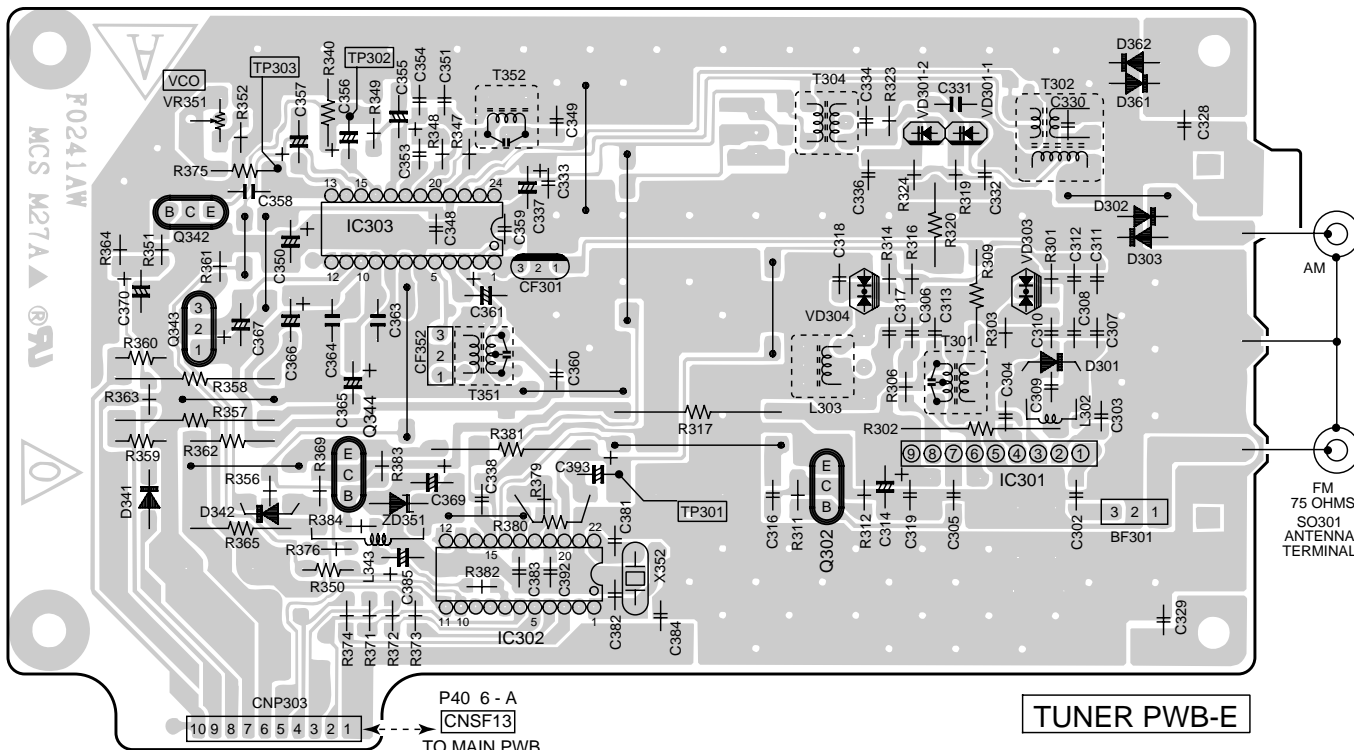


Figure 47 WIRING SIDE OF P.W.BOARD (8/9)

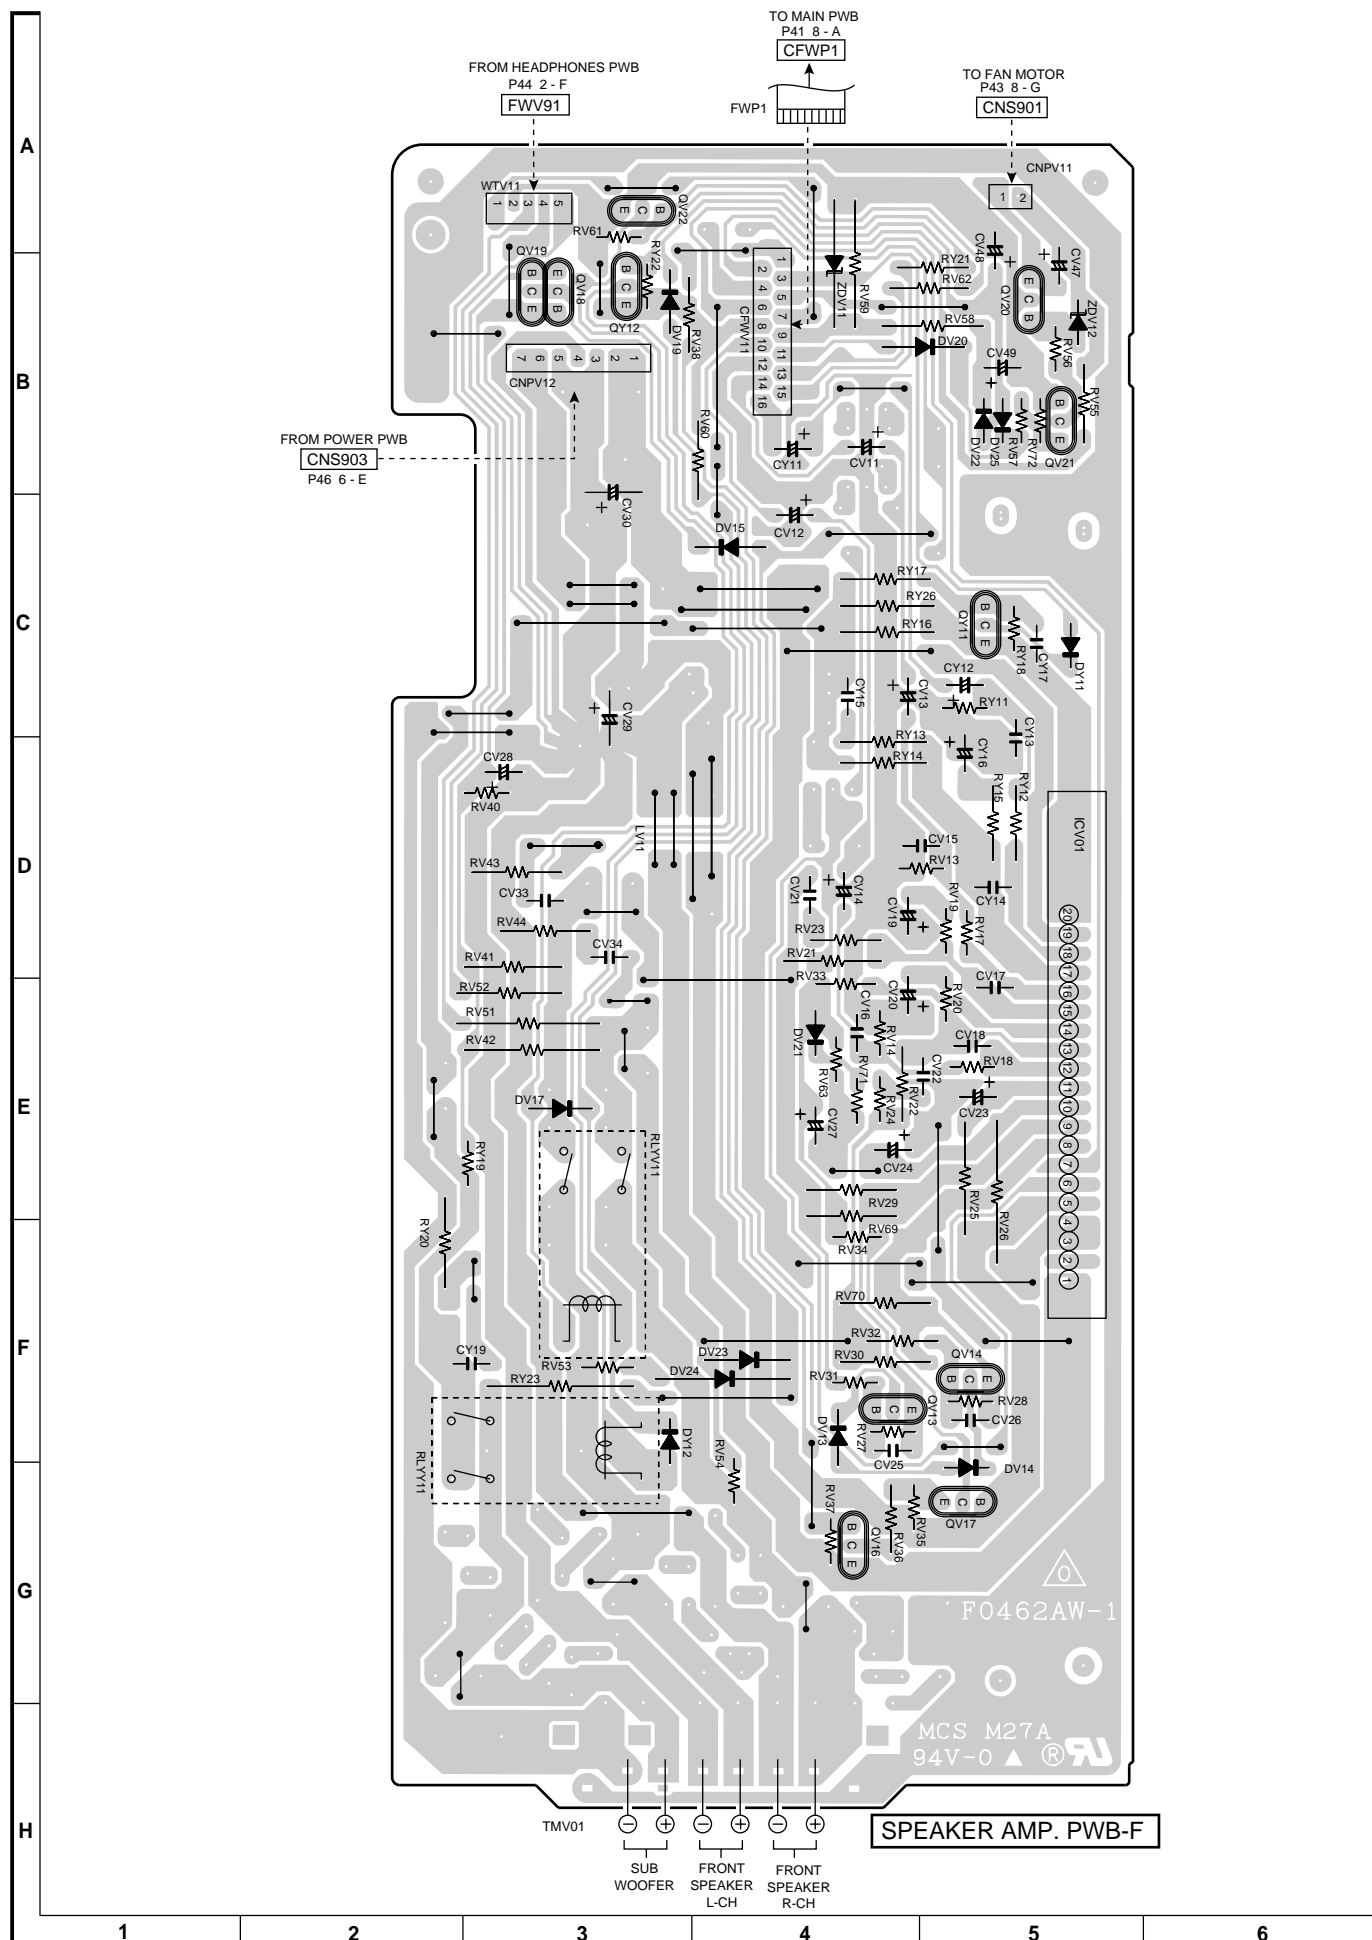


Figure 48 WIRING SIDE OF P.W.BOARD (9/9)

SHARP PARTS GUIDE

MODEL CD-C482

CD-C482 mini component system consisting of
CD-C482 mini component system,
CP-C482 and CP-SW482 speaker system.

“HOW TO ORDER REPLACEMENT PARTS”

To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER
2. REF. No.
3. PART NO.
4. DESCRIPTION

★ MARK: SPARE PARTS-DELIVERY SECTION

For U.S.A. only

Contact your nearest SHARP Parts Distributor to order.

For location of SHARP Parts Distributor,
Please call Toll-Free;
1-800-BE-SHARP

Explanation of capacitors/resistors parts codes

Capacitors

- VCC Ceramic type
- VCK Ceramic type
- VCT Semiconductor type
- VC •• MF Cylindrical type (without lead wire)
- VC •• MN Cylindrical type (without lead wire)
- VC •• TV Square type (without lead wire)
- VC •• TQ Square type (without lead wire)
- VC •• CY Square type (without lead wire)
- VC •• CZ Square type (without lead wire)
- VC J .. The 13th character represents capacity difference.
("J" ±5%, "K" ±10%, "M" ±20%, "N" ±30%,
"C" ±0.25 pF, "D" ±0.5 pF, "Z" +80-20%.)


If there are no indications for the electrolytic capacitors, error is ±20%.

Resistors

- VRD Carbon-film type
- VRS Carbon-film type
- VRN Metal-film type
- VR •• MF Cylindrical type (without lead wire)
- VR •• MN Cylindrical type (without lead wire)
- VR •• TV Square type (without lead wire)
- VR •• TQ Square type (without lead wire)
- VR •• CY Square type (without lead wire)
- VR •• CZ Square type (without lead wire)
- VR J .. The 13th character represents error.
("J" ±5%, "F" ±1%, "D" ±0.5%.)

If there are no indications for other parts, the resistors are ±5% carbon-film type.

NOTE:

Parts marked with “” are important for maintaining the safety of the set.
Be sure to replace parts with specified ones for maintaining the safety and performance of the set.

CD-C482

NO.	PART CODE	★ PRICE RANK	DESCRIPTION
CD-C482			
INTEGRATED CIRCUITS			
IC1	VHILA9241M/-1	J AS	Servo Amp.,LA9241M
IC2	VHILC78622K-1	J AY	Servo/Signal Control,LC78622K
IC3	VHIM56748FP-1	J AR	Focus/Tracking/Spin/Slide Driver,M56748FP
IC81	VHITA7291S/-1	J AH	Loading Motor Driver,TA7291S
IC301	VHITA7358AP-1	J AG	FM Front End,TA7358AP
IC302	VHILC72131/-1	J AP	PLL (Tuner) LC72131
IC303	VHILA1805/-1	J AM	FM/AF IF MPX.,LA1805
ICA11,12	VHINJM4580M-1	J AE	Ope Amp.,NJM4580M
ICA13	VHIAK4520A/-1	J AU	20bit 2ch A/D D/A Converter,AK4580M
ICA14	VHPGP1F38R/-1	J AM	Terminal,Digital Input,GP1F38R
ICA15	VHI74HCU04F-1	J AE	Inverter,74HCU04F
ICA16	VHI74HC153F-1	J AH	Inverter,74HC153F
ICA17	VHITC7WU04U-1	J AG	Dual2-Input Nand Gate,TC7WU04U
ICA18	VHIZR38600/-1	J BK	Dolby AC-3/5.1ch MPEG2 Audio Decoder,RZ38600
ICA19,20	VHIAK4321/-1	J AQ	20bit 2ch D/A Converter,AK4321
ICA21	VHINJM4580M-1	J AE	Ope Amp.,NJM4580M
ICA22	VHIBU4066BCF1	J AD	Mic/AUX Input Selector,BU4066BCF
ICB01	VHINJM4580M-1	J AE	Ope Amp.,NJM4580M
ICD01	RH-IX0234AWZZ	J AT	System Microcomputer,IX0234AW
ICF01	RH-IX0236AWZZ	J AZ	System Control Microcomputer,IX0236AW
ICH11	VHINJM4558M-1	J AC	Motor Driver,NJM4558M
ICH51	VHINJM2246M-1	J AF	OPE Amp.+ SW,NJM2246M
ICK01	VHIAN7345K/-1	J AM	Playback and Record/Playback Amp.,AN7345K
ICP11	VHINJM4565M-1	J AC	Buffer Amp.,NJM4565M
ICQ01	VHIQS7777PF-1	J BC	Q-Sound Decoder,QS7777PF
ICR11	VHPGP1F38T/-1	J AL	Photo Digital Output /LED,GP1F38T
ICR12	VHINJM4565M-1	J AC	Buffer Amp.,NJM4565M
ICR13	VHINJM4565M-1	J AC	Buffer Amp.,NJM4565M
ICR14	VHINJM4565M-1	J AC	Buffer Amp.,NJM4565M
ICV01	VHISTK40725-1	J BD	3ch AF Power Amp.,STK40725
ICZ01	VHILC7522/-1	J AR	Graphic Equalizer Electric Volume,LC7522
ICZ02~07	VHINJM4565M-1	J AC	Buffer Amp.,NJM4565M
ICZ08	VHITC4052BF-1	J AK	Dual 4ch Analog Multiplexer,TC4052BF
ICZ09	VHINJM4565M-1	J AC	Buffer Amp.,NJM4565M
ICZ10	VHIM62446FP-1	J AY	6ch Electronic Volume,M62446FP

TRANSISTORS

Q1	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
Q51	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
Q52	VSKTC3203Y/-1	J AC	Silicon,NPN,KTC3203 Y
Q91	VSKTA1271Y/-1	J AC	Silicon,PNP,KTA1271 Y
Q93	VSKRC102M/-1	J AC	Digital,NPN,KRC102 M
Q302	VS2SC535-C/-1	J AC	Silicon,NPN,2SC535 C
Q342	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q343	VSKRA109M/-1	J AC	Digital,PNP,KRA109 M
Q344	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
Q901	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q902	VS2SD2012/-1	J AD	Silicon,NPN,2SD2012
Q903	VS2SD468-C/-1	J AD	Silicon,NPN,2SD468 C
Q904	VSKRA107M/-1	J AE	Digital,PNP,KRA107 M
Q905	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q906	VS2SD2012/-1	J AD	Silicon,NPN,2SD2012
Q907	VSKRA102M/-1	J AC	Digital,PNP,KRA102 M
Q908	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q909	VS2SD2012/-1	J AD	Silicon,NPN,2SD2012
Q910	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q911	VS2SD2012/-1	J AD	Silicon,NPN,2SD2012
Q913	VS2SB1375/-1	J AF	Silicon,PNP,2SB1375
Q914	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
Q951	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
QA01	VSKRC107S/-1	J AB	Digital,NPN,KRC107 S
QA02	VSKRA107S/-1	J AB	Digital,NPN,KRA107 S
QA03	VSKRC107S/-1	J AB	Digital,NPN,KRC107 S
QB01	VS2SD2012/-1	J AD	Silicon,NPN,2SD2012

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
QD01~08	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
QD10~12	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
QG01	VSKRC102M/-1	J AC	Digital,NPN,KRC102 M
QG02,03	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QG92	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QH51	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QH52,53	VSKRC102S/-1	J AB	Digital,NPN,KRC102 S
QK03~06	VS2SC1845F/-1	J AC	Silicon,NPN,2SC1845 F
QK07,08	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QK09	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
QK10,11	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
QK15,16	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
QK17,18	VS2SC2878A/-1	J AE	Silicon,NPN,2SC2878 A
QK19	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
QK21,22	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QK24	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
QK26	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
QK28	VSKTC3203Y/-1	J AC	Silicon,NPN,KTC3203 Y
QL11,12	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
QL13	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
QL14	VSKTA1273Y/-1	J AE	Silicon,PNP,KTA1273 Y
QL15	VSKTA1271Y/-1	J AC	Silicon,PNP,KTA1271 Y
QL16	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
QL17~19	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
QP11,12	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QP15	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QP17	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
QP91	VS2SD468-C/-1	J AD	Silicon,NPN,2SD468 C
QR11~13	VSKRA107M/-1	J AE	Digital,PNP,KRA107 M
QR15~20	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QV13,14	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QV16	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QV17	VSKTA1268GR-1	J AC	Silicon,PNP,KTA1268 GR
QV18,19	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QV20	VSKTA1270Y/-1	J AD	Silicon,PNP,KTA1270 Y
QV21,22	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QY11,12	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
QZ01	VSKTA1271Y/-1	J AC	Silicon,PNP,KTA1271 Y
QZ02	VSKTC3203Y/-1	J AC	Silicon,NPN,KTC3203 Y
QZ03,04	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M

DIODES

D1	VHD1SS133/-1	J AA	Silicon,1SS133
D2~4	VHDRL104A/-1	J AB	Silicon,RL104A
D81,82	VHD1SS133/-1	J AA	Silicon,1SS133
D91	VHD1SS133/-1	J AA	Silicon,1SS133
D301~303	VHD1SS133/-1	J AA	Silicon,1SS133
D341,342	VHD1SS133/-1	J AA	Silicon,1SS133
D361,362	VHD1SS133/-1	J AA	Silicon,1SS133
D901	VHD1SS133/-1	J AA	Silicon,1SS133
D905,906	VHD1SS133/-1	J AA	Silicon,1SS133
△ D951~954	VHD1N4004S/-1	J AB	Silicon,1N4004S
△ D991	VHDKBU1003X-1	J AN	Silicon,KBU1003X
△ D992~995	VHD2A02/-1	J AD	Silicon,2A02
D996~999	VHD1N4004S/-1	J AB	Silicon,1N4004S
DA11~16	VHD1SS133/-V	J AC	Silicon,1SS133
DB01,02	VHD1SS133/-V	J AC	Silicon,1SS133
DD01	VHD1N4004S/-1	J AB	Silicon,1N4004S
DD02	VHD1SS133/-1	J AA	Silicon,1SS133
DG02~05	VHD1SS133/-1	J AA	Silicon,1SS133
DH11~20	VHD1SS133/-1	J AA	Silicon,1SS133
DH51,52	VHD1SS133/-V	J AC	Silicon,1SS133
DL11,12	VHD1SS133/-1	J AA	Silicon,1SS133
DQ01,02	VHD1SS133/-1	J AA	Silicon,1SS133
DR11,12	VHD1SS133/-1	J AA	Silicon,1SS133
DV13~15	VHD1SS133/-1	J AA	Silicon,1SS133
DV17	VHD1SS133/-1	J AA	Silicon,1SS133
DV19	VHD1SS133/-1	J AA	Silicon,1SS133
DV21~25	VHD1SS133/-1	J AA	Silicon,1SS133
DY11,12	VHD1SS133/-1	J AA	Silicon,1SS133
DZ01,02	VHD1SS133/-1	J AA	Silicon,1SS133
LEDD01,02	VHPKL052UL/-1	J AF	LED,Yellow,KL052UL
LEDD03	VHPSLR505MC-1	J AE	LED,Green,SLR505MC-1
LEDD04	VHPKL052UL/-1	J AF	LED,Yellow,KL052UL
LEDD05,06	VHPSLR325MG-1	J AE	LED,Green,SLR325MG
LEDD07	VHPSLR325VR-1	J AE	LED,Red,SLR325VR
LEDD08,09	VHPSLR325MG-1	J AE	LED,Green,SLR325MG
LEDD10	VHPSLR325VR-1	J AE	LED,Red,SLR325VR
LEDD11,12	VHPSLR325MG-1	J AE	LED,Green,SLR325MG
LEDD13	VHPSLR325VR-1	J AE	LED,Red,SLR325VR
LEDD14,15	VHPSLR325MG-1	J AE	LED,Green,SLR325MG

NO.	PART CODE	★	PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
LEDD16,17	VHPSLR325VR-1	J	AE	LED,Red,SLR325VR	C9	VCTYPAC1CX473K	J	AA	0.047 μF,16V
LEDD18,19	VHPSLR325MG-1	J	AE	LED,Green,SLR325MG	C10	VCKYMN1HB181K	J	AA	180 pF,50V
LEDD20	VHPKL052UL-1	J	AF	LED,Yellow,KL052UL	C11,12	VCTYPAC1CX104K	J	AB	0.1 μF,16V
LEDD21	VHPSLR505MC-1	J	AE	LED,Green,SLR505MC-1	C13	VCKYMN1HB331K	J	AA	330 pF,50V
LEDD23~28	VHPLMKD515B-1	J	AE	LED,Green,LMKD515B	C14,15	VCTYMN1CY103N	J	AA	0.01 μF,16V
VD301	VHCKV1236Z23F	J	AS	Variable Capacitance, KV1236Z23F	C16	VCTYMN1CX472K	J	AA	0.0047 μF,16V
VD303,304	VHCKDV147B/-1	J	AH	Variable Capacitance,KDV147B	C17	VCKYMN1HB102K	J	AA	0.001 μF,50V
ZD61	VHEMTZJ4R7B-1	J	AB	Zener,4.7V,MTZJ4.7B	C18	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic
ZD351	VHEMTZJ5R1B-1	J	AC	Zener,5.1V,MTZJ5.1B	C19	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
ZD901	VHEMTZJ130A-1	J	AC	Zener,13V,MTZJ13A	C20	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
ZD902	VHEMTZJ5R6A-1	J	AC	Zener,5.6V,MTZJ5.6A	C21	VCTYMN1CX332K	J	AA	0.0033 μF,16V
ZD903	VHEMTZJ130C-1	J	AB	Zener,13V,MTZJ13C	C22	VCCSPA1HL221J	J	AA	220 pF,50V
ZD904	VHEMTZJ8R2C-1	J	AB	Zener,8.2V,MTZJ8.2C	C23	VCTYMN1CX272K	J	AA	0.0027 μF,16V
ZD905	VHEMTZJ6R8C-1	J	AA	Zener,6.8V,MTZJ6.8C	C24	VCCSMN1HL2R2C	J	AB	2.2 pF,50V
ZD951	VHEMTZJ330C-1	J	AB	Zener,33V,MTZJ33C	C25	VCCSMN1HL270J	J	AA	27 pF,50V
ZD952	VHEMTZJ6R8C-1	J	AA	Zener,6.8V,MTZJ6.8C	C26	VCTYPAC1CX333K	J	AA	0.033 μF,16V
ZDA01,02	VHEMTZJ8R2A-V	J	AB	Zener,8.2V,MTZJ8.2A	C27	VCKYMN1HB102K	J	AA	0.001 μF,50V
ZDB11	VHEMTZJ3R9B-V	J	AC	Zener,3.9V,MTZJ3.9B	C28	VCTYPAC1CX104K	J	AB	0.1 μF,16V
ZDF01	VHEMTZJ3R3A-1	J	AB	Zener,3.3V,MTZJ3.3A	C29	VCEAZA1HW475M	J	AB	4.7 μF,50V,Electrolytic
ZDH51	VHEMTZJ9R1B-V	J	AB	Zener,9.1V,MTZJ9.1B	C30	VCEAZA1HW104M	J	AB	0.1 μF,50V,Electrolytic
ZDQ01	VHEMTZJ5R1B-1	J	AC	Zener,5.1V,MTZJ5.1B	C31	VCEAZA0JW227M	J	AC	220 μF,6.3V,Electrolytic
ZDR01	VHEMTZJ3R3B-1	J	AA	Zener,3.3V,MTZJ3.3B	C32	VCTYMN1CY103N	J	AA	0.01 μF,16V
ZDV11	VHEMTZJ5R1B-1	J	AC	Zener,5.1V,MTZJ5.1B	C33	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic
ZDV12	VHEMTZJ6R2B-1	J	AC	Zener,6.2V,MTZJ6.2B	C34	VCEAZA1HW334M	J	AB	0.33 μF,50V,Electrolytic
ZDZ01,02	VHEMTZJ7R5C-1	J	AC	Zener,7.5V,MTZJ7.5C	C35	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
ZDZ03	VHEMTZJ5R1A-1	J	AB	Zener,5.1V,MTZJ5.1A	C36	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic
FILTERS					C37	VCTYMN1EF223Z	J	AA	0.022 μF,25V
BF301	92LFILTF1759AT	J	AD	FM Band Pass Filter	C38	VCTYMN1CY103N	J	AA	0.01 μF,16V
CF301	RFILF0124AFZZ	J	AD	FM IF,10.7 MHz	C39,40	VCKYPA1HF473Z	J	AB	0.047 μF,50V
CF352	RFILA0008AWZZ	J	AE	AM IF	C41	VCCCPA1HH120J	J	AA	12 pF (CH),50V
TRANSFORMERS					C42	VCCCPA1HH150J	J	AA	15 pF (CH),50V
T301	RCIL10007AWZZ	J	AD	FM IF	C43	VCEAZA0JW337M	J	AC	330 μF,6.3V,Electrolytic
T302	RCILA1064AFZZ	J	AD	AM Antenna	C44~49	VCKYMN1HB101K	J	AA	100 pF,50V
T304	RCILB1074AFZZ	J	AC	OSC,AM	C50	VCTYMN1EF223Z	J	AA	0.022 μF,25V
T351	RCIL10011AWZZ	J	AD	AM IF	C51,52	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic
T352	RCIL10312AFZZ	J	AC	FM Detector	C53	VCTYMN1EF223Z	J	AA	0.022 μF,25V
△ T991	RTRNP0204AWZZ	J	BP	Power	C54	VCKYBT1HB102K	J	AA	0.001 μF,50V
COILS					C56	VCTYMN1EF223Z	J	AA	0.022 μF,25V
L61	VP-XHR82K0000	J	AC	0.82 μH,Choke	C57	VCKYBT1HB102K	J	AA	0.001 μF,50V
L302	RCILR0029AWZZ	J	AA	FM RF	C81,82	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
L303	RCILB0045AWZZ	J	AD	FM Oscillation	C83	VCTYMN1EF223Z	J	AA	0.022 μF,25V
L343	VP-DH101K0000	J	AB	100 μH,Choke	C85	VCKYBT1HB102K	J	AA	0.001 μF,50V
LA11~13	VP-XFR82K0000	J	AD	0.82 μH	C302	VCCCMN1HH180J	J	AA	18 pF (CH),50V
LA14	VP-XF100K0000	J	AB	10 μH,Choke	C303	VCTYMN1CY103K	J	AA	0.01 μF,16V
LA16~18	VP-XFR82K0000	J	AD	0.82 μH	C304	VCCSMN1HL4R7C	J	AA	4.7 pF,50V
LD01	VP-DH2R2M0000	J	AB	2.2 μH,Choke	C305	VCCCMN1HH150J	J	AA	15 pF (CH),50V
LG01	VP-DH2R2K0000	J	AB	2.2 μH,Peaking	C306	VCCSMN1HL330J	J	AA	33 pF,50V
LH51,52	VP-XF1R0K0000	J	AB	1 μH,Choke	C307,308	VCTYMN1CX472K	J	AA	0.0047 μF,16V
LH53	VP-XF101K0000	J	AB	100 μH,Choke	C309	VCCUMN1HJ6R8D	J	AB	6.8 pF (UJ),50V
LK01,02	VP-MK182K0000	J	AC	1.8 mmH,Choke	C310	VCKYMN1HB102K	J	AA	0.001 μF,50V
LK04	VP-MK331K0000	J	AB	330 μH,Choke	C311	VCTYMN1EF223Z	J	AA	0.022 μF,25V
LR01	VP-DH2R2K0000	J	AB	2.2 μH,Peaking	C312	VCKYMN1HB102K	J	AA	0.001 μF,50V
LV91	VP-XH2R2K0000	J	AB	2.2 μH,Choke	C313	VCTYMN1EF223Z	J	AA	0.022 μF,25V
VARIABLE RESISTOR					C314	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
VR351	RVR-M0025AWZZ	J	AC	6.8 kohms (B),Semi-VR [VCO]	C316	VCKYMN1HB101K	J	AA	100 pF,50V
VIBRATORS					C317	VCCUMN1HJ3R9K	J	AA	3.9 pF (UJ),50V
X352	RCRSP0002AWZZ	J	AH	Crystal,4.5 MHz	C318	VCCCMN1HH220J	J	AA	22 pF (CH),50V
XA11	RCRSP0008AWZZ	J	AH	Crystal 12.288 MHz	C319	VCTYMN1EF223Z	J	AA	0.022 μF,25V
XD1	RCRM-0031AWZZ	J	AE	Ceramic	C328,329	VCKYMN1HB102K	J	AA	0.001 μF,50V
XF1	RCRSP0003AWZZ	J	AH	Crystal	C330	VCCUMN1HJ8R2D	J	AA	8.2 pF (UJ),50V
XL1	RCRSP0005AWZZ	J	AF	Crystal,16.934 MHz	C331	VCKYPA1HF473Z	J	AB	0.047 μF,50V
CAPACITORS					C332,333	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C1	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic	C334	VCCUMN1HJ180J	J	AA	18 pF (UJ),50V
C2	VCTYMN1CY103N	J	AA	0.01 μF,16V	C336	VCKYMN1HB471K	J	AA	470 pF,50V
C3	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic	C337	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
C4	VCEAZA1HW104M	J	AB	0.1 μF,50V,Electrolytic	C338	VCKYMN1HB101K	J	AA	100 pF,50V
C5,6	VCTYPAC1CX333K	J	AA	0.033 μF,16V	C348,349	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C7	VCEAZA1HW104M	J	AB	0.1 μF,50V,Electrolytic	C350	VCEAZA1AW227M	J	AC	220 μF,10V,Electrolytic
C8	VCTYPAC1CX683K	J	AA	0.068 μF,16V	C351	VCTYMN1CX222K	J	AA	0.0022 μF,16V
					C353	VCTYMN0JY183M	J	AA	0.018 μF,6.3V
					C354	VCKYMN1HB471K	J	AA	470 pF,50V
					C355~357	VCEAZA1HW335M	J	AB	3.3 μF,50V,Electrolytic
					C358	92LCPU100V1500	J	AC	0.0015 μF,100V
					C359,360	VCTYMN1EF223Z	J	AA	0.022 μF,25V
					C361	VCEAZA1CW226M	J	AC	22 μF,16V,Electrolytic
					C363,364	VCTYPAC1CX273K	J	AA	0.027 μF,16V
					C365~367	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
					C369	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
					C370	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
					C381	VCCCMN1HH120J	J	AA	12 pF (CH),50V
					C382	VCCCMN1HH150J	J	AA	15 pF (CH),50V
					C383	VCTYMN1EF223Z	J	AA	0.022 μF,25V

CD-C482

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
C384	VCKYMN1HB102K	J	AA	0.001 μF,50V
C385	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
C392	VCKYMN1HB102K	J	AA	0.001 μF,50V
C393	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
C901	VCKYPA1HF223Z	J	AB	0.022 μF,50V
C902~905	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C906	VCKYPA1HF223Z	J	AB	0.022 μF,50V
C907	VCEAZA1CW227M	J	AC	220 μF,25V,Electrolytic
C908	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C909	VCTYBT1EF223Z	J	AA	0.022 μF,25V
C910	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C911	VCKYPA1HF223Z	J	AB	0.022 μF,50V
C913	VCEAZW1EW338M	J	AG	3300 μF,25V,Electrolytic
C914	VCEAZA1EW107M	J	AB	100 μF,25V,Electrolytic
C915	VCKYPA1HF223Z	J	AB	0.022 μF,50V
C919	VCEAZW1EW478M	J	AK	4700 μF,25V,Electrolytic
C920	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C954	VCQYKA1HM224K	J	AB	0.22 μF,50V,Mylar
C956	VCQYKA1HM224K	J	AB	0.22 μF,50V,Mylar
C957,958	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
C959~961	VCEAZA1HW227M	J	AC	220 μF,50V,Electrolytic
C962	VCEAZA1JW476M	J	AC	47 μF,63V,Electrolytic
C963,964	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic
C965	VCEAZA1VW107M	J	AC	100 μF,35V,Electrolytic
C966,967	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
CA11,12	VCEAZA1CW226M	J	AC	22 μF,16V,Electrolytic
CA13,14	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA15~18	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA19,20	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA21,22	VCKYTV1HB152K	J	AA	0.0015 μF,50V
CA23	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA24	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA25	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA26	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA27	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA28	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA30	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA32	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA33	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA34	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA35	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA36	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA37	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA38~41	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA42,43	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA44,45	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA46	VCKYTV1CB473K	J	AC	0.047 μF,16V
CA47	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA48,49	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA50,51	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
CA52	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA53	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA54	VCCCTV1HH180J	J	AA	18 pF (CH),50V
CA55	VCCCTV1HH220J	J	AA	22 pF (CH),50V
CA56	VCKYTV1HF103Z	J	AA	0.01 μF,50V
CA57	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA58	VCEAZA0JW227M	J	AC	220 μF,6.3V
CA59	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA60,61	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA62	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic
CA63,64	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA65,66	VCKYTV1HB153K	J	AA	0.015 μF,50V
CA67,68	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA69,70	VCKYTV1HB153K	J	AA	0.015 μF,50V
CA71	VCKYTV1HF103Z	J	AA	0.01 μF,50V
CA72	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA73	VCEAZA0JW227M	J	AC	220 μF,6.3V
CA74	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA75,76	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA77	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic
CA79,80	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CA81	VCKYTV1HB153K	J	AA	0.015 μF,50V
CA82	VCKYTV1EF104Z	J	AA	0.1 μF,25V
CA83	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic
CA84	VCCCTV1HH470J	J	AA	47 pF (CH),50V
CA85,86	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CA87	VCKYTV1HB102K	J	AA	0.001 μF,50V
CA88	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic
CA91,92	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CA93	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic
CA95,96	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CA97	VCKYTV1EF104Z	J	AA	0.1 μF,25V

NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
CA98	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CB01,02	VCKYTV1HB101K	J	AA	100 pF,50V
CB03,04	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CB05,06	VCKYTV1HB221K	J	AA	220 pF,50V
CB11	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CB12	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
CB13	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CB14~17	VCKYPA1HB102K	J	AA	0.001 μF,50V
CB18,19	VCKYTV1HB102K	J	AA	0.001 μF,50V
CB20,21	VCKYPA1HB102K	J	AA	0.001 μF,50V
CB22,23	VCKYTV1HB102K	J	AA	0.001 μF,50V
CB26	VCKYTV1HB102K	J	AA	0.001 μF,50V
CB27	VCKYTV1HF104Z	J	AA	0.1 μF,50V
CD01	VCTYBT1EF223Z	J	AA	0.022 μF,25V
CD02	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
CD05~08	VCKYBT1HB102K	J	AA	0.001 μF,50V
CD09	VCKYBT1HB151K	J	AA	150 pF,50V
CD10	VCEAZA0JW227M	J	AC	220 μF,6.3V,Electrolytic
CD11	VCTYBT1EF223Z	J	AA	0.022 μF,25V
CD18~21	VCKYBT1HB151K	J	AA	150 pF,50V
CD28~30	RC-EZY105AF1H	J	AB	1 μF,50V,Electrolytic
CG01	VCEAZA1AW477M	J	AC	470 μF,10V,Electrolytic
CG02	VCTYMN1CY103K	J	AA	0.01 μF,16V
CG03	VCEAZA1HW335M	J	AB	3.3 μF,50V,Electrolytic
CG04	VCTYMN1CY103K	J	AA	0.01 μF,16V
CG05,06	VCCCMN1HH150J	J	AA	15 pF (CH),50V
CG56	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CG57	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CH10	VCCSMN1HL470J	J	AA	47 pF,50V
CH13	VCKYMN1HB331K	J	AA	330 pF,50V
CH15	VCEAZA1HW224M	J	AB	0.22 μF,50V,Electrolytic
CH16	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CH17	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
CH18	VCEAZA1HW224M	J	AB	0.22 μF,50V,Electrolytic
CH19	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic
CH20	VCTYMN0JY153M	J	AA	0.015 μF,6.3V
CH21	VCEAZA1HW224M	J	AB	0.22 μF,50V,Electrolytic
CH22	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
CH23	VCTYMN1CX472K	J	AA	0.0047 μF,16V
CH24	VCEAZA1HW224M	J	AB	0.22 μF,50V,Electrolytic
CH25	VCQYKA1HM273K	J	AB	0.027 μF,50V,Mylar
CH26	VCTYMN1CX122K	J	AA	0.0012 μF,16V
CH27	VCEAZA1HW224M	J	AB	0.22 μF,50V,Electrolytic
CH28,29	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CH30	VCQYKA1HM562K	J	AA	0.0056 μF,50V,Mylar
CH51	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CH52	VCKYTV1HB221K	J	AA	220 pF,50V
CH53	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic
CH54	VCKYTV1HB221K	J	AA	220 pF,50V
CH55	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic
CH56	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CH57	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CH58	VCKYTV1CB473K	J	AC	0.047 μF,16V
CH59	VCCCTV1HH470J	J	AA	47 pF (CH),50V
CH60	VCEAZA1AW108M	J	AC	1000 μF,10V,Electrolytic
CH61	VCKYTV1HB102K	J	AA	0.001 μF,50V
CH62	VCKYTV1HF223Z	J	AA	0.022 μF,50V
CK01,02	VCKYMN1HB681K	J	AA	680 pF,50V
CK05,06	VCKYMN1HB331K	J	AA	330 pF,50V
CK07,08	VCKYMN1HB102K	J	AA	0.001 μF,50V
CK09	VCKYPA1HF223Z	J	AB	0.022 μF,50V
CK10	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CK11~14	VCKYMN1HB331K	J	AA	330 pF,50V
CK15,16	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
CK17,18	VCTYPA1CX333K	J	AA	0.033 μF,16V
CK19,20	VCKYMN1HB561K	J	AA	560 pF,50V
CK21,22	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CK25,26	VCTYPA1EX822K	J	AA	0.0082 μF,25V
CK27	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CK28	VCEAZA1EW335M	J	AB	3.3 μF,25V,Electrolytic
CK29,30	VCKYMN1HB471K	J	AA	470 pF,50V
CK31,32	VCKYMN1HB271K	J	AA	270 pF,50V
CK33,34	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic
CK35,36	VCTYPA1CX223K	J	AA	0.022 μF,16V
CK37,38	VCTYPA1CX183K	J	AA	0.018 μF,16V
CK39,40	VCTYMN1CX332K	J	AA	0.0033 μF,16V
CK41,42	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CK43,44	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CK45	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic
CK46	VCEAZA1AW227M	J	AC	220 μF,10V,Electrolytic
CK47	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CK50	VCQPKA2AA822J	J	AA	0.0082 μF,100V,Polypropylene

NO.	PART CODE	★	PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
CK51	VCQYKA1HM273K	J	AB	0.027 μF,50V,Mylar	CV29,30	VCEAZW1HW338M	J	AH	3300 μF,50V,Electrolytic
CK52	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic	CV33,34	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
CK55	VCTYMN1EF223Z	J	AA	0.022 μF,25V	CV47	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CK60	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic	CV48	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
CK62	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar	CV49	VCEAZA1HW107M	J	AC	100 μF,50V,Electrolytic
CL12	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic	CV91,92	VCCSPA1HL101J	J	AA	100 pF,50V
CL13	VCEAZA1HW335M	J	AB	3.3 μF,50V,Electrolytic	CY11,12	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic
CP07,08	VCKYMN1HB101K	J	AA	100 pF,50V	CY13	VCKYPA1HB471K	J	AA	470 pF,50V
CP09,10	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic	CY14	VCCSPA1HL470J	J	AA	47 pF,50V
CP13,14	VCKYMN1HB102K	J	AA	0.001 μF,50V	CY15	VCCSPA1HL150J	J	AA	15 pF,50V
CP15,16	VCQYKA1HB104K	J	AB	0.1 μF,50V,Mylar	CY16	VCEAZA1HW107M	J	AC	100 μF,50V,Electrolytic
CP17,18	VCCSMN1HL470J	J	AA	47 pF,50V	CY17	VCKYPA1HF223Z	J	AB	0.022 μF,50V
CP19,20	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar	CY19	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
CP23,24	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic	CZ01,02	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CP25,26	VCKYMN1HB102K	J	AA	0.001 μF,50V	CZ03,04	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CP27,28	VCTYMN1EF223Z	J	AA	0.022 μF,25V	CZ05,06	VCQYKA1HM472K	J	AB	0.0047 μF,50V,Mylar
CP41	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic	CZ07,08	VCCSPA1HL271J	J	AA	270 pF,50V
CP47	VCKYMN1HB102K	J	AA	0.001 μF,50V	CZ09,10	VCQYKA1HM273K	J	AB	0.027 μF,50V,Mylar
CP53	VCKYMN1HB102K	J	AA	0.001 μF,50V	CZ11,12	VCQYKA1HM152K	J	AB	0.0015 μF,50V,Mylar
CP57	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic	CZ13,14	VCQYKA1HM274K	J	AB	0.27 μF,50V,Mylar
CP58	VCTYPA1CX683K	J	AA	0.068 μF,16V	CZ15,16	VCQYKA1HM123J	J	AB	0.012 μF,50V,Mylar
CP91	VCEAZA0JW107M	J	AC	100 μF,6.3V,Electrolytic	CZ17,18	VCQYKA1HM184K	J	AC	0.18 μF,50V,Mylar
CQ01~05	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic	CZ19,20	VCQYKA1HM333K	J	AB	0.033 μF,50V,Mylar
CQ06	VCQYKA1HM102J	J	AB	0.001 μF,50V,Mylar	CZ21,22	VCEAZA1HW334M	J	AB	0.33 μF,50V,Electrolytic
CQ07	VCQYKA1HM123J	J	AB	0.012 μF,50V,Mylar	CZ23,24	VCQYKA1HM393K	J	AB	0.039 μF,50V,Mylar
CQ08	VCQYKA1HM823J	J	AC	0.082 μF,50V,Mylar	CZ25	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ09,10	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic	CZ26,27	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
CQ11	VCEAZA1HM223J	J	AB	0.022 μF,50V,Mylar	CZ28,29	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ12	VCEAZA1HW224M	J	AB	0.22 μF,50V,Electrolytic	CZ30	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
CQ13	VCQYKA1HM272J	J	AB	0.0027 μF,50V,Mylar	CZ31	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ14	VCKYPA1HF223Z	J	AB	0.022 μF,50V	CZ32	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
CQ15	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic	CZ33	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ16~20	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic	CZ34	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CQ21	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic	CZ35	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ22,23	VCQYKA1HM223J	J	AB	0.022 μF,50V,Mylar	CZ36	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
CQ24	VCQYKA1HM472K	J	AB	0.0047 μF,50V,Mylar	CZ37	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ25	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic	CZ38	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CQ26,27	VCQYKA1HM223J	J	AB	0.022 μF,50V,Mylar	CZ39	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ28	VCQYKA1HM472K	J	AB	0.0047 μF,50V,Mylar	CZ40	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic
CQ29	RC-EZ0004AWZZ	J	AD	100 μF,10V,Electrolytic	CZ41	VCTYMN1EF223Z	J	AA	0.022 μF,25V
CQ30	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic	CZ42,43	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CQ31	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic	CZ44,45	VCCSMN1HL470J	J	AA	47 pF,50V
CQ32,33	VCQYKA1HM223J	J	AB	0.022 μF,50V,Mylar	CZ46,47	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
CQ34	VCEAZA1HW474M	J	AB	0.47 μF,50V,Electrolytic	CZ48	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
CQ35,36	VCQYKA1HM223J	J	AB	0.022 μF,50V,Mylar	CZ49~53	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CR01	VCTYMN1EF223Z	J	AA	0.022 μF,25V	CZ54	VCTYBT1EF223Z	J	AA	0.022 μF,25V
CR02	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic	CZ55	VCKYBT1HB102K	J	AA	0.001 μF,50V
CR03	VCKYPA1HB102K	J	AA	0.001 μF,50V	CZ56	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
CR10	VCKYMN1HB102K	J	AA	0.001 μF,50V	CZ57~61	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CR11~14	VCKYMN1HB391K	J	AA	390 pF,50V	CZ62	VCEAZA1CW226M	J	AC	22 μF,16V,Electrolytic
CR15~17	VCEAZA1HW475M	J	AB	4.7 μF,50V,Electrolytic	CZ63	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
CR19,20	VCKYMN1HB331K	J	AA	330 pF,50V	CZ64	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CR21,22	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic	CZ65	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
CR23,24	VCKYMN1HB101K	J	AA	100 pF,50V	CZ66	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CR25,26	VCCSMN1HL470J	J	AA	47 pF,50V	CZ67	VCEAZA1CW226M	J	AC	22 μF,16V,Electrolytic
CR27,28	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic	CZ69,70	VCKYMN1HB101K	J	AA	100 pF,50V
CR29,30	VCTYMN1EF223Z	J	AA	0.022 μF,25V	CZ71	VCEAZA1HW105M	J	AB	1 μF,50V,Electrolytic
CR31,32	VCKYMN1HB331K	J	AA	330 pF,50V					
CR33,34	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic					
CR35,36	VCKYMN1HB101K	J	AA	100 pF,50V					
CR37,38	VCCSMN1HL470J	J	AA	47 pF,50V					
CR39,40	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic					
CR41,42	VCTYMN1EF223Z	J	AA	0.022 μF,25V					
CR43,44	VCKYMN1HB331K	J	AA	330 pF,50V					
CR45	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic					
CR46	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic					
CR47	VCKYMN1HB102K	J	AA	0.001 μF,50V					
CR48	VCKYMN1HB101K	J	AA	100 pF,50V					
CR49,50	VCCSMN1HL470J	J	AA	47 pF,50V					
CR51	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic					
CR52	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic					
CR53,54	VCTYMN1EF223Z	J	AA	0.022 μF,25V					
CR65,66	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic					
CV11~14	VCEAZA1HW225M	J	AB	2.2 μF,50V,Electrolytic					
CV15,16	VCKYPA1HB471K	J	AA	470 pF,50V					
CV17,18	VCCSPA1HL470J	J	AA	47 pF,50V					
CV19,20	VCEAZA1HW107M	J	AC	100 μF,50V,Electrolytic					
CV21,22	VCCSPA1HL150J	J	AA	15 pF,50V					
CV23,24	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic					
CV25,26	VCKYPA1HF223Z	J	AB	0.022 μF,50V					
CV27	VCEAZA0JW108M	J	AC	1000 μF,6.3V,Electrolytic					
CV28	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic					

RESISTORS

	VRD-MN2BD000C	J	AA	0 ohm,Jumper,ø1.4×3.5mm,Ivory
	VRS-TQ2BB000J	J	AA	0 ohm,Jumper,1.55×3.1mm,Green
	VRS-TV2AB000J	J	AA	0 ohm,Jumper,1.25×2mm,Green
R1	VRD-MN2BD100J	J	AA	10 ohm,1/8W
R2	VRD-MN2BD102J	J	AA	1 kohm,1/8W
R8	VRD-MN2BD153J	J	AA	15 kohms,1/8W
R9	VRD-MN2BD104J	J	AA	100 kohm,1/8W
R10	VRD-MN2BD222J	J	AA	2.2 kohms,1/8W
R11	VRD-ST2CD682J	J	AA	6.8 kohms,1/6W
R12	VRD-MN2BD101J	J	AA	100 ohm,1/8W
R13	VRD-MN2BD102J	J	AA	1 kohm,1/8W
R14	VRD-MN2BD273J	J	AA	27 kohms,1/8W
R15	VRD-MN2BD123J	J	AA	12 kohms,1/8W
R16	VRD-MN2BD332J	J	AA	3.3 kohms,1/8W
R17	VRD-MN2BD333J	J	AA	33 kohms,1/8W
R18	VRD-MN2BD153J	J	AA	15 kohms,1/8W
R19,20	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R21,22	VRD-MN2BD223J	J	AA	22 kohms,1/8W
R23	VRD-MN2BD103J	J	AA	10 kohm,1/8W
R24	VRD-MN2BD473J	J	AA	47 kohms,1/8W
R25	VRD-MN2BD152J	J	AA	1.5 kohms,1/8W

CD-C482

NO.	PART CODE	★ PRICE RANK	DESCRIPTION
R26	VRD-MN2BD823J	J AA	82 kohms,1/8W
R27	VRD-MN2BD393J	J AA	39 kohms,1/8W
R28	VRD-MN2BD103J	J AA	10 kohm,1/8W
R29	VRD-MN2BD563J	J AA	56 kohms,1/8W
R30	VRD-MN2BD682J	J AA	6.8 kohms,1/8W
R31	VRD-MN2BD122J	J AA	1.2 kohms,1/8W
R32	VRD-MN2BD103J	J AA	10 kohm,1/8W
R33	VRD-MN2BD122J	J AA	1.2 kohms,1/8W
R34	VRD-MN2BD223J	J AA	22 kohms,1/8W
R35,36	VRD-MN2BD224J	J AA	220 kohms,1/8W
R37	VRD-ST2CD823J	J AA	82 kohms,1/6W
R38	VRD-MN2BD471J	J AA	470 ohms,1/8W
R39	VRD-MN2BD102J	J AA	1 kohm,1/8W
R40	VRD-MN2BD562J	J AA	5.6 kohms,1/8W
R41,42	VRD-MN2BD473J	J AA	47 kohms,1/8W
R43	VRD-MN2BD563J	J AA	56 kohms,1/8W
R44	VRD-MN2BD333J	J AA	33 kohms,1/8W
R45	VRD-MN2BD472J	J AA	4.7 kohms,1/8W
R46	VRD-MN2BD561J	J AA	560 ohms,1/8W
R47,48	VRD-MN2BD103J	J AA	10 kohm,1/8W
R50	VRD-MN2BD681J	J AA	680 ohms,1/8W
R51	VRD-ST2CD335J	J AA	3.3 Mohms,1/6W
R52	VRD-MN2BD273J	J AA	27 kohms,1/8W
R53	VRD-MN2BD122J	J AA	1.2 kohms,1/8W
R54	VRD-ST2CD331J	J AA	330 ohms,1/6W
R55	VRD-MN2BD151J	J AA	150 ohms,1/8W
R57	VRD-MN2BD102J	J AA	1 kohm,1/8W
R58,59	VRD-ST2CD102J	J AA	1 kohm,1/6W
R60-62	VRD-MN2BD102J	J AA	1 kohm,1/8W
R63	VRD-ST2CD102J	J AA	1 kohm,1/6W
R64	VRD-MN2BD220J	J AA	22 ohms,1/8W
R66	VRD-MN2BD331J	J AA	330 ohms,1/8W
R80	VRD-ST2CD682J	J AA	6.8 kohms,1/6W
R81	VRD-MN2BD392J	J AA	3.9 kohms,1/8W
R82	VRD-ST2CD682J	J AA	6.8 kohms,1/6W
R83	VRD-ST2EE3R9J	J AA	3.9 ohms,1/4W
R85	VRD-RT2HD560J	J AA	56 ohms,1/2W
R86	VRD-MN2BD222J	J AA	2.2 kohms,1/8W
R87	VRD-MN2BD103J	J AA	10 kohm,1/8W
R88-90	VRD-ST2CD102J	J AA	1 kohm,1/6W
R93	VRD-MN2BD221J	J AA	220 ohms,1/8W
R301	VRD-MN2BD333J	J AA	33 kohms,1/8W
R302	VRD-ST2CD220J	J AA	22 ohms,1/6W
R303	VRD-MN2BD104J	J AA	100 kohm,1/8W
R306	VRD-MN2BD100J	J AA	10 ohm,1/8W
R309	VRD-ST2CD470J	J AA	47 ohms,1/6W
R311	VRD-MN2BD473J	J AA	47 kohms,1/8W
R312	VRD-MN2BD681J	J AA	680 ohms,1/8W
R314	VRD-MN2BD103J	J AA	10 kohm,1/8W
R316	VRD-MN2BD472J	J AA	4.7 kohms,1/8W
R317	VRD-ST2EE821J	J AA	820 ohms,1/4W
R319	VRD-MN2BD104J	J AA	100 kohm,1/8W
R320	VRD-ST2CD472J	J AA	4.7 kohms,1/6W
R323	VRD-MN2BD683J	J AA	68 kohms,1/8W
R324	VRD-MN2BD104J	J AA	100 kohm,1/8W
R340	VRD-ST2CD473J	J AA	47 kohms,1/6W
R347	VRD-MN2BD392J	J AA	3.9 kohms,1/8W
R348	VRD-MN2BD333J	J AA	33 kohms,1/8W
R349	VRD-MN2BD152J	J AA	1.5 kohms,1/8W
R350	VRD-ST2CD473J	J AA	47 kohms,1/6W
R351	VRD-MN2BD103J	J AA	10 kohm,1/8W
R352	VRD-MN2BD153J	J AA	15 kohms,1/8W
R356	VRD-MN2BD103J	J AA	10 kohm,1/8W
R357,358	VRD-ST2CD332J	J AA	3.3 kohms,1/6W
R359,360	VRD-ST2CD272J	J AA	2.7 kohms,1/6W
R361	VRD-MN2BD103J	J AA	10 kohm,1/8W
R362	VRD-ST2EE471J	J AA	470 ohms,1/4W
R363	VRD-MN2BD332J	J AA	3.3 kohms,1/8W
R364	VRD-MN2BD473J	J AA	47 kohms,1/8W
R365	VRD-RT2HD151J	J AA	150 ohms,1/2W
R369	VRD-MN2BD472J	J AA	4.7 kohms,1/8W
R371-374	VRD-MN2BD102J	J AA	1 kohm,1/8W
R375	VRD-ST2CD122J	J AA	1.2 kohms,1/6W
R376	VRD-MN2BD102J	J AA	1 kohm,1/8W
R379	VRD-MN2BD222J	J AA	2.2 kohms,1/8W
R380	VRD-ST2CD152J	J AA	1.5 kohms,1/6W
R381	VRD-ST2CD103J	J AA	10 kohm,1/6W
R382-384	VRD-MN2BD562J	J AA	5.6 kohms,1/8W
R901	VRD-VV3LA151J	J AC	150 ohms,3W
R902	VRD-ST2CD102J	J AA	1 kohm,1/6W
R903	VRD-ST2CD470J	J AA	47 ohms,1/6W
R904	VRD-ST2EE152J	J AA	1.5 kohms,1/4W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
R906	VRD-ST2EE101J	J AA	100 ohm,1/4W
R907	VRD-ST2EE561J	J AA	560 ohms,1/4W
R908	VRD-ST2CD333J	J AA	33 kohms,1/6W
R909	VRD-ST2CD102J	J AA	1 kohm,1/6W
R910	VRD-ST2CD151J	J AA	150 ohms,1/6W
R911	VRD-ST2EE561J	J AA	560 ohms,1/4W
R912	VRD-ST2CD470J	J AA	47 ohms,1/6W
R913	VRD-ST2EE561J	J AA	560 ohms,1/4W
R914	VRD-ST2CD470J	J AA	47 ohms,1/6W
R917	VRD-ST2EE472J	J AA	4.7 kohms,1/4W
R918	VRD-ST2CD101J	J AA	100 ohm,1/6W
R919,920	VRD-RT2HD3R9J	J AA	3.9 ohms,1/2W
R951,952	VRD-ST2EE1R0J	J AA	1 ohm,1/4W
R953,954	VRD-ST2EE221J	J AA	220 ohms,1/4W
R955	VRD-ST2CD123J	J AA	12 kohms,1/6W
R956	VRD-ST2CD101J	J AA	100 ohm,1/6W
R957	VRD-ST2CD222J	J AA	2.2 kohms,1/6W
△ R991	RR-HZ0001AWZZ	J AE	4.7 Mohms,1/2W
RA01-06	VRS-TQ2BB220J	J AA	22 ohms,1/8W
RA07,08	VRS-TV2AB103J	J AA	10 kohm,1/10W
RA09,10	VRS-TV2AB331J	J AA	330 ohms,1/10W
RA11,12	VRS-TV2AB473J	J AA	47 kohms,1/10W
RA13-22	VRS-TV2AB103J	J AA	10 kohm,1/10W
RA23,24	VRS-TV2AB331J	J AA	330 ohms,1/10W
RA25,26	VRS-TV2AB103J	J AA	10 kohm,1/10W
RA27,28	VRS-TQ2BB151J	J AA	150 ohms,1/8W
RA29	VRS-TV2AB473J	J AA	47 kohms,1/10W
RA30	VRS-TV2AB222J	J AA	2.2 kohms,1/10W
RA32	VRS-TV2AB473J	J AA	47 kohms,1/10W
RA33	VRS-TV2AB222J	J AA	2.2 kohms,1/10W
RA34-37	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA39,40	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA41	VRS-TV2AB103J	J AA	10 kohm,1/10W
RA42	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA43	VRS-TV2AB103J	J AA	10 kohm,1/10W
RA44	VRS-TV2AB271J	J AA	270 ohms,1/10W
RA48,49	VRS-TV2AB271J	J AA	270 ohms,1/10W
RA50	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA51	VRS-TV2AB271J	J AA	270 ohms,1/10W
RA52,53	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA54-57	VRS-TV2AB271J	J AA	270 ohms,1/10W
RA59	VRS-TV2AB105J	J AA	1 Mohm,1/10W
RA60	VRS-TV2AB103J	J AA	10 kohm,1/10W
RA61,62	VRS-TV2AB273J	J AA	27 kohms,1/10W
RA63,64	VRS-TV2AB221J	J AA	220 ohms,1/10W
RA65,66	VRS-TV2AB273J	J AA	27 kohms,1/10W
RA67,68	VRS-TV2AB221J	J AA	220 ohms,1/10W
RA71,72	VRS-TV2AB273J	J AA	27 kohms,1/10W
RA73,74	VRS-TV2AB221J	J AA	220 ohms,1/10W
RA75	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA76	VRS-TV2AB104J	J AA	100 kohm,1/10W
RA77	VRS-TV2AB272J	J AA	2.7 kohms,1/10W
RA78	VRS-TV2AB183J	J AA	18 kohms,1/10W
RA79	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA80	VRS-TV2AB104J	J AA	100 kohm,1/10W
RA82,83	VRS-TV2AB104J	J AA	100 kohm,1/10W
RA85	VRS-TV2AB332J	J AA	3.3 kohms,1/10W
RA87-90	VRS-TV2AB223J	J AA	22 kohms,1/10W
RA91,92	VRS-TV2AB473J	J AA	47 kohms,1/10W
RA93-96	VRS-TQ2BB681J	J AA	680 ohms,1/8W
RB01,02	VRS-TV2AB223J	J AA	22 kohms,1/10W
RB03,04	VRS-TV2AB273J	J AA	27 kohms,1/10W
RB05,06	VRS-TV2AB101J	J AA	100 ohm,1/10W
RB07,08	VRS-TV2AB104J	J AA	100 kohm,1/10W
RB09	VRD-ST2CD561J	J AA	560 ohms,1/6W
RB11,12	VRS-TQ2BB391J	J AA	390 ohms,1/8W
RD01-06	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD07	VRD-ST2CD561J	J AA	560 ohms,1/6W
RD08	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD09	VRD-ST2CD561J	J AA	560 ohms,1/6W
RD10	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD11	VRD-ST2CD561J	J AA	560 ohms,1/6W
RD12	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD13	VRD-ST2CD561J	J AA	560 ohms,1/6W
RD14-17	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD19	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD21,22	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD26-28	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD29	VRD-ST2CD103J	J AA	10 kohm,1/6W
RD31-33	VRD-ST2CD102J	J AA	1 kohm,1/6W
RD34	VRD-ST2CD821J	J AA	820 ohms,1/6W
RD35-45	VRD-ST2CD102J	J AA	1 kohm,1/6W

NO.	PART CODE	★	PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
RD48,49	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RF77	VRD-MN2BD223J	J	AA	22 kohms,1/8W
RD50	VRD-ST2CD821J	J	AA	820 ohms,1/6W	RF78	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RD51	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RF79,80	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RD52	VRD-ST2CD561J	J	AA	560 ohms,1/6W	RF81	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RD53	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RF82	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RD54	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RF83	VRD-MN2BD103J	J	AA	10 kohm,1/8W
RD55	VRD-ST2CD821J	J	AA	820 ohms,1/6W	RF84~86	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RD57	VRD-ST2EE390J	J	AA	39 ohms,1/4W	RF87,88	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RD58,59	VRD-ST2CD104J	J	AA	100 kohm,1/6W	RF91	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RD60,61	VRD-ST2CD103J	J	AA	10 kohm,1/6W	RF92	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RD64,65	VRD-ST2CD103J	J	AA	10 kohm,1/6W	RF93,94	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RD66	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RF95	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RD67	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RF96,97	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RD70~72	VRD-ST2CD821J	J	AA	820 ohms,1/6W	RF98,99	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RE01	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RG04~08	VRD-MN2BD103J	J	AA	10 kohm,1/8W
RE02	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RG11	VRD-ST2CD103J	J	AA	10 kohm,1/6W
RE03	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RG15	VRD-ST2CD103J	J	AA	10 kohm,1/6W
RE04	VRD-ST2CD182J	J	AA	1.8 kohms,1/6W	RG16	VRD-ST2CD473J	J	AA	47 kohms,1/6W
RE11	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RG17	VRD-ST2CD103J	J	AA	10 kohm,1/6W
RE12	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RG19	VRD-ST2CD473J	J	AA	47 kohms,1/6W
RE13	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RG20~22	VRD-ST2CD103J	J	AA	10 kohm,1/6W
RE14	VRD-ST2CD182J	J	AA	1.8 kohms,1/6W	RG23,24	VRD-MN2BD103J	J	AA	10 kohm,1/8W
RE15	VRD-ST2CD222J	J	AA	2.2 kohms,1/6W	RG25	VRD-ST2CD472J	J	AA	4.7 kohms,1/6W
RE16	VRD-ST2CD392J	J	AA	3.9 kohms,1/6W	RG26	VRD-MN2BD103J	J	AA	10 kohm,1/8W
RE21	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RG29,30	VRD-MN2BD151J	J	AA	150 ohms,1/8W
RE22	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RG31	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RE23	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RG32	VRD-MN2BD101J	J	AA	100 ohm,1/8W
RE25,26	VRD-ST2CD392J	J	AA	3.9 kohms,1/6W	RG33,34	VRD-MN2BD103J	J	AA	10 kohm,1/8W
RE27	VRD-ST2CD562J	J	AA	5.6 kohms,1/6W	RG35	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RE28	VRD-ST2CD123J	J	AA	12 kohms,1/6W	RG36	VRD-MN2BD332J	J	AA	3.3 kohms,1/8W
RE29	VRD-ST2CD273J	J	AA	27 kohms,1/6W	RG37	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RE31	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RG38	VRD-ST2CD104J	J	AA	100 kohm,1/6W
RE32	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RG39	VRD-MN2BD820J	J	AA	82 ohms,1/8W
RE33	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RG55,56	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RE34	VRD-ST2CD182J	J	AA	1.8 kohms,1/6W	RG94	VRD-ST2CD103J	J	AA	10 kohm,1/6W
RE35	VRD-ST2CD222J	J	AA	2.2 kohms,1/6W	RG95	VRD-MN2BD474J	J	AA	470 kohms,1/8W
RE36	VRD-ST2CD392J	J	AA	3.9 kohms,1/6W	RG96	VRD-ST2CD103J	J	AA	10 kohm,1/6W
RE37	VRD-ST2CD562J	J	AA	5.6 kohms,1/6W	RH11	VRD-MN2BD154J	J	AA	150 kohms,1/8W
RE38	VRD-ST2CD123J	J	AA	12 kohms,1/6W	RH12	VRD-MN2BD102J	J	AA	1 kohm,1/8W
RE39	VRD-ST2CD273J	J	AA	27 kohms,1/6W	RH13	VRD-MN2BD154J	J	AA	150 kohms,1/8W
RE41	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RH14	VRD-MN2BD564J	J	AA	560 kohms,1/8W
RE42	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH15	VRD-MN2BD333J	J	AA	33 kohms,1/8W
RE43	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RH16	VRD-MN2BD105J	J	AA	1 Mohm,1/8W
RE44	VRD-ST2CD182J	J	AA	1.8 kohms,1/6W	RH17	VRD-MN2BD152J	J	AA	1.5 kohms,1/8W
RE45	VRD-ST2CD222J	J	AA	2.2 kohms,1/6W	RH20	VRD-MN2BD152J	J	AA	1.5 kohms,1/8W
RE51	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W	RH21	VRD-MN2BD564J	J	AA	560 kohms,1/8W
RE52	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH22	VRD-MN2BD333J	J	AA	33 kohms,1/8W
RE53	VRD-ST2CD122J	J	AA	1.2 kohms,1/6W	RH24	VRD-MN2BD474J	J	AA	470 kohms,1/8W
RE54	VRD-ST2CD182J	J	AA	1.8 kohms,1/6W	RH25	VRD-MN2BD152J	J	AA	1.5 kohms,1/8W
RE55	VRD-ST2CD222J	J	AA	2.2 kohms,1/6W	RH26	VRD-MN2BD564J	J	AA	560 kohms,1/8W
RE56	VRD-ST2CD392J	J	AA	3.9 kohms,1/6W	RH27	VRD-MN2BD333J	J	AA	33 kohms,1/8W
RE57	VRD-ST2CD562J	J	AA	5.6 kohms,1/6W	RH29	VRD-MN2BD105J	J	AA	1 Mohm,1/8W
RF01,02	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH30	VRD-MN2BD152J	J	AA	1.5 kohms,1/8W
RF03~05	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH31	VRD-MN2BD564J	J	AA	560 kohms,1/8W
RF06~14	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH32	VRD-MN2BD333J	J	AA	33 kohms,1/8W
RF19~23	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH34	VRD-MN2BD105J	J	AA	1 Mohm,1/8W
RF24~28	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH35	VRD-MN2BD152J	J	AA	1.5 kohms,1/8W
RF29~32	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH36	VRD-MN2BD564J	J	AA	560 kohms,1/8W
RF33~35	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH37	VRD-MN2BD333J	J	AA	33 kohms,1/8W
RF36	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH39	VRD-MN2BD105J	J	AA	1 Mohm,1/8W
RF37,38	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH53	VRS-TV2AB101J	J	AA	100 ohm,1/10W
RF39,40	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH56	VRS-TV2AB222J	J	AA	2.2 kohms,1/10W
RF41,42	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH57,58	VRS-TV2AB473J	J	AA	47 kohms,1/10W
RF43	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH61~64	VRS-TQ2BB151J	J	AA	150 ohms,1/8W
RF44	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH65	VRS-TQ2BB121J	J	AA	120 ohms,1/8W
RF46,47	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH66	VRS-TQ2BB151J	J	AA	150 ohms,1/8W
RF48,49	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RH67	VRS-TQ2BB391J	J	AA	390 ohms,1/8W
RF50,51	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RH68	VRS-TQ2BB471J	J	AA	470 ohms,1/8W
RF52,53	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK01,02	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RF54	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RK03,04	VRD-MN2BD222J	J	AA	2.2 kohms,1/8W
RF55	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK05,06	VRD-MN2BD332J	J	AA	3.3 kohms,1/8W
RF58	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RK07,08	VRD-MN2BD473J	J	AA	47 kohms,1/8W
RF59,60	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK09	VRD-ST2CD472J	J	AA	4.7 kohms,1/6W
RF61	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RK10	VRD-MN2BD472J	J	AA	4.7 kohms,1/8W
RF62	VRD-MN2BD101J	J	AA	100 ohm,1/8W	RK11,12	VRD-ST2CD153J	J	AA	15 kohms,1/6W
RF63	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK13,14	VRD-MN2BD103J	J	AA	10 kohm,1/8W
RF64,65	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RK15	VRD-MN2BD472J	J	AA	4.7 kohms,1/8W
RF66~70	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK17,18	VRD-ST2CD102J	J	AA	1 kohm,1/6W
RF71	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RK19,20	VRD-ST2CD560J	J	AA	56 ohms,1/6W
RF73	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK21,22	VRD-MN2BD104J	J	AA	100 kohm,1/8W
RF74,75	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RK23,24	VRD-MN2BD392J	J	AA	3.9 kohms,1/8W
RF76	VRD-MN2BD102J	J	AA	1 kohm,1/8W	RK25,26	VRD-MN2BD562J	J	AA	5.6 kohms,1/8W

CD-C482

NO.	PART CODE	★ PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
RK29,30	VRD-MN2BD103J	J AA	10 kohm,1/8W	RR49,50	VRD-MN2BD182J	J AA	1.8 kohms,1/8W
RK31,32	VRD-MN2BD333J	J AA	33 kohms,1/8W	RR51,52	VRD-MN2BD104J	J AA	100 kohm,1/8W
RK33	VRD-ST2CD223J	J AA	22 kohms,1/6W	RR53-56	VRD-MN2BD102J	J AA	1 kohm,1/8W
RK34	VRD-MN2BD683J	J AA	68 kohms,1/8W	RR57,58	VRD-MN2BD104J	J AA	100 kohm,1/8W
RK35,36	VRD-MN2BD183J	J AA	18 kohms,1/8W	RR59,60	VRD-MN2BD472J	J AA	4.7 kohms,1/8W
RK37,38	VRD-ST2CD682J	J AA	6.8 kohms,1/6W	RR61,62	VRD-MN2BD102J	J AA	1 kohm,1/8W
RK39,40	VRD-MN2BD561J	J AA	560 ohms,1/8W	RR63,64	VRD-MN2BD183J	J AA	18 kohms,1/8W
RK41,42	VRD-MN2BD820J	J AA	82 ohms,1/8W	RR65,66	VRD-MN2BD182J	J AA	1.8 kohms,1/8W
RK43	VRD-MN2BD103J	J AA	10 kohm,1/8W	RR67,68	VRD-MN2BD104J	J AA	100 kohm,1/8W
RK45-50	VRD-MN2BD103J	J AA	10 kohm,1/8W	RR69	VRD-MN2BD102J	J AA	1 kohm,1/8W
RK52	VRD-MN2BD102J	J AA	1 kohm,1/8W	RR70	VRD-ST2CD102J	J AA	1 kohm,1/6W
RK53	VRD-MN2BD103J	J AA	10 kohm,1/8W	RR83,84	VRD-ST2EE221J	J AA	220 ohms,1/4W
RK54	VRD-ST2CD103J	J AA	10 kohm,1/6W	RR85-88	VRD-ST2EE221J	J AA	220 ohms,1/4W
RK55,56	VRD-MN2BD333J	J AA	33 kohms,1/8W	RV13,14	VRD-ST2CD563J	J AA	56 kohms,1/6W
RK57	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	RV17,18	VRD-ST2CD102J	J AA	1 kohm,1/6W
RK58	VRD-ST2EE471J	J AA	470 ohms,1/4W	RV19,20	VRD-ST2CD271J	J AA	270 ohms,1/6W
RK60,61	VRD-ST2EE271J	J AA	270 ohms,1/4W	RV21,22	VRD-ST2CD563J	J AA	56 kohms,1/6W
RK62	VRD-MN2BD473J	J AA	47 kohms,1/8W	RV23,24	VRD-ST2CD102J	J AA	1 kohm,1/6W
RK63	VRD-MN2BD103J	J AA	10 kohm,1/8W	△ RV25,26	VRG-ST2HC101J	J AB	100 ohm,1/2W,Fusible
RK64	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	RV27,28	VRD-ST2CD103J	J AA	10 kohm,1/6W
RK66	VRD-MN2BD273J	J AA	27 kohms,1/8W	RV29,30	VRS-VV3AAR20J	J AB	0.2 ohms,1W
RK67	VRD-MN2BD473J	J AA	47 kohms,1/8W	RV31,32	VRD-ST2CD102J	J AA	1 kohm,1/6W
RK68	VRD-MN2BD47R7J	J AA	4.7 ohms,1/8W	RV33	VRD-ST2CD103J	J AA	10 kohm,1/6W
RK69	VRD-ST2EE221J	J AA	220 ohms,1/4W	RV34	VRD-RT2HD153J	J	15 kohms,1/2W
RK72,73	VRD-ST2CD563J	J AA	56 kohms,1/6W	RV35	VRD-ST2CD222J	J AA	2.2 kohms,1/6W
RK89	VRD-ST2CD102J	J AA	1 kohm,1/6W	RV36	VRD-ST2CD223J	J AA	22 kohms,1/6W
RK90	VRD-MN2BD102J	J AA	1 kohm,1/8W	RV37	VRD-ST2CD473J	J AA	47 kohms,1/6W
RL11	VRD-MN2BD333J	J AA	33 kohms,1/8W	RV38	VRD-ST2CD103J	J AA	10 kohm,1/6W
RL12	VRD-MN2BD222J	J AA	2.2 kohms,1/8W	RV40-42	VRD-ST2CD563J	J AA	56 kohms,1/6W
RL13	VRD-MN2BD682J	J AA	6.8 kohms,1/8W	RV43,44	VRD-RT2HD4R7J	J AA	4.7 ohms,1/2W
RL14	VRD-MN2BD333J	J AA	33 kohms,1/8W	RV51,52	VRD-RT2HD331J	J AA	330 ohms,1/2W
RL15	VRD-MN2BD103J	J AA	10 kohm,1/8W	RV53,54	VRD-ST2CD223J	J AA	22 kohms,1/6W
RL16	VRD-MN2BD222J	J AA	2.2 kohms,1/8W	RV55	VRD-ST2EE470J	J AA	47 ohms,1/4W
RL17	VRD-RT2HD100J	J AA	10 ohm,1/2W	RV56	VRD-ST2CD392J	J AA	3.9 kohms,1/6W
RL18	VRD-MN2BD103J	J AA	10 kohm,1/8W	RV57	VRD-ST2CD472J	J AA	4.7 kohms,1/6W
RL19	VRD-MN2BD222J	J AA	2.2 kohms,1/8W	RV58	VRD-ST2CD103J	J AA	10 kohm,1/6W
RL20	VRD-MN2BD122J	J AA	1.2 kohms,1/8W	RV59	VRD-ST2CD104J	J AA	100 kohm,1/6W
RL24	VRD-MN2BD332J	J AA	3.3 kohms,1/8W	RV60	VRD-ST2CD273J	J AA	27 kohms,1/6W
RP11,12	VRD-MN2BD101J	J AA	100 ohm,1/8W	RV61	VRD-ST2CD473J	J AA	47 kohms,1/6W
RP15,16	VRD-MN2BD104J	J AA	100 kohm,1/8W	RV62	VRD-ST2CD332J	J AA	3.3 kohms,1/6W
RP17,18	VRD-MN2BD822J	J AA	8.2 kohms,1/8W	RV63	VRD-ST2CD124J	J AA	120 kohms,1/6W
RP19,20	VRD-MN2BD222J	J AA	2.2 kohms,1/8W	RV69,70	VRS-VV3AAR20J	J AB	0.2 ohms,1W
RP21,22	VRD-MN2BD101J	J AA	100 ohm,1/8W	RV71	VRD-ST2CD821J	J AA	820 ohms,1/6W
RP25,26	VRD-MN2BD102J	J AA	1 kohm,1/8W	RV72	VRD-ST2CD223J	J AA	22 kohms,1/6W
RP27,28	VRD-MN2BD473J	J AA	47 kohms,1/8W	RV91,92	VRD-ST2EE221J	J AA	220 ohms,1/4W
RP29,30	VRD-MN2BD562J	J AA	5.6 kohms,1/8W	RY11	VRD-ST2CD563J	J AA	56 kohms,1/6W
RP31,32	VRD-ST2EE221J	J AA	220 ohms,1/4W	RY12,13	VRD-ST2CD102J	J AA	1 kohm,1/6W
RP51	VRD-MN2BD102J	J AA	1 kohm,1/8W	RY14	VRD-ST2CD563J	J AA	56 kohms,1/6W
RP53	VRD-MN2BD104J	J AA	100 kohm,1/8W	RY15	VRD-ST2CD271J	J AA	270 ohms,1/6W
RP62	VRD-ST2CD562J	J AA	5.6 kohms,1/6W	RY16	VRS-VV3AAR20J	J AB	0.2 ohms,1W
RP70	VRD-MN2BD562J	J AA	5.6 kohms,1/8W	RY17	VRD-ST2CD102J	J AA	1 kohm,1/6W
RP73	VRD-ST2CD223J	J AA	22 kohms,1/6W	RY18	VRD-ST2CD103J	J AA	10 kohm,1/6W
RP91	VRD-ST2CD101J	J AA	100 ohm,1/6W	RY19	VRD-ST2CD563J	J AA	56 kohms,1/6W
RQ01-08	VRD-MN2BD102J	J AA	1 kohm,1/8W	RY20	VRD-RT2HD4R7J	J AA	4.7 ohms,1/2W
RQ09	VRD-ST2EE331J	J AA	330 ohms,1/4W	RY21	VRD-ST2CD332J	J AA	3.3 kohms,1/6W
RQ10	VRD-ST2EE221J	J AA	220 ohms,1/4W	RY22	VRD-ST2CD473J	J AA	47 kohms,1/6W
RQ11,12	VRD-MN2BD102J	J AA	1 kohm,1/8W	RY23	VRD-ST2CD223J	J AA	22 kohms,1/6W
RQ13-15	VRD-ST2CD102J	J AA	1 kohm,1/6W	RY26	VRS-VV3AAR20J	J AB	0.2 ohms,1W
RQ16-20	VRD-MN2BD104J	J AA	100 kohm,1/8W	RZ01,02	VRD-ST2CD682J	J AA	6.8 kohms,1/6W
RQ21	VRD-ST2CD334J	J AA	330 kohms,1/6W	RZ03,04	VRD-MN2BD682J	J AA	6.8 kohms,1/8W
RR01	VRD-ST2CD101J	J AA	100 ohm,1/6W	RZ05,06	VRD-MN2BD105J	J AA	1 Mohm,1/8W
RR11,12	VRD-MN2BD273J	J AA	27 kohms,1/8W	RZ07,08	VRD-MN2BD104J	J AA	100 kohm,1/8W
RR13,14	VRD-MN2BD182J	J AA	1.8 kohms,1/8W	RZ09,10	VRD-ST2CD101J	J AA	100 ohm,1/6W
RR15,16	VRD-MN2BD273J	J AA	27 kohms,1/8W	RZ11-14	VRD-MN2BD105J	J AA	1 Mohm,1/8W
RR17,18	VRD-MN2BD182J	J AA	1.8 kohms,1/8W	RZ15,16	VRD-MN2BD124J	J AA	120 kohms,1/8W
RR19-21	VRD-ST2CD473J	J AA	47 kohms,1/6W	RZ17,18	VRD-MN2BD681J	J AA	680 ohms,1/8W
RR23	VRD-MN2BD102J	J AA	1 kohm,1/8W	RZ19,20	VRD-MN2BD105J	J AA	1 Mohm,1/8W
RR24	VRD-ST2CD102J	J AA	1 kohm,1/6W	RZ21,22	VRD-MN2BD124J	J AA	120 kohms,1/8W
RR25,26	VRD-MN2BD104J	J AA	100 kohm,1/8W	RZ23,24	VRD-MN2BD681J	J AA	680 ohms,1/8W
RR27,28	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	RZ25,26	VRD-MN2BD105J	J AA	1 Mohm,1/8W
RR29,30	VRD-MN2BD102J	J AA	1 kohm,1/8W	RZ27,28	VRD-MN2BD274J	J AA	270 kohms,1/8W
RR31,32	VRD-MN2BD183J	J AA	18 kohms,1/8W	RZ29,30	VRD-MN2BD681J	J AA	680 ohms,1/8W
RR33,34	VRD-MN2BD182J	J AA	1.8 kohms,1/8W	RZ31,32	VRD-MN2BD105J	J AA	1 Mohm,1/8W
RR35,36	VRD-MN2BD104J	J AA	100 kohm,1/8W	RZ33,34	VRD-MN2BD334J	J AA	330 kohms,1/8W
RR37	VRD-MN2BD102J	J AA	1 kohm,1/8W	RZ35,36	VRD-MN2BD681J	J AA	680 ohms,1/8W
RR38	VRD-ST2CD102J	J AA	1 kohm,1/6W	RZ37,38	VRD-MN2BD105J	J AA	1 Mohm,1/8W
RR39	VRD-MN2BD102J	J AA	1 kohm,1/8W	RZ39,40	VRD-MN2BD334J	J AA	330 kohms,1/8W
RR40	VRD-ST2CD102J	J AA	1 kohm,1/6W	RZ41,42	VRD-MN2BD681J	J AA	680 ohms,1/8W
RR41,42	VRD-MN2BD104J	J AA	100 kohm,1/8W	RZ43-46	VRD-ST2CD102J	J AA	1 kohm,1/6W
RR43,44	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	RZ47	VRD-MN2BD102J	J AA	1 kohm,1/8W
RR45,46	VRD-MN2BD102J	J AA	1 kohm,1/8W	RZ48,49	VRD-ST2CD102J	J AA	1 kohm,1/6W
RR47,48	VRD-MN2BD183J	J AA	18 kohms,1/8W	RZ50	VRD-MN2BD102J	J AA	1 kohm,1/8W

NO.	PART CODE	★	PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
RZ51	VRD-ST2CD102J	J	AA	1 kohm,1/6W	JA11	QJAKZ0011AWZZ	J	AE	Jack,Digital 2 Coaxial
RZ52-54	VRD-MN2BD102J	J	AA	1 kohm,1/8W	JH51	QSOCJ0302AWZZ	J	AE	Jack,Video In/Out
RZ55,56	VRD-MN2BD104J	J	AA	100 kohm,1/8W	JR11,12	QSOCJ0205AWZZ	J	AG	Jack,VIDEO/AUX
RZ57,58	VRD-MN2BD102J	J	AA	1 kohm,1/8W	JR13	QSOCJ0602AWZZ	J	AK	
RZ59,60	VRD-MN2BD272J	J	AA	2.7 kohms,1/8W	JV91	92LJACKH1759A	J	AF	Jack,Headphones
RZ61,62	VRD-MN2BD103J	J	AA	10 kohm,1/8W	M1	92LMTR1858CASY	J	AS	Motor with Chassis [Disc]
RZ63,64	VRD-MN2BD104J	J	AA	100 kohm,1/8W	M2	92LMTR1854BASY	J	AP	Motor with Gear [Slide]
RZ65-68	VRD-ST2EE101J	J	AA	100 ohm,1/4W	M3	RMOTV0373AFZZ	J	AL	Motor with Worm Pulley [T/T Up/Down Loading]
RZ69-74	VRD-MN2BD103J	J	AA	10 kohm,1/8W	M901	92LMTR1810A	J	AK	Motor,Air Cooling Fan
RZ75	VRD-ST2CD100J	J	AA	10 ohm,1/6W	PHM1	—	—	—	Photo Interrupter (Supplies at Tape Mechanism REF.No.250)
RZ76-78	VRD-ST2CD102J	J	AA	1 kohm,1/6W	RLYV11	RRLYD0008AWZZ	J	AN	Relay
RZ79-84	VRD-MN2BD103J	J	AA	10 kohm,1/8W	RLYY11	RRLYD0008AWZZ	J	AN	Relay
RZ85,86	VRD-ST2EE102J	J	AA	1 kohm,1/4W	RM1	VRD-ST2CD272J	J	AA	2.7 kohms,1/6W
RZ87-89	VRD-MN2BD474J	J	AA	470 kohms,1/8W	RXD1	VHLN64H380A-1	J	AK	Remote Sensor,N64H380A
RZ90,91	VRD-MN2BD223J	J	AA	22 kohms,1/8W	SO301	QTANC0301AWZZ	J	AH	Terminal,Antenna
RZ93,94	VRD-ST2CD102J	J	AA	1 kohm,1/6W	SOLM1	—	—	—	Solenoid (Supplies at Tape Mechanism REF.No.250)
RZ95	VRD-ST2CD221J	J	AA	220 ohms,1/6W	SOLM2	—	—	—	Solenoid Ass'y
OTHER CIRCUITRY PARTS					SW1	QSW-P0004AWZZ	J	AE	Switch,Push Type [Open/Close]
BI99/CNS99	QCNWN1238AWZZ	J	AH	Connector Ass'y,3/3Pin	SW2	QSW-F0001AWZZ	J	AD	Switch,Leaf/Skeleton Type [Mecha Up]
BI901/CNS901	QCNWN1225AWZZ	J	AL	Connector Ass'y,11/11Pin	SW3	QSW-P0005AWZZ	J	AD	Switch,Push Type [Disc Number]
BI902/CNS902	QCNWN1226AWZZ	J	AF	Connector Ass'y,4/4Pin	SW4	QSW-F9001AW01	J	AD	Switch,Leaf Type [Pickup In]
BI903/CNS903	QCNWN1227AWZZ	J	AK	Connector Ass'y,7/7Pin	SWD1	QSW-Z0003AWZZ	J	AH	Switch,Rotary Type [Volume Jog]
BI904/CNS904	QCNWN1229AWZZ	J	AK	Connector Ass'y,7/7Pin	SWD2	QSW-Z0003AWZZ	J	AH	Switch,Rotary Type [Jog]
BIA11/CNSA11	QCNWN1237AWZZ	J	AG	Connector Ass'y,2/2Pin	SWD3	92LSWICHT1663T	J	AC	Switch,Key Type [X-BASS]
BIF11/CNSF11	QCNWN1233AWZZ	J	AF	Connector Ass'y,3/6Pin	SWD4	92LSWICHT1663T	J	AC	Switch,Key Type [PRE EQ.]
BIF12/CNSF12	QCNWN1234AWZZ	J	AL	Connector Ass'y,14/14Pin	SWD5	92LSWICHT1663T	J	AC	Switch,Key Type [MENU]
BIF13/CNSF13	QCNWN1235AWZZ	J	AK	Connector Ass'y,11/10Pin	SWD6	92LSWICHT1663T	J	AC	Switch,Key Type [ITEM]
BIM5/CNS10/CNS5	QCNWN1184AWZZ	J	AL	Connector Ass'y,6/10/2Pin	SWD12	92LSWICHT1663T	J	AC	Switch,Key Type [TUNING UP/CUE]
CFWA1	QCNCWZG10AWZZ	J	AC	Socket,10Pin	SWD13	92LSWICHT1663T	J	AC	Switch,Key Type [STOP]
CFWA2	QCNCWZG20AWZZ	J	AC	Socket,20Pin	SWD14	92LSWICHT1663T	J	AC	Switch,Key Type [NORMAL EDIT]
CFWP1	QCNCWZG16AWZZ	J	AD	Socket,16Pin	SWD15	92LSWICHT1663T	J	AC	Switch,Key Type [HIGH EDIT]
CFWU1	QCNCWZG10AWZZ	J	AC	Socket,10Pin	SWD16	92LSWICHT1663T	J	AC	Switch,Key Type [REC/PAUSE]
CFWU2	QCNCWZG20AWZZ	J	AC	Socket,20Pin	SWD17	92LSWICHT1663T	J	AC	Switch,Key Type [F-PLAY]
CFWV11	QCNCWZG16AWZZ	J	AD	Socket,16Pin	SWD23	92LSWICHT1663T	J	AC	Switch,Key Type [QSOUND]
CNP1	92LCONE5P53253	J	AB	Plug,5Pin	SWD26	92LSWICHT1663T	J	AC	Switch,Key Type [VIRTUAL]
CNP2	QCNCM705HAFZZ	J	AB	Plug,8Pin	SWD27	92LSWICHT1663T	J	AC	Switch,Key Type [PHANTOM]
CNP3	92LCONE6P53253	J	AC	Plug,6Pin	SWD28	92LSWICHT1663T	J	AC	Switch,Key Type [NORMAL]
CNP3A	92LCONE6P53254	J	AC	Plug,6Pin	SWD29	92LSWICHT1663T	J	AC	Switch,Key Type [BYPASS]
CNP10	QCNCM705KAFZZ	J	AC	Plug,11Pin	SWD30	92LSWICHT1663T	J	AC	Switch,Key Type [TUNING DOWN/REWIND]
CNP11	QCNCM704CAFZZ	J	AB	Plug,3Pin	SWD31	92LSWICHT1663T	J	AC	Switch,Key Type [CD PAUSE]
CNP12	QCNCM704PAFZZ	J	AC	Plug,14Pin	SWD32	92LSWICHT1663T	J	AC	Switch,Key Type [REVERSE MODE]
CNP303	QCNCM705KAFZZ	J	AC	Plug,10Pin	SWD33	92LSWICHT1663T	J	AC	Switch,Key Type [R-PLAY]
CNPF1	QCNCWZS10AWZZ	J	AK	Socket,10Pin	SWD34	92LSWICHT1663T	J	AC	Switch,Key Type [CLOCK]
CNPK1	QCNCM705CAFZZ	J	AA	Plug,3Pin	SWD35	92LSWICHT1663T	J	AC	Switch,Key Type [MEMORY]
CNPK2	QCNCM705GAFZZ	J	AB	Plug,7Pin	SWD36	92LSWICHT1663T	J	AC	Switch,Key Type [TIMER]
CNPP1	QCNCM698LAFZZ	J	AB	Plug,11Pin	SWD37	92LSWICHT1663T	J	AC	Switch,Key Type [SLEEP]
CNPP2	QCNCM705DAFZZ	J	AB	Plug,4Pin	SWD38	92LSWICHT1663T	J	AC	Switch,Key Type [CLEAR]
CNPR11	QCNCM704CAFZZ	J	AB	Plug,3Pin	SWD39	92LSWICHT1663T	J	AC	Switch,Key Type [DVD/VIDEO 1]
CNPR12	QCNCM704BAFZZ	J	AA	Plug,2Pin	SWD40	92LSWICHT1663T	J	AC	Switch,Key Type [DVD/VIDEO 2]
CNPV11	92LCONPB2BPHK	J	AB	Plug,2Pin	SWD41	92LSWICHT1663T	J	AC	Switch,Key Type [TAPE 1/2]
CNPV12	QCNCM698GAFZZ	J	AB	Plug,7Pin	SWD42	92LSWICHT1663T	J	AC	Switch,Key Type [TUNER/BAND]
CNS1A/B	QCNWN1181AWZZ	J	AK	Connector Ass'y,5/5Pin	SWD43	92LSWICHT1663T	J	AC	Switch,Key Type [CD]
CNS2A/B	QCNWN1182AWZZ	J	AH	Connector Ass'y,8/8Pin	SWD48	92LSWICHT1663T	J	AC	Switch,Key Type [POWER]
CNS3A/B	QCNWN1183AWZZ	J	AG	Connector Ass'y,6/6Pin	SWD50	92LSWICHT1663T	J	AC	Switch,Key Type [DISC 1]
CNS901	QCNWN1228AWZZ	J	AD	Connector Ass'y,2Pin	SWD51	92LSWICHT1663T	J	AC	Switch,Key Type [DISC 2]
CNSD1	QCNCMZ310AWZZ	J	AK	Plug,10Pin	SWD52	92LSWICHT1663T	J	AC	Switch,Key Type [DISC 3]
CNSK1	—	—	—	Connector Ass'y,3Pin (Supplies at Tape Mechanism REF.No.250)	SWD53	92LSWICHT1663T	J	AC	Switch,Key Type [DISC SKIP]
CNSK2	—	—	—	Connector Ass'y,7Pin (Supplies at Tape Mechanism REF.No.250)	SWD54	92LSWICHT1663T	J	AC	Switch,Key Type [OPEN/CLOSE]
△ F990	92LFUSE7502H	J	AC	Fuse,5A	SWM3	—	—	—	Switch,Leaf Type [REC FWD] (Supplies at Tape Mechanism REF.No.250)
△ F997	92LFUSE-T252-D	J	AD	Fuse,2.5A	SWM4	—	—	—	Switch,Leaf Type [REC RVS] (Supplies at Tape Mechanism REF.No.250)
△ F998	92LFUSE-T162-D	J	AD	Fuse,1.6A	SWM5	—	—	—	Switch,Leaf Type [F.A.S] (Supplies at Tape Mechanism REF.No.250)
FLD1	VVKBJ613GK/-1	J	BD	FL Display					
FW901	QCNWN1301AWZZ	J	AC	Plug,3Pin					
FWA1	QCNWN1222AWZZ	J	AE	Flat Cable,10Pin					
FWA2	QCNWN1223AWZZ	J	AF	Flat Cable,20Pin					
FWD1	QCNWN0711AWZZ	J	AG	Flat Wire,6Pin					
FWD2	QCNWN1282AWZZ	J	AF	Flat Wire,3Pin					
FWM1	—	—	—	Flat Wire,13Pin (Supplies at Tape Mechanism REF.No.250)					
FWM2	—	—	—	Flat Wire,4Pin (Supplies at Tape Mechanism REF.No.250)					
FWP1	QCNWN1218AWZZ	J	AF	Flat Cable,16Pin					
FWP2	QCNWN1220AWZZ	J	AF	Flat Cable,13Pin					
FWV91	QCNWN1281AWZZ	J	AG	Flat Wire,5Pin					

CD-C482

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
SWM6	—	—	—	Switch,Leaf Type [CAM] (Supplies at Tape Mechanism REF.No.250)
TMV1 VRM1	QTANA0601AWZZ	J	AH	Speaker Terminal,Front/Center 3.3 kohms (B),Semi-VR (Supplies at Tape Mechanism REF.No.250)
WTL11	QCNCW012NAWZZ	J	AE	Plug,13Pin
WTP1,2	QCNCW623CAFZZ	J	AB	Plug,3Pin
WTV11	92LCONE5P5287	J	AC	Socket,5Pin

CD MECHANISM PARTS

301	NGERH0011AWZZ	J	AC	Gear,Middle
302	NGERH0012AWZZ	J	AC	Gear,Drive
303	MLEVP0010AWZZ	J	AC	Rail,Guide
304	NSFTM0002AWFW	J	AE	Shaft,Guide
305	92LM-CUSN1524A	J	AC	Cushion
△ 306	92LHPC1MASY	J	BG	Pickup Unit Ass'y
306- 1	—	—	—	Pickup Unit (Not Replacement Item)
306- 2	NGERR0043AFZZ	J	AC	Gear,Rack
306- 3	MSPRC0961AFZZ	J	AA	Spring,Rack
701	XBSSD26P06000	J	AA	Screw,ø2.6×6mm
702	XHBSD20P05000	J	AA	Screw,ø2×5mm
703	XBBSD20P03000	J	AA	Screw,ø2×3mm
704	LX-WZ1070AFZZ	J	AA	Washer,ø1.5×ø3.8×0.25mm
M1	92LMTR1858CASY	J	AS	Motor with Chassis [Disc]
M2	92LMTR1854BASY	J	AP	Motor with Gear [Side]
SW4	QSW-F9001AW01	J	AD	Switch,Leaf Type [Pickup In]

CABINET PARTS

201	GCAB-1044AWSA	J	AM	CD Player Base
202	GCAB-1050AWSB	J	AS	Top Cabinet
203	GCOVA1186AWSB	J	AF	Tray Cover Panel,Left
204	GCOVA1187AWSB	J	AF	Tray Cover Panel,Right
205	GCOVA1202AWSA	J	AG	CD Tray Cover
206	GDORF0058AWSA	J	AR	Cassette Holder,Tape 1
207	GDORF0059AWSA	J	AR	Cassette Holder,Tape 2
208	HDECQ0346AWSA	J	AH	Panel,Cassette,Tape 1
209	HDECQ0347AWSA	J	AH	Panel,Cassette,Tape 2
210	HDECQ0312AWSA	J	AK	Panel,Surround
211	HDECQ0375AWSA	J	AK	Panel,FL
212	HDECQ0314AWSA	J	AK	Panel,Operation (A)
213	HDECQ0315AWSA	J	AG	Panel,Operation (B)
214	HDECQ0299AWSA	J	AG	CD Top Panel
215	JKNBZ0492AWSA	J	AH	Knob,Timer/Clock/Sleep/ Memory/Clear
216	JKNBZ0493AWSA	J	AH	Knob,Edit/Set Up
217	JKNBZ0494AWSA	J	AH	Knob,Surround
218	JKNBZ0495AWSA	J	AK	Knob,Power
219	JKNBZ0496AWSA	J	AK	Knob,Function
220	JKNBZ0472AWSB	J	AG	Knob,Disc No.
221	JKNBZ0473AWSA	J	AD	Knob,Open/Close
222	JKNBZ0523AWSA	J	AH	Knob,X-BASS/Demo
223	92LKNOB2831AS1	J	AP	Operation Knob Ass'y (A)
223- 1	—	—	—	Knob,Operation (A) (Not Replacement Item)
223- 2	HDECQ0337AWSA	J	AC	Indicator (A)
223- 3	PFLT-0040AWZZ	J	J	Felt (A)
224	92LKNOB2831BS1	J	AQ	Operation Knob Ass'y (B)
224- 1	—	—	—	Knob,Operation (B) (Not Replacement Item)
224- 2	HDECQ0338AWSA	J	AC	Indicator (B)
224- 3	PFLT-0040AWZZ	J	J	Felt (B)
225A	JKNBZ0499AWSA	J	AL	Knob,Operation (C) (Not Replacement Item)
225B	HDECQ0339AWSA	J	AC	Indicator (C)
225C	HDECQ0340AWSA	J	AC	Indicator (D)
225D	HDECQ0341AWSA	J	AC	Indicator (E)
225E	HDECQ0342AWSA	J	AC	Indicator (F)
226	MLIFP0003AWZZ	J	AE	Damper
227	MSPRD0092AWFJ	J	AB	Spring,Cassette,Tape 1
228	MSPRD0093AWFJ	J	AB	Spring,Cassette,Tape 2
229	92LBADGE1671A	J	AC	Badge,SHARP
230	JKNBK0058AWSA	J	AM	Knob,Volume
231	KNOB2831AASY1	J	AN	Jog Knob Ass'y
231- 1	—	—	—	Knob,JOG (Not Replacement Item)
231- 2	HDECQ0336AWSA	J	AG	Panel,JOG

NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
232	92LCSPR1431C	J	AA	Ring Spring,Volume
233	LANGK0132AWFW	J	AE	Bracket,PWB/Knob
234	LCHSM0071AWFW	J	AW	Main Chassis
235	GITAR0375AWSA	J	AQ	Rear Panel
236	LANGK0125AWFW	J	AK	Bracket,PWB (A)
237	LANGK0126AWFW	J	AF	Bracket,Shield Support
238	LANGK0130AWFW	J	AF	Bracket,AC Power Supply Cord
240	PSLDM3044AWFW	J	AM	Shield (Dolby) [A]
241	PCUSG0022AWZZ	J	AB	Cushion,Leg
△ 242	QACCD0022AWZZ	J	AM	AC Power Supply Cord
243	LANGT0042AWFW	J	AC	Bracket,PWB Support
244	92LCAB2935ASY1	J	J	Front Panel Ass'y
244- 1	—	—	—	Front Panel (Not Replacement Item)
244- 2	PCUSG0022AWZZ	J	AB	Cushion,Leg
245	92LN-BAND1318A	J	AA	Nylon Band,80mm
246	LANGK0129AWFW	J	AF	Bracket,Fan Support
247	NFANP0001AWZZ	J	AD	Rotary Fan
248	92LCSPR1431C	J	AA	Ring Spring,Fan
249	PRDAR0110AWFW	J	AY	Heat Sink,Main
250	92LMECHA2831A	J	BK	Tape Mechanism Ass'y
250- 1(MM1)	92LMTR2512AASY	J	AT	Motor with Pulley [Tape]
250- 2	NBLTH0003AWZZ	J	AC	Belt,Main,Tape 1
250- 3	NBLTH0004AWZZ	J	AC	Belt,Main,Tape 2
250- 4	NBLTK0021AWZZ	J	AB	Belt,Sub
250- 5	NROLY0003AWM1	J	AF	Pinch Roller Foward Ass'y
250- 6	NROLY0004AWM1	J	AF	Pinch Roller Reverse Ass'y
250- 7	92LMRPH1746A	J	AM	Head,Record/Playback
250- 8	RHEDK0002AWM1	J	AQ	Head,Erase [Tape 2]
251	LANGK0127AWFW	J	AG	Bracket,Heat Sink (A)
252	LANGK0128AWFW	J	AG	Bracket,Heat Sink (B)
253	PRDAR0111AWFW	J	AR	Sub Heat Sink
254	GITAS0048AWSA	J	AQ	Side Panel,Left
255	GITAS0049AWSA	J	AQ	Side Panel,Right
256	LHLDK9001AW00	J	AB	Poly Core Tie
257	LANGF0032AWZZ	J	AC	Support,T/T Lock Lever
258	LCHSZ0010AWZZ	J	AM	Chassis>Loading
259	LCHSZ0011AWZZ	J	AG	Chassis,CD Mechanism
260	92LHOLD2037AS1	J	AK	Stabilizer Ass'y
260- 1	—	—	—	Stabilizer (Not Replacement Item)
260- 2	PMAGF0001AWZZ	J	AF	Magnet
260- 3	92LSUPT1749D	J	AA	Support,Magnet
261	LHLDZ1139AWSA	J	AD	Support,Stabilizer
262	LHLDZ1140AWZZ	J	AB	Guide
263	LHLDZ1141AWZZ	J	AB	Support,Pitch
264	LHLDZ1189AWZZ	J	AG	Holder,FL
265	LHLDZ1188AWZZ	J	AC	Holder,LED
266	MLEVP0066AWZZ	J	AE	Lever,Shift
267	MLEVP0067AWZZ	J	AC	Lever,Lock
268	MLEVP0068AWZZ	J	AB	Lever,Change
269	MLEVP0070AWZZ	J	AB	Lever,T/T Lock
270	MSPRC0020AWFJ	J	AB	Spring,T/T Lock Lever
271	MSPRC0024AWFW	J	AB	Spring,Solenoid
272	MSPRD0044AWFJ	J	AB	Spring,Lock Lever
273	NBLTK0029AWZZ	J	AB	Belt,Drive
274	NGERH0064AWZZ	J	AD	Gear,Cam
275	NGERH0065AWZZ	J	AB	Gear,Turntable
276	NGERK0003AWZZ	J	AC	Gear,Drive
277	NGERK0004AWZZ	J	AB	Gear,Bevel
278	NGERK0005AWZZ	J	AB	Gear>Loading
279	NGERW0006AWZZ	J	AC	Gear,Worm Wheel
280	NPLYD0001AWZZ	J	AB	Pulley
281	NROLP0009AWZZ	J	AB	Roller
282	NTNT-0018AWSA	J	AK	Turntable
283	PCUSG0022AWZZ	J	AB	Cushion
284	QFSHD0001AWZZ	J	AB	Holder,Fuse
285	92LLUG1746A	J	AA	Lug Terminal
286	PFLT-0038AWZZ	J	AC	Felt
601	XBBSD20P04000	J	AA	Screw,ø2×4mm
602	XBPSD26P05JS0	J	AA	Screw,ø2.6×5mm
603	XEBSD26P12000	J	AA	Screw,ø2.6×12mm
604	XEBSD30P10000	J	AA	Screw,ø3×10mm
605	XESSD30P10000	J	AA	Screw,ø3×10mm
606	XJBSD30P10000	J	AA	Screw,ø3×10mm
607	XJBSD30P14000	J	AA	Screw,ø3×14mm
608	XJBSF30P08000	J	AA	Screw,ø3×8mm
609	XJBSF30P12000	J	AA	Screw,ø3×12mm
610	XJSSD30P10000	J	AA	Screw,ø3×10mm
611	XHBSD30P06000	J	AA	Screw,ø3×6mm
612	XJBSD30P08000	J	AA	Screw,ø3×8mm

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
613	LX-JZ0022AFFD	J	AA	Screw,ø3×8mm
614	LX-HZ0082AFZZ	J	AA	Screw,ø4×8mm
615	LX-JZ0010AFFD	J	AA	Screw,ø3×10mm
616	XJSSF30P10000	J	AA	Screw,ø3×10mm
617	LX-TZ0019AFZZ	J	AB	Screw,Special
618	LX-EZ0005AWFD	J	AA	Screw,Special
619	LX-JZ0002AWFD	J	AA	Screw,ø3×10mm
620	XEBSD30P12000	J	AA	Screw,ø3×12mm
621	XJBSF30P10000	J	AA	Screw,ø3×10mm
622	LX-EZ0010AWFD	J	AA	Screw,Special
623	XWHJZ62-09510	J	AB	Washer

ACCESSORIES

QANTL0006AWZZ	J	AG	AM Loop Antenna
TINSE0225AWZZ	J	AG	Operation Manual
TINSZ0333AWZZ	J	AC	Quick Guide
92LFANT1746A	J	AD	FM Antenna
92LLABL372C	J	AB	Label,Specifications
92L3191SW49210	J	AH	Speaker Cord,Front Speaker, Sub Woofer
RRMCG0141AWSA	J	AX	Remote Control
92LLID1782A	J	AQ	Battery Lid,Remote Control

P.W.B. ASSEMBLY (Not Replacement Item)

PWB-A	92LPWB2935MANS	J	—	Main
PWB-B	92LPWB2935CDUS	J	—	CD Servo
PWB-C1-4	92LPWB2935DPLS	J	—	Display/Switch/Headphones/Jog (Combined Ass'y)
PWB-D	92LPWB2935PWRS	J	—	Power
PWB-E	92LPWB2935TUNS	J	—	Tuner
PWB-F	92LPWB2935AMPS	J	—	Speaker AMP.
PWB-G	92LPWB2935ACTS	J	—	Dolby
PWB-H	—	—	—	Tape Mechanism (Supplies at Tape Mechanism REF.No.250)
PWB-J	QPWBF0341AWZZ	J	AB	Sensor (PWB Only)
PWB-K	QPWBF0027AWZZ	J	AD	CD Motor (PWB Only)

SPEAKER BOX PARTS SUB WOOFER CP-SW482

900	92L10002W49210	J	BB	Cabinet Ass'y
901	92L20100W49210	J	AW	Net Frame Ass'y
902	92L20300W49210	J	AS	Port Panel
903	92L3141SW49210	J	AL	Speaker Cord Ass'y
905	92L411S84016AB	J	AD	Screw
906	92L44010320200	J	AD	Port Cushion
907	92L6000SW48200	J		Label,Specifications
SP1	VSP0016WBE68A	J	BE	Speaker Woofer

SPEAKER BOX PARTS FRONT SPEAKER CP-C482

900	92L10002C49210	J	BE	Cabinet Ass'y
901	92L200L0C49210	J	BE	Front Panel,Left
901	92L200R0C49210	J	BE	Front Panel,Right
903	92L201L0C49210	J	AY	Net Frame Ass'y,Left
903	92L201R0C49210	J	AY	Net Frame Ass'y,Right
905	92L23036099010	J	AC	Catching Holder
906	92L3141PC49210	J	AM	Speaker Cord Ass'y
908	92L411B840160P	J	AD	Screw
909	92L411B930100P	J	AC	Screw
910	92L44010213500	J	AH	Port Cushion
911	92L44210310100	J	AD	Cushion Wire
912	92L6000PC48200	J	AC	Label,Specifications
SP1,2	VSP0013WB228A	J	BE	Speaker,Woofer
SP3,4	VSP0050TBK28A	J	AT	Speaker,Tweeter
SP5,6	92L303R0300610	J	AQ	Super Tweeter Ass'y

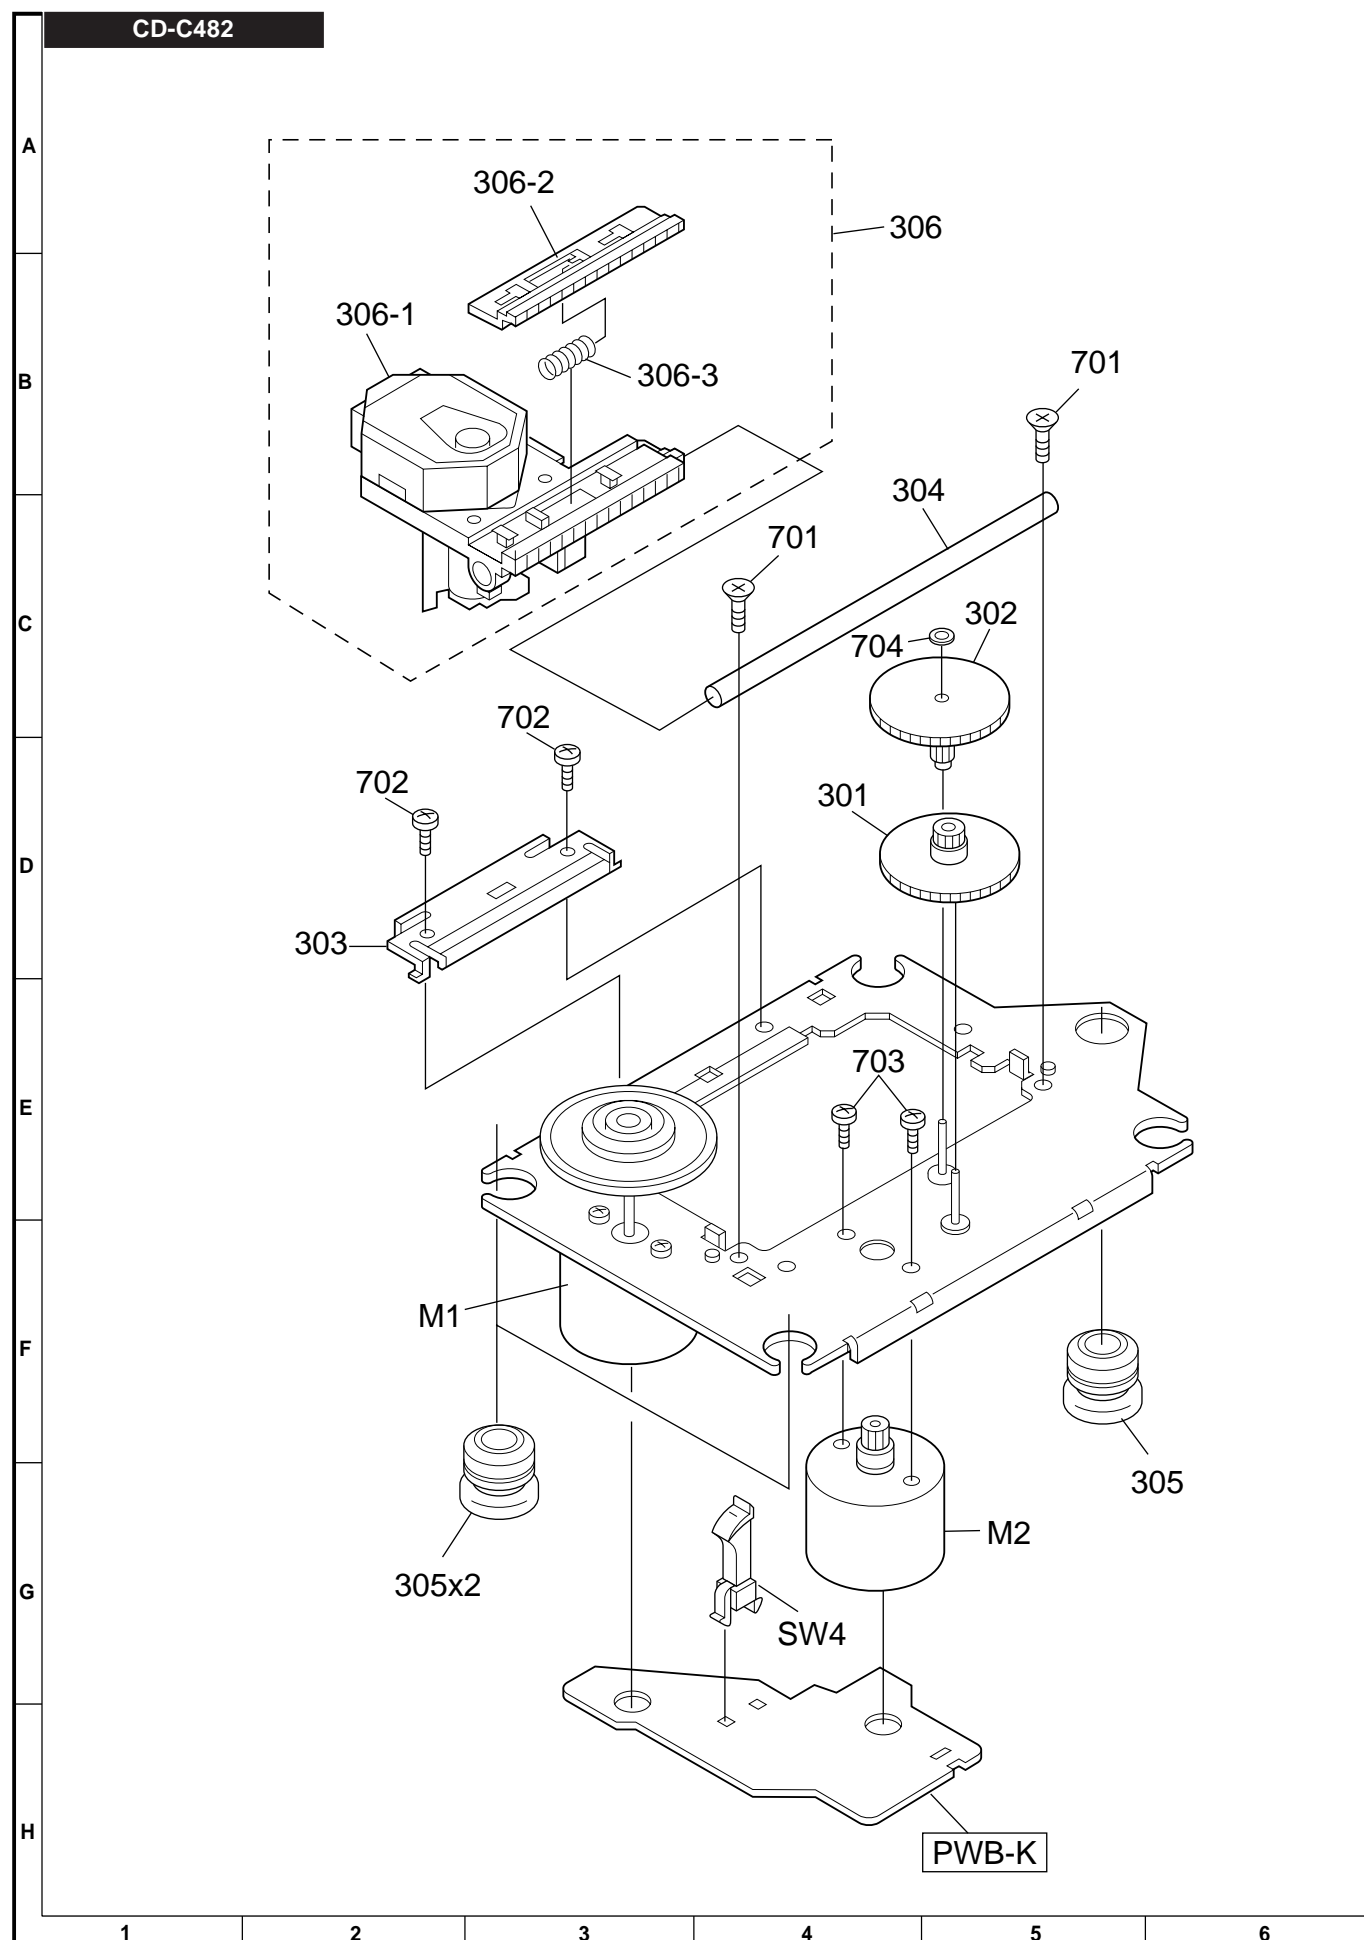


Figure 11 CD MECHANISM EXPLODED VIEW



- 12 -



CP-C482

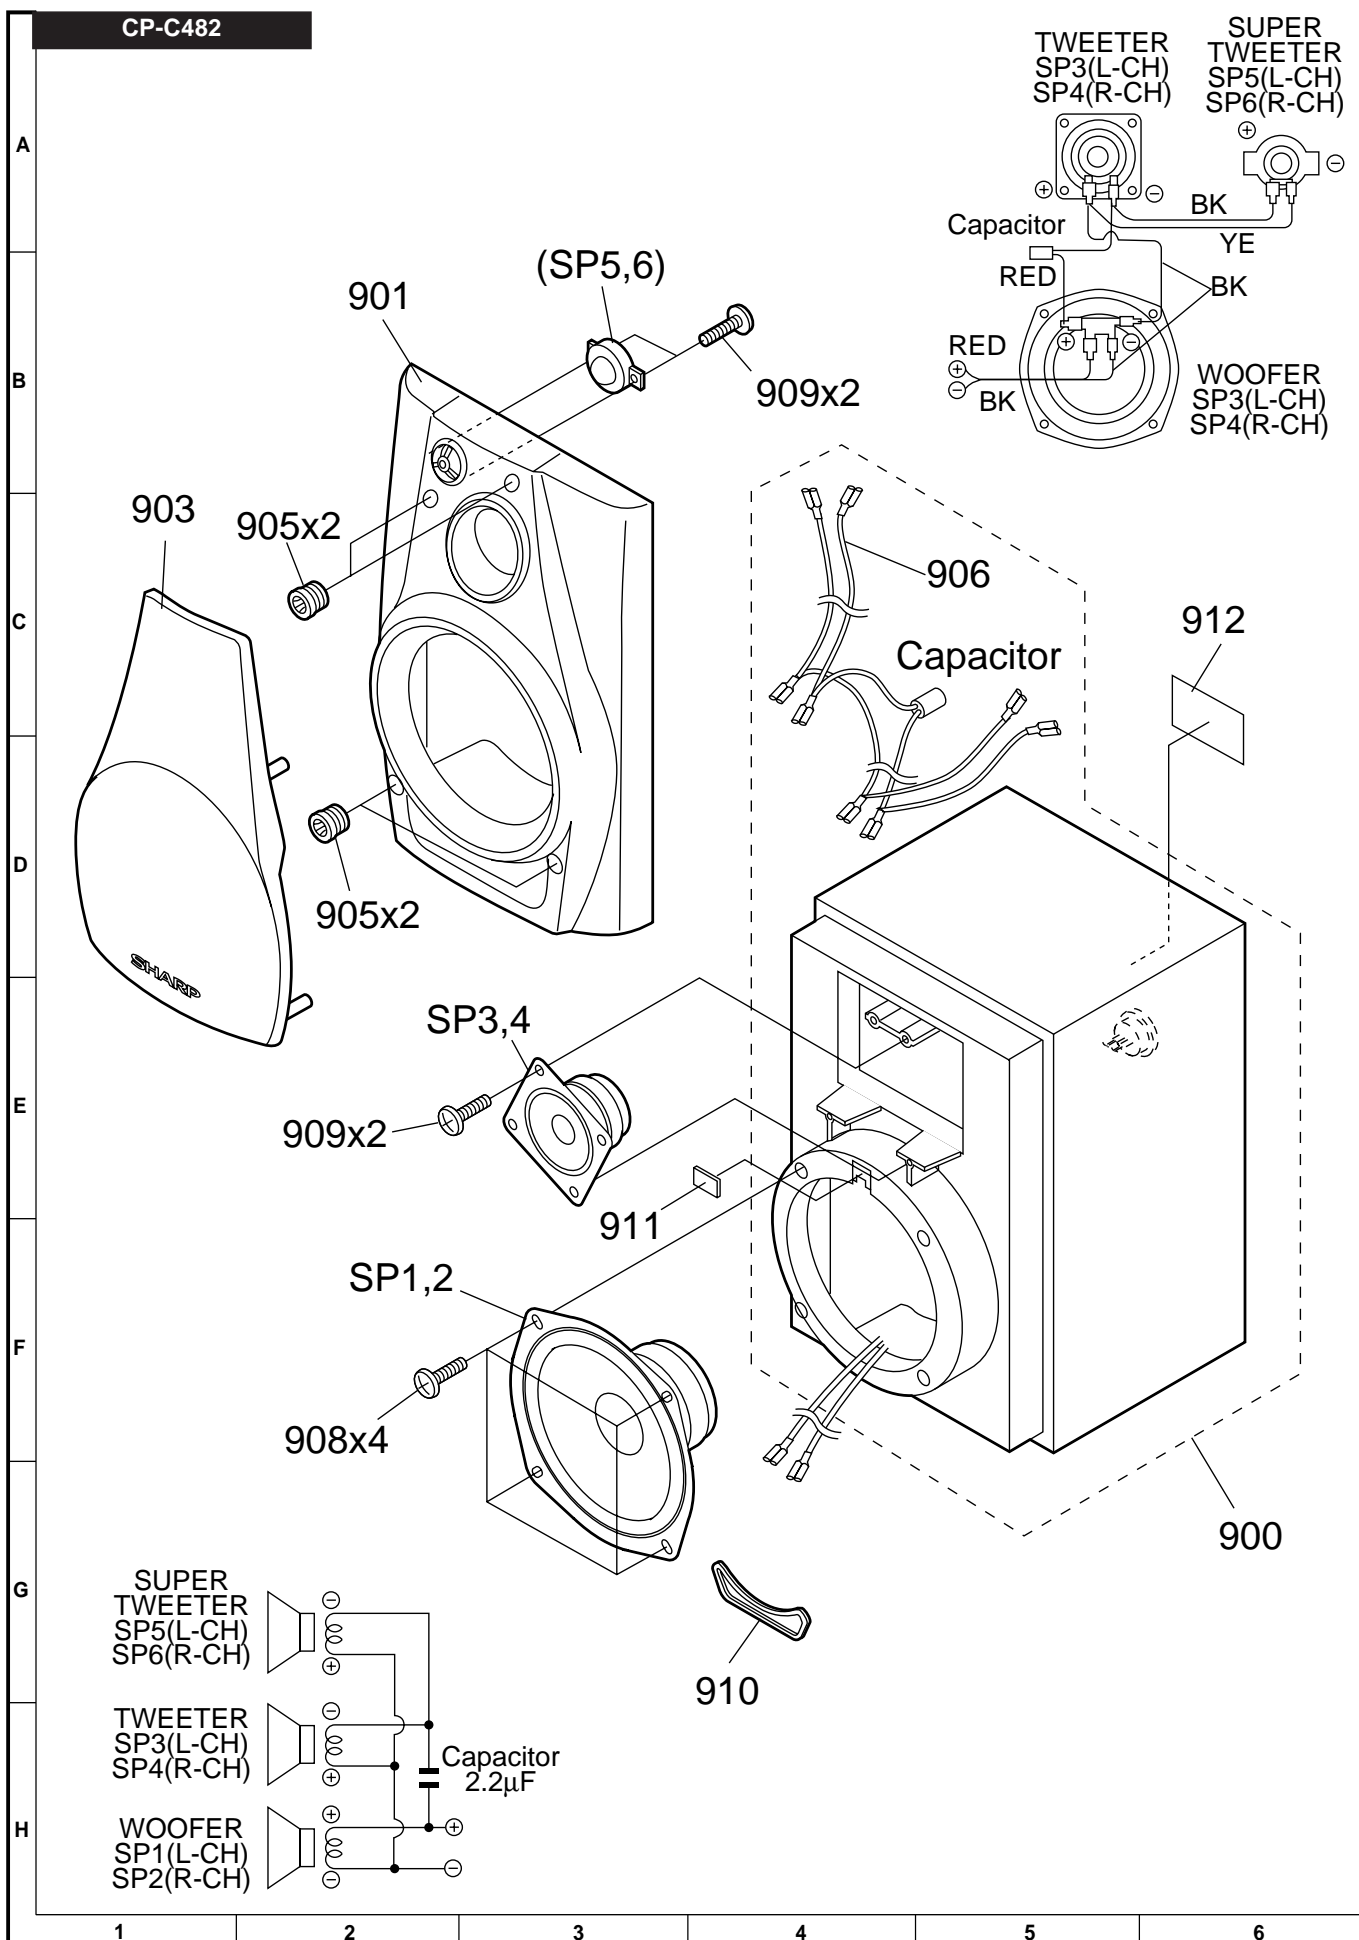


Figure 14 SPEAKER EXPLODED VIEW (1/2)


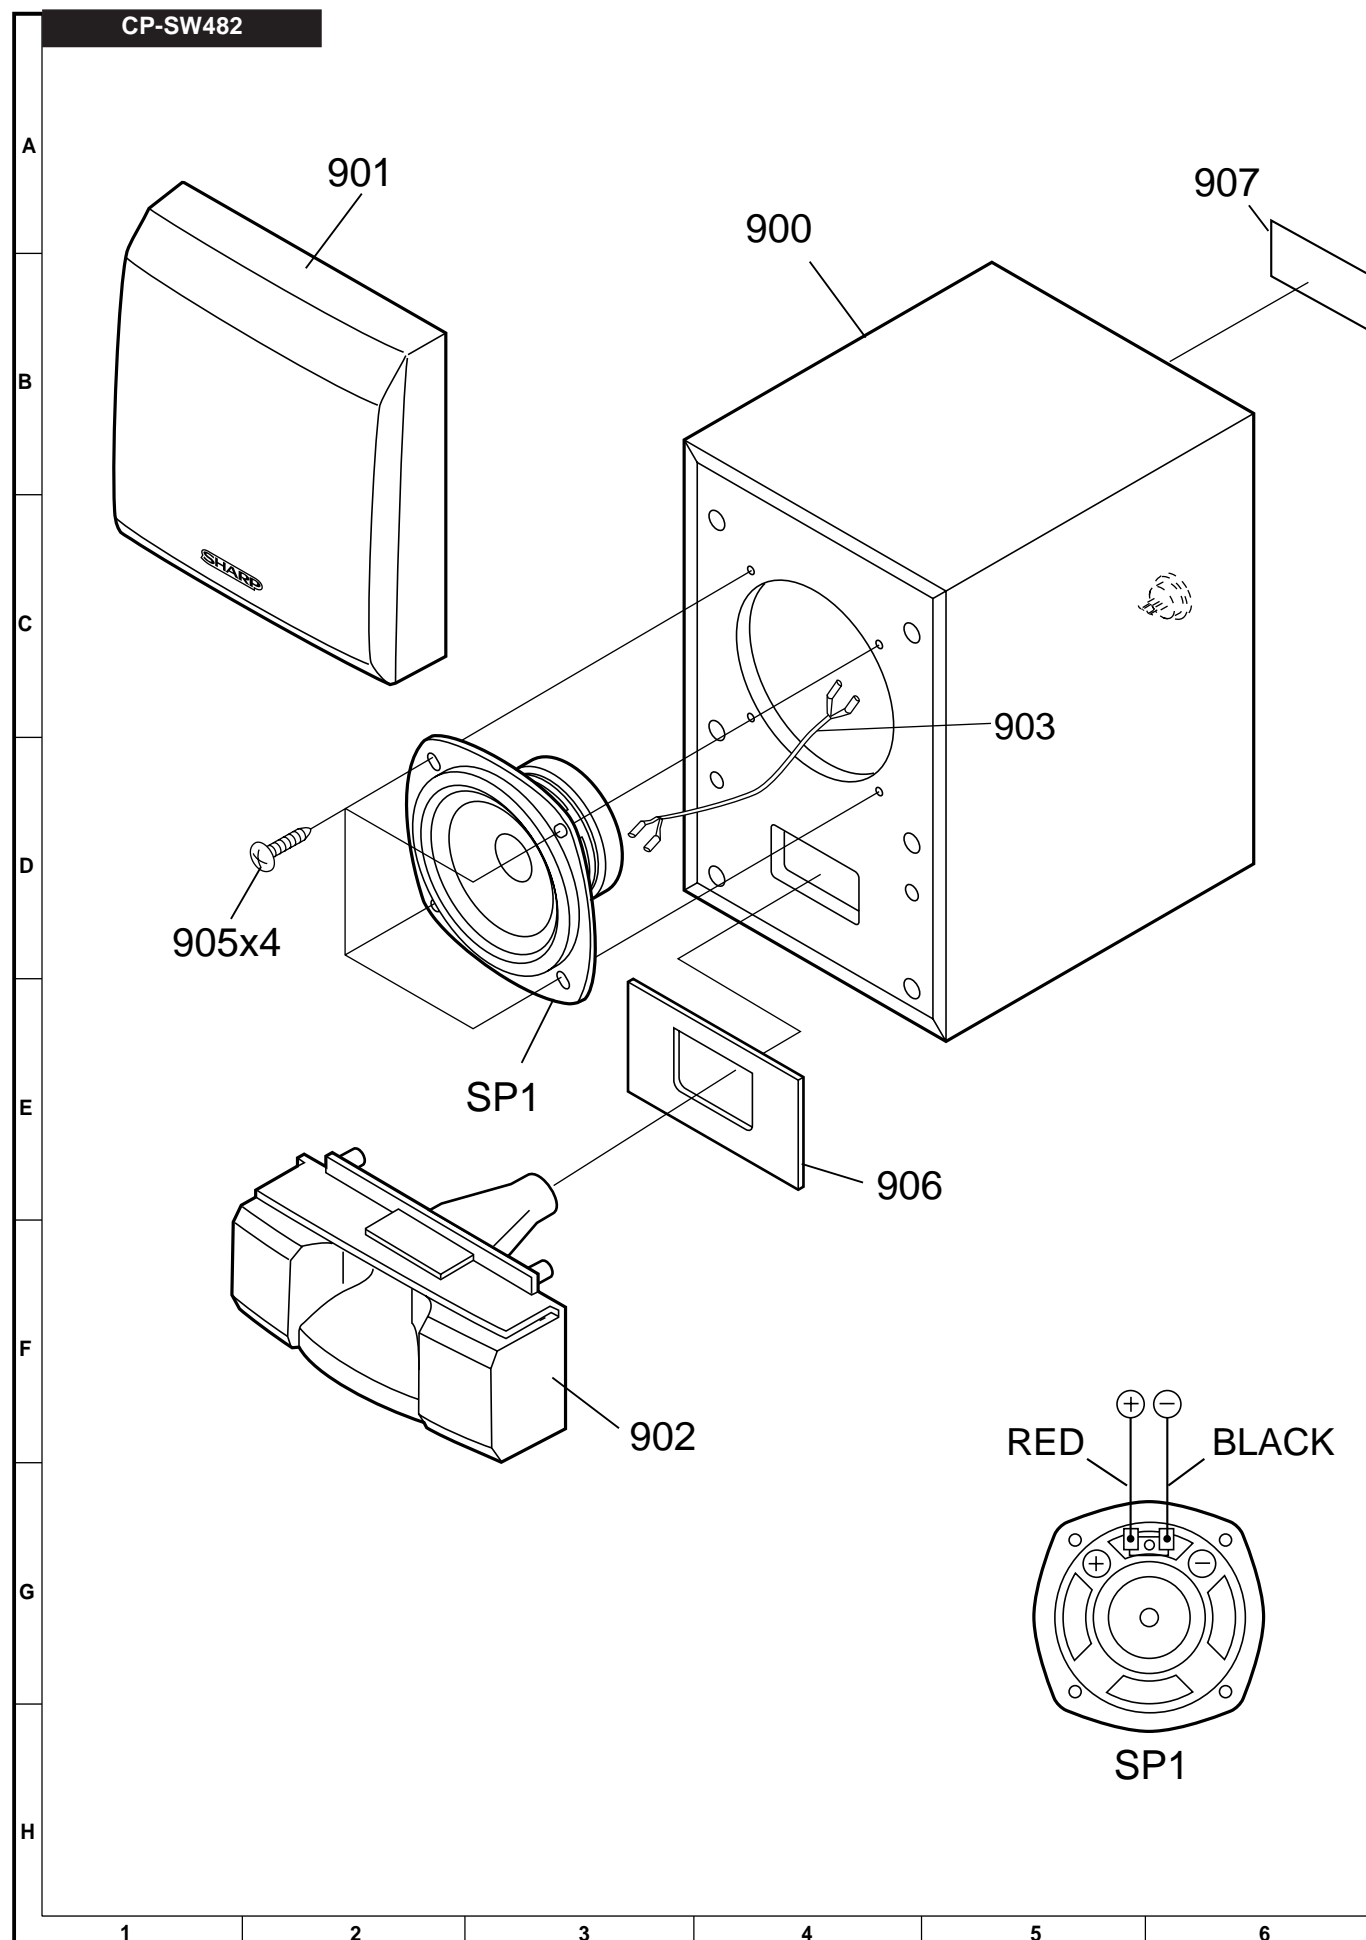


Figure 13 PSEAKER EXPLODED VIEW (2/2)

PACKING OFF THE SET

Setting position of switches and knobs	
Tape Mechanism	STOP


Unit

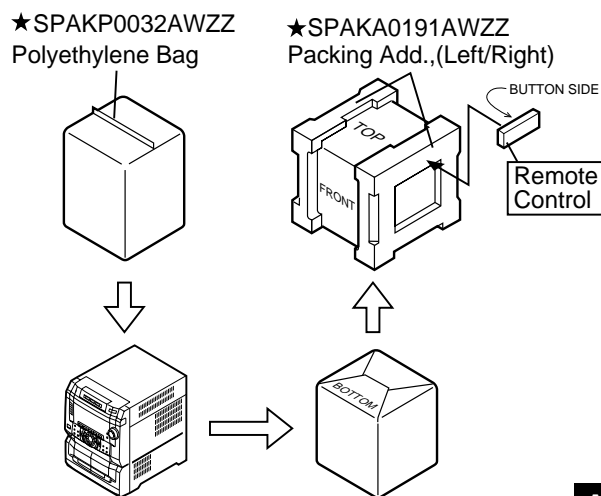

A

Front Speaker(L/R)


CP-C482

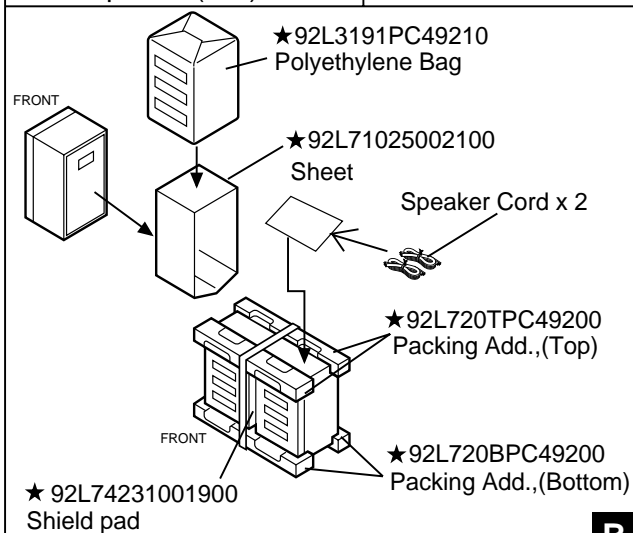


E

Sub Woofer


CP-SW482

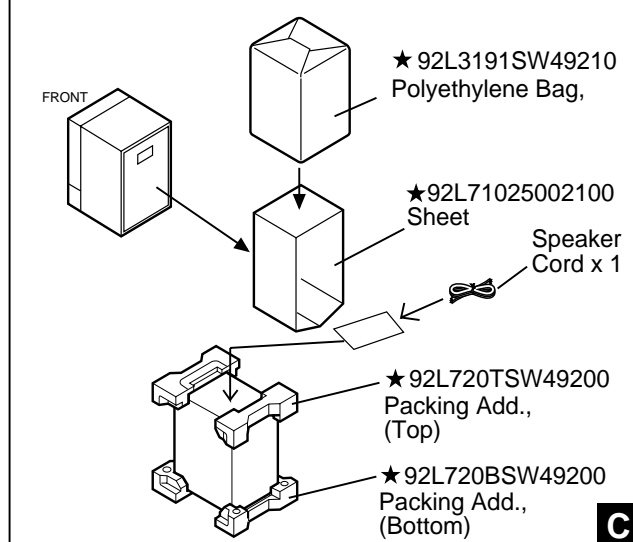

C

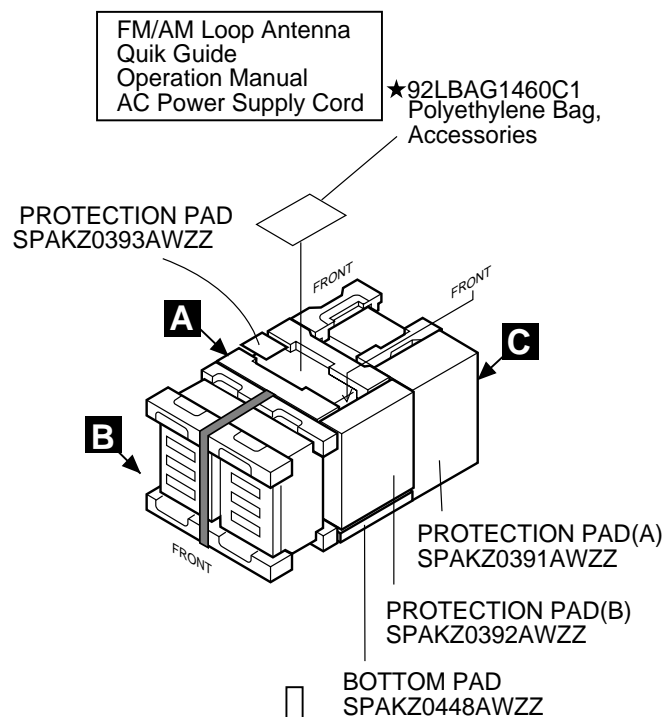

★Not Replacement Item

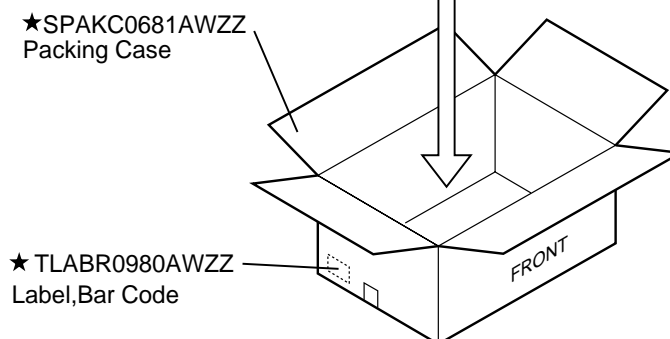

CD-C482

— MEMO —

— MEMO —

SHARP

COPYRIGHT © 1998 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP CORPORATION
Communication Systems Group
Quality & Reliability Control Center
Higashihiroshima, Hiroshima 739-0192, Japan
Printed in Japan

A9807-2273 NS • HA • M

SC • LAG